

## Processes



Stick (SMAW) Welding



MIG (GMAW) Welding



Flux Cored (FCAW) Welding



TIG (GTAW) Welding




Air Carbon Arc (CAC-A)  
Cutting and Gouging

## Description




Dual-Operator Engine Driven Welding  
Generator

# Hobart 300/300

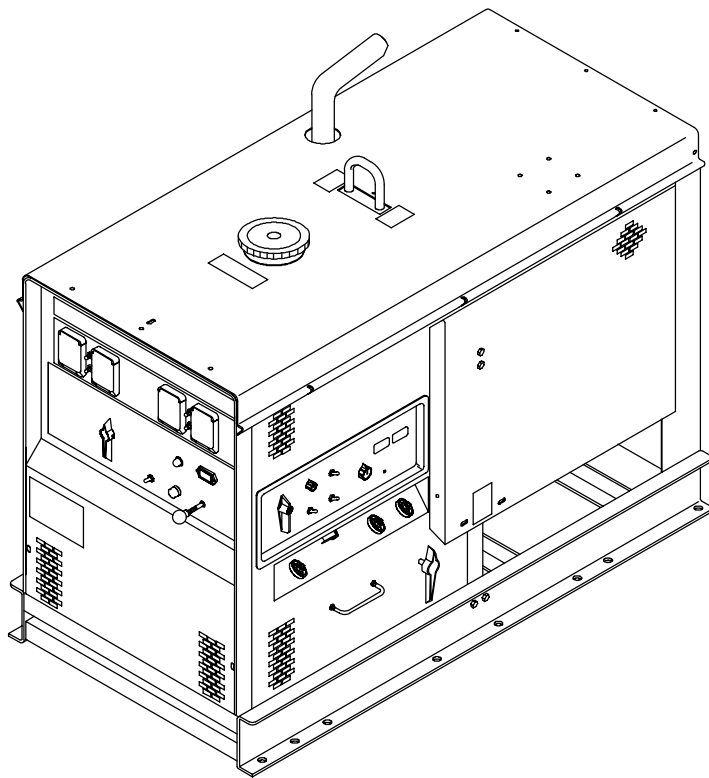

## OWNER'S MANUAL

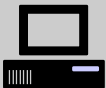


# From Hobart to You

*Thank you and congratulations* on choosing Hobart. Now you can get the job done and get it done right. We know you don't have time to do it any other way.

This Owner's Manual is designed to help you get the most out of your Hobart products. Please take time to read the Safety precautions. They will help you

protect yourself against potential hazards on the worksite. We've made installation and operation quick and easy. With Hobart you can count on years of reliable service with proper maintenance. And if for some reason the unit needs repair, there's a Troubleshooting section that will help you figure out what the problem is. The parts list will then help you to decide which exact part you may need to fix the problem. Warranty and service information for your particular model are also provided.

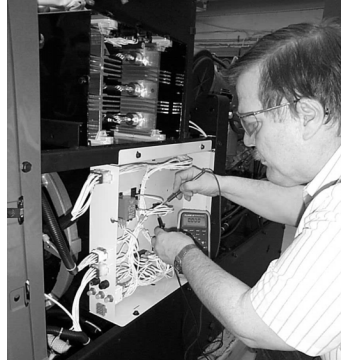

Hobart is registered to the ISO 9001 Quality System Standard.

Hobart Welders manufactures a full line of welders and welding related equipment. For information on other quality Hobart products, contact your local Hobart distributor to receive the latest full line catalog or individual catalog sheets. **To locate your nearest distributor or service agency call 1-877-Hobart1.**



*Hobart offers a Technical Manual which provides more detailed service and parts information for your unit. To obtain a Technical Manual, contact your local distributor. Your distributor can also supply you with Welding Process Manuals such as SMAW, GTAW, GMAW, and GMAW-P.*

**HOBART**<sup>®</sup>  
WELDING PRODUCTS

# TABLE OF CONTENTS

## WARNING

This product, when used for welding or cutting, produces fumes or gases which contain chemicals known to the State of California to cause birth defects and, in some cases, cancer. (California Health & Safety Code Section 25249.5 et seq.)

## WARNING

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

## CALIFORNIA

### Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

The following terms are used interchangeably throughout this manual:

Stick = SMAW  
MIG = GMAW  
TIG = GTAW

<b>SECTION 1 – SAFETY PRECAUTIONS - READ BEFORE USING</b> .....	<b>1</b>
1-1. Symbol Usage .....	1
1-2. Arc Welding Hazards .....	1
1-3. Engine Hazards .....	2
1-4. Additional Symbols For Installation, Operation, And Maintenance .....	3
1-5. Principal Safety Standards .....	4
1-6. EMF Information .....	4
<b>SECTION 1 – CONSIGNES DE SÉCURITÉ – LIRE AVANT UTILISATION</b> .....	<b>5</b>
1-1. Signification des symboles .....	5
1-2. Dangers relatifs au soudage à l'arc .....	5
1-3. Dangers existant en relation avec le moteur .....	6
1-4. Dangers supplémentaires en relation avec l'installation, le fonctionnement et la maintenance .....	7
1-5. Principales normes de sécurité .....	8
1-6. Information sur les champs électromagnétiques .....	8
<b>SECTION 2 – DEFINITIONS</b> .....	<b>9</b>
<b>SECTION 3 – SPECIFICATIONS</b> .....	<b>10</b>
3-1. Description .....	10
3-2. Weld, Power, And Engine Specifications .....	10
3-3. Dimensions, Weights, And Operating Angles .....	10
3-4. Fuel Consumption .....	11
3-5. AC Auxiliary Power .....	11
3-6. Duty Cycle And Overheating .....	12
3-7. Volt-Ampere Curves .....	13
<b>SECTION 4 – INSTALLATION</b> .....	<b>14</b>
4-1. Installing Welding Generator .....	14
4-2. Activating The Dry Charge Battery .....	15
4-3. Connecting The Battery .....	16
4-4. Installing Exhaust Pipe .....	16
4-5. Engine Prestart Checks .....	17
4-6. Safety Information For Connecting To Weld Output Terminals .....	18
4-7. Weld Output Terminals .....	18
4-8. Making Dual Operator CC Weld Connections W/ Separate Work Cables .....	19
4-9. Making Dual Operator Mode CC Weld Connections W/ Common Work Cable .....	20
4-10. Making Dual Operator CV Weld Connections W/ Separate Work Cables .....	21
4-11. Making Dual Operator CV Weld Connections W/ Common Work Cable .....	22
4-12. Making Dual Operator CC And CV Weld Connections W/ Separate Work Cables .....	23
4-13. Making Dual Operator CC And CV Weld Connections W/ Common Work Cable .....	24
4-14. Making Single Operator CC Weld Connections .....	25
4-15. Selecting Weld Cable Sizes .....	26
4-16. Installing Ether Cylinder (Optional Ether Starting Aid) .....	26
4-17. Remote 14 Receptacle Information .....	27
4-18. Remote 14 Receptacle Connections .....	28
<b>SECTION 5 – OPERATING THE WELDING GENERATOR</b> .....	<b>29</b>
5-1. Engine Controls .....	29
5-2. Weld Controls (See Section 5-3) .....	30
5-3. Weld Control Descriptions (See Section 5-2) .....	31
<b>SECTION 6 – OPERATING AUXILIARY EQUIPMENT</b> .....	<b>32</b>
<b>SECTION 7 – MAINTENANCE &amp; TROUBLESHOOTING</b> .....	<b>32</b>
7-1. Routine Maintenance .....	32
7-2. Maintenance Label .....	33
7-3. Servicing Air Cleaner .....	34
7-4. Servicing Fuel And Lubrication Systems .....	35
7-5. Adjusting Engine Speed .....	36
7-6. Servicing Optional Ether Starting Aid .....	37
7-7. Checking And Replacing Alternator Belt .....	38
7-8. Resetting Fan Belt Safety Shutdown .....	39
7-9. Inspecting And Cleaning Optional Spark Arrestor Muffler .....	40
7-10. Circuit Protection .....	41
7-11. Troubleshooting .....	42
<b>SECTION 8 – ELECTRICAL DIAGRAMS</b> .....	<b>46</b>
<b>SECTION 9 – RUN-IN PROCEDURE</b> .....	<b>48</b>
<b>SECTION 10 – AUXILIARY POWER GUIDELINES</b> .....	<b>51</b>
<b>SECTION 11 – PARTS LIST</b> .....	<b>58</b>
<b>OPTIONS AND ACCESSORIES</b>	
<b>WARRANTY</b>	



# SECTION 1 – SAFETY PRECAUTIONS - READ BEFORE USING

rom\_nd\_11/98

## 1-1. Symbol Usage



Means Warning! Watch Out! There are possible hazards with this procedure! The possible hazards are shown in the adjoining symbols.

▲ Marks a special safety message.

☞ Means "Note"; not safety related.



This group of symbols means Warning! Watch Out! possible ELECTRIC SHOCK, MOVING PARTS, and HOT PARTS hazards. Consult symbols and related instructions below for necessary actions to avoid the hazards.

## 1-2. Arc Welding Hazards

▲ The symbols shown below are used throughout this manual to call attention to and identify possible hazards. When you see the symbol, watch out, and follow the related instructions to avoid the hazard. The safety information given below is only a summary of the more complete safety information found in the Safety Standards listed in Section 1-5. Read and follow all Safety Standards.

▲ Only qualified persons should install, operate, maintain, and repair this unit.

▲ During operation, keep everybody, especially children, away.



### ELECTRIC SHOCK can kill.


Touching live electrical parts can cause fatal shocks or severe burns. The electrode and work circuit is electrically live whenever the output is on. The input power circuit and machine internal circuits are also live when power is on. In semiautomatic or automatic wire welding, the wire, wire reel, drive roll housing, and all metal parts touching the welding wire are electrically live. Incorrectly installed or improperly grounded equipment is a hazard.

- Do not touch live electrical parts.
- Wear dry, hole-free insulating gloves and body protection.
- Insulate yourself from work and ground using dry insulating mats or covers big enough to prevent any physical contact with the work or ground.
- Do not use AC output in damp areas, if movement is confined, or if there is a danger of falling.
- Use AC output ONLY if required for the welding process.
- If AC output is required, use remote output control if present on unit.
- Disconnect input power or stop engine before installing or servicing this equipment. Lockout/tagout input power according to OSHA 29 CFR 1910.147 (see Safety Standards).
- Properly install and ground this equipment according to its Owner's Manual and national, state, and local codes.
- Always verify the supply ground – check and be sure that input power cord ground wire is properly connected to ground terminal in disconnect box or that cord plug is connected to a properly grounded receptacle outlet.
- When making input connections, attach proper grounding conductor first – double-check connections.
- Frequently inspect input power cord for damage or bare wiring – replace cord immediately if damaged – bare wiring can kill.
- Turn off all equipment when not in use.
- Do not use worn, damaged, undersized, or poorly spliced cables.
- Do not drape cables over your body.
- If earth grounding of the workpiece is required, ground it directly with a separate cable.
- Do not touch electrode if you are in contact with the work, ground, or another electrode from a different machine.
- Use only well-maintained equipment. Repair or replace damaged parts at once. Maintain unit according to manual.

- Wear a safety harness if working above floor level.
- Keep all panels and covers securely in place.
- Clamp work cable with good metal-to-metal contact to workpiece or worktable as near the weld as practical.
- Insulate work clamp when not connected to workpiece to prevent contact with any metal object.
- Do not connect more than one electrode or work cable to any single weld output terminal.

### SIGNIFICANT DC VOLTAGE exists after stopping engine on inverters.


- Stop engine on inverter and discharge input capacitors according to instructions in Maintenance Section before touching any parts.

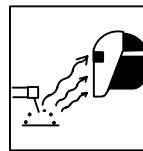

### ARC RAYS can burn eyes and skin.

Arc rays from the welding process produce intense visible and invisible (ultraviolet and infrared) rays that can burn eyes and skin. Sparks fly off from the weld.

- Wear a welding helmet fitted with a proper shade of filter to protect your face and eyes from arc rays and sparks when welding or watching (see ANSI Z49.1 and Z87.1 listed in Safety Standards).
- Wear approved safety glasses with side shields under your helmet.
- Use protective screens or barriers to protect others from flash and glare; warn others not to watch the arc.
- Wear protective clothing made from durable, flame-resistant material (wool and leather) and foot protection.

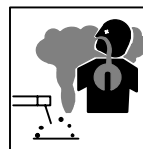

### FUMES AND GASES can be hazardous.

Welding produces fumes and gases. Breathing these fumes and gases can be hazardous to your health.


- Keep your head out of the fumes. Do not breathe the fumes.
- If inside, ventilate the area and/or use exhaust at the arc to remove welding fumes and gases.
- If ventilation is poor, use an approved air-supplied respirator.
- Read the Material Safety Data Sheets (MSDSs) and the manufacturer's instructions for metals, consumables, coatings, cleaners, and degreasers.
- Work in a confined space only if it is well ventilated, or while wearing an air-supplied respirator. Always have a trained watch-person nearby. Welding fumes and gases can displace air and lower the oxygen level causing injury or death. Be sure the breathing air is safe.
- Do not weld in locations near degreasing, cleaning, or spraying operations. The heat and rays of the arc can react with vapors to form highly toxic and irritating gases.
- Do not weld on coated metals, such as galvanized, lead, or cadmium plated steel, unless the coating is removed from the weld area, the area is well ventilated, and if necessary, while wearing an air-supplied respirator. The coatings and any metals containing these elements can give off toxic fumes if welded.



### WELDING can cause fire or explosion.

Welding on closed containers, such as tanks, drums, or pipes, can cause them to blow up. Sparks can fly off from the welding arc. The flying sparks, hot workpiece, and hot equipment can cause fires and burns. Accidental contact of electrode to metal objects can cause sparks, explosion, overheating, or fire. Check and be sure the area is safe before doing any welding.

- Protect yourself and others from flying sparks and hot metal.
- Do not weld where flying sparks can strike flammable material.
- Remove all flammables within 35 ft (10.7 m) of the welding arc. If this is not possible, tightly cover them with approved covers.
- Be alert that welding sparks and hot materials from welding can easily go through small cracks and openings to adjacent areas.
- Watch for fire, and keep a fire extinguisher nearby.
- Be aware that welding on a ceiling, floor, bulkhead, or partition can cause fire on the hidden side.
- Do not weld on closed containers such as tanks, drums, or pipes, unless they are properly prepared according to AWS F4.1 (see Safety Standards).
- Connect work cable to the work as close to the welding area as practical to prevent welding current from traveling long, possibly unknown paths and causing electric shock and fire hazards.
- Do not use welder to thaw frozen pipes.
- Remove stick electrode from holder or cut off welding wire at contact tip when not in use.
- Wear oil-free protective garments such as leather gloves, heavy shirt, cuffless trousers, high shoes, and a cap.
- Remove any combustibles, such as a butane lighter or matches, from your person before doing any welding.

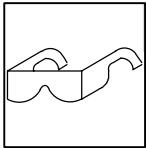

### FLYING METAL can injure eyes.

- Welding, chipping, wire brushing, and grinding cause sparks and flying metal. As welds cool, they can throw off slag.
- Wear approved safety glasses with side shields even under your welding helmet.



### BUILDUP OF GAS can injure or kill.

- Shut off shielding gas supply when not in use.
- Always ventilate confined spaces or use approved air-supplied respirator.

## 1-3. Engine Hazards



### FUEL can cause fire or explosion.


- Stop engine and let it cool off before checking or adding fuel.
- Do not add fuel while smoking or if unit is near any sparks or open flames.

- Do not overfill tank – allow room for fuel to expand.
- Do not spill fuel. If fuel is spilled, clean up before starting engine.
- Dispose of rags in a fireproof container.



### HOT PARTS can cause severe burns.


- Allow cooling period before maintaining.
- Wear protective gloves and clothing when working on a hot engine.
- Do not touch hot engine parts or just-welded parts bare-handed.

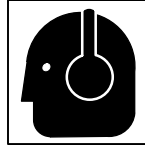

### NOISE can damage hearing.


Noise from some processes or equipment can damage hearing.

- Wear approved ear protection if noise level is high.

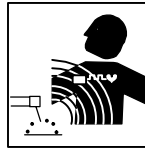

### MAGNETIC FIELDS can affect pacemakers.


- Pacemaker wearers keep away.
- Wearers should consult their doctor before going near arc welding, gouging, or spot welding operations.

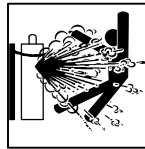

### CYLINDERS can explode if damaged.

Shielding gas cylinders contain gas under high pressure. If damaged, a cylinder can explode. Since gas cylinders are normally part of the welding process, be sure to treat them carefully.

- Protect compressed gas cylinders from excessive heat, mechanical shocks, slag, open flames, sparks, and arcs.
- Install cylinders in an upright position by securing to a stationary support or cylinder rack to prevent falling or tipping.
- Keep cylinders away from any welding or other electrical circuits.
- Never drape a welding torch over a gas cylinder.
- Never allow a welding electrode to touch any cylinder.
- Never weld on a pressurized cylinder – explosion will result.
- Use only correct shielding gas cylinders, regulators, hoses, and fittings designed for the specific application; maintain them and associated parts in good condition.
- Turn face away from valve outlet when opening cylinder valve.
- Keep protective cap in place over valve except when cylinder is in use or connected for use.
- Read and follow instructions on compressed gas cylinders, associated equipment, and CGA publication P-1 listed in Safety Standards.

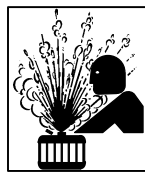

### STEAM AND HOT COOLANT can burn.


- If possible, check coolant level when engine is cold to avoid scalding.
- Always check coolant level at overflow tank, if present on unit, instead of radiator (unless told otherwise in maintenance section or engine manual).
- If the engine is warm, checking is needed, and there is no overflow tank, follow the next two statements.

- Wear safety glasses and gloves and put a rag over radiator cap.
- Turn cap slightly and let pressure escape slowly before completely removing cap.




### MOVING PARTS can cause injury.

- Keep away from fans, belts, and rotors.
- Keep all doors, panels, covers, and guards closed and securely in place.
- Stop engine before installing or connecting unit.
- Have only qualified people remove guards or covers for maintenance and troubleshooting as necessary.
- To prevent accidental starting during servicing, disconnect negative (-) battery cable from battery.
- Keep hands, hair, loose clothing, and tools away from moving parts.
- Reinstall panels or guards and close doors when servicing is finished and before starting engine.
- Before working on generator, remove spark plugs or injectors to keep engine from kicking back or starting.
- Block flywheel so that it will not turn while working on generator components.

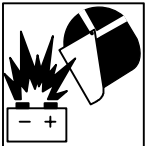


### BATTERY EXPLOSION can BLIND.

- Always wear a face shield, rubber gloves, and protective clothing when working on a battery.
- Stop engine before disconnecting or connecting battery cables or servicing battery.
- Do not allow tools to cause sparks when working on a battery.
- Do not use welder to charge batteries or jump start vehicles.
- Observe correct polarity (+ and -) on batteries.
- Disconnect negative (-) cable first and connect it last.

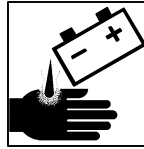

### BATTERY ACID can BURN SKIN and EYES.

- Do not tip battery.
- Replace damaged battery.
- Flush eyes and skin immediately with water.

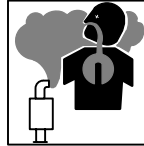

### ENGINE EXHAUST GASES can kill.

- Use equipment outside in open, well-ventilated areas.
- If used in a closed area, vent engine exhaust outside and away from any building air intakes.



### ENGINE HEAT can cause fire.

- Do not locate unit on, over, or near combustible surfaces or flammables.
- Keep exhaust and exhaust pipes way from flammables.



### EXHAUST SPARKS can cause fire.


- Do not let engine exhaust sparks cause fire.
- Use approved engine exhaust spark arrestor in required areas – see applicable codes.

## 1-4. Additional Symbols For Installation, Operation, And Maintenance




### FALLING UNIT can cause injury.

- Use lifting eye to lift unit only, NOT running gear, gas cylinders, trailer, or any other accessories.
- Use equipment of adequate capacity to lift and support unit.
- If using lift forks to move unit, be sure forks are long enough to extend beyond opposite side of unit.

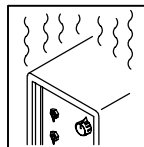


### OVERUSE can cause OVERHEATING.

- Allow cooling period; follow rated duty cycle.
- Reduce current or reduce duty cycle before starting to weld again.
- Do not block or filter airflow to unit.

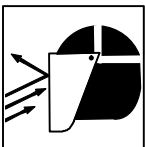

### FLYING SPARKS can cause injury.

- Wear a face shield to protect eyes and face.
- Shape tungsten electrode only on grinder with proper guards in a safe location wearing proper face, hand, and body protection.
- Sparks can cause fires — keep flammables away.

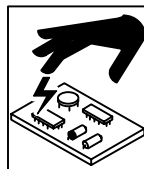


### STATIC (ESD) can damage PC boards.

- Put on grounded wrist strap BEFORE handling boards or parts.
- Use proper static-proof bags and boxes to store, move, or ship PC boards.




### TILTING OF TRAILER can cause injury.

- Use tongue jack or blocks to support weight.
- Properly install welding generator onto trailer according to instructions supplied with trailer.

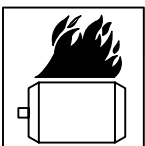


### OVERHEATING can damage motors.

- Turn off or unplug equipment before starting or stopping engine.
- Do not let low voltage and frequency caused by low engine speed damage electric motors.
- Do not connect 50 or 60 Hertz motors to the 100 Hertz receptacle where applicable.

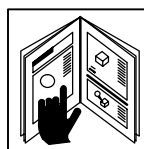


### READ INSTRUCTIONS.

- Use only genuine MILLER replacement parts.
- Perform engine maintenance and service according to this manual and the engine manual.

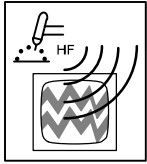

### H.F. RADIATION can cause interference.

- High-frequency (H.F.) can interfere with radio navigation, safety services, computers, and communications equipment.
- Have only qualified persons familiar with electronic equipment perform this installation.
- The user is responsible for having a qualified electrician promptly correct any interference problem resulting from the installation.
- If notified by the FCC about interference, stop using the equipment at once.
- Have the installation regularly checked and maintained.
- Keep high-frequency source doors and panels tightly shut, keep spark gaps at correct setting, and use grounding and shielding to minimize the possibility of interference.

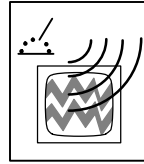

### ARC WELDING can cause interference.

- Electromagnetic energy can interfere with sensitive electronic equipment such as computers and computer-driven equipment such as robots.
- Be sure all equipment in the welding area is electromagnetically compatible.
- To reduce possible interference, keep weld cables as short as possible, close together, and down low, such as on the floor.
- Locate welding operation 100 meters from any sensitive electronic equipment.
- Be sure this welding machine is installed and grounded according to this manual.
- If interference still occurs, the user must take extra measures such as moving the welding machine, using shielded cables, using line filters, or shielding the work area.

## 1-5. Principal Safety Standards

*Safety in Welding and Cutting*, ANSI Standard Z49.1, from American Welding Society, 550 N.W. LeJeune Rd, Miami FL 33126

*Safety and Health Standards*, OSHA 29 CFR 1910, from Superintendent of Documents, U.S. Government Printing Office, Washington, D.C. 20402.

*Recommended Safe Practices for the Preparation for Welding and Cutting of Containers That Have Held Hazardous Substances*, American Welding Society Standard AWS F4.1, from American Welding Society, 550 N.W. LeJeune Rd, Miami, FL 33126

*National Electrical Code*, NFPA Standard 70, from National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

*Safe Handling of Compressed Gases in Cylinders*, CGA Pamphlet P-1, from Compressed Gas Association, 1235 Jefferson Davis Highway, Suite 501, Arlington, VA 22202.

*Code for Safety in Welding and Cutting*, CSA Standard W117.2, from Canadian Standards Association, Standards Sales, 178 Rexdale Boulevard, Rexdale, Ontario, Canada M9W 1R3.

*Safe Practices For Occupation And Educational Eye And Face Protection*, ANSI Standard Z87.1, from American National Standards Institute, 1430 Broadway, New York, NY 10018.

*Cutting And Welding Processes*, NFPA Standard 51B, from National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

## 1-6. EMF Information

Considerations About Welding And The Effects Of Low Frequency Electric And Magnetic Fields

Welding current, as it flows through welding cables, will cause electromagnetic fields. There has been and still is some concern about such fields. However, after examining more than 500 studies spanning 17 years of research, a special blue ribbon committee of the National Research Council concluded that: "The body of evidence, in the committee's judgment, has not demonstrated that exposure to power-frequency electric and magnetic fields is a human-health hazard." However, studies are still going forth and evidence continues to be examined. Until the final conclusions of the research are reached, you may wish to minimize your exposure to electromagnetic fields when welding or cutting.

To reduce magnetic fields in the workplace, use the following procedures:

1. Keep cables close together by twisting or taping them.
2. Arrange cables to one side and away from the operator.
3. Do not coil or drape cables around your body.
4. Keep welding power source and cables as far away from operator as practical.
5. Connect work clamp to workpiece as close to the weld as possible.

### About Pacemakers:

Pacemaker wearers consult your doctor first. If cleared by your doctor, then following the above procedures is recommended.



# SECTION 1 – CONSIGNES DE SÉCURITÉ – LIRE AVANT UTILISATION

rom\_nd\_fre 11/98

## 1-1. Signification des symboles



Signifie Mise en garde ! Soyez vigilant ! Cette procédure présente des risques de danger ! Ceux-ci sont identifiés par des symboles adjacents aux directives.

### ▲ Identifie un message de sécurité particulier.

☞ Signifie NOTA ; n'est pas relatif à la sécurité.



Ce groupe de symboles signifie Mise en garde ! Soyez vigilant ! Il y a des risques de danger reliés aux CHOCS ÉLECTRIQUES, aux PIÈCES EN MOUVEMENT et aux PIÈCES CHAUDES. Reportez-vous aux symboles et aux directives ci-dessous afin de connaître les mesures à prendre pour éviter tout danger.

## 1-2. Dangers relatifs au soudage à l'arc

▲ Les symboles présentés ci-après sont utilisés tout au long du présent manuel pour attirer votre attention et identifier les risques de danger. Lorsque vous voyez un symbole, soyez vigilant et suivez les directives mentionnées afin d'éviter tout danger. Les consignes de sécurité présentées ci-après ne font que résumer l'information contenue dans les normes de sécurité énumérées à la section 1-5. Veuillez lire et respecter toutes ces normes de sécurité.

▲ L'installation, l'utilisation, l'entretien et les réparations ne doivent être confiés qu'à des personnes qualifiées.

▲ Au cours de l'utilisation, tenir toute personne à l'écart et plus particulièrement les enfants.



### UN CHOC ÉLECTRIQUE peut tuer.


Un simple contact avec des pièces électriques peut provoquer une électrocution ou des blessures graves. L'électrode et le circuit de soudage sont sous tension dès que l'appareil est sur ON. Le circuit d'entrée et les circuits internes de l'appareil sont également sous tension à ce moment-là. En soudage semi-automatique ou automatique, le fil, le dévidoir, le logement des galets d'entraînement et les pièces métalliques en contact avec le fil de soudage sont sous tension. Des matériels mal installés ou mal mis à la terre présentent un danger.

- Ne jamais toucher les pièces électriques sous tension.
- Porter des gants et des vêtements de protection secs ne comportant pas de trous.
- S'isoler de la pièce et de la terre au moyen de tapis ou d'autres moyens isolants suffisamment grands pour empêcher le contact physique éventuel avec la pièce ou la terre.
- Ne pas se servir de source électrique à courant électrique dans les zones humides, dans les endroits confinés ou là où on risque de tomber.
- Se servir d'une source électrique à courant électrique UNIQUEMENT si le procédé de soudage le demande.
- Si l'utilisation d'une source électrique à courant électrique s'avère nécessaire, se servir de la fonction de télécommande si l'appareil en est équipé.
- Couper l'alimentation ou arrêter le moteur avant de procéder à l'installation, à la réparation ou à l'entretien de l'appareil. Déverrouiller l'alimentation selon la norme OSHA 29 CFR 1910.147 (voir normes de sécurité).
- Installer et mettre à la terre correctement cet appareil conformément à son manuel d'utilisation et aux codes nationaux, provinciaux et municipaux.
- Toujours vérifier la terre du cordon d'alimentation – Vérifier et s'assurer que le fil de terre du cordon d'alimentation est bien raccordé à la borne de terre du sectionneur ou que la fiche du cordon est raccordée à une prise correctement mise à la terre.
- En effectuant les raccordements d'entrée fixer d'abord le conducteur de mise à la terre approprié et contre-vérifier les connexions.
- Vérifier fréquemment le cordon d'alimentation pour voir s'il n'est pas endommagé ou dénudé – remplacer le cordon immédiatement s'il est endommagé – un câble dénudé peut provoquer une électrocution.
- Mettre l'appareil hors tension quand on ne l'utilise pas.
- Ne pas utiliser des câbles usés, endommagés, de grosseur insuffisante ou mal épissés.
- Ne pas enrouler les câbles autour du corps.
- Si la pièce soudée doit être mise à la terre, le faire directement avec un câble distinct – ne pas utiliser le connecteur de pièce ou le câble de retour.
- Ne pas toucher l'électrode quand on est en contact avec la pièce, la terre ou une électrode provenant d'une autre machine.

- N'utiliser qu'un matériel en bon état. Réparer ou remplacer sur-le-champ les pièces endommagées. Entretien l'appareil conformément à ce manuel.
- Porter un harnais de sécurité quand on travaille en hauteur.
- Maintenir solidement en place tous les panneaux et capots.
- Fixer le câble de retour de façon à obtenir un bon contact métal-métal avec la pièce à souder ou la table de travail, le plus près possible de la soudure.
- Isoler la pince de masse quand pas mis à la pièce pour éviter le contact avec tout objet métallique.

### Une tension DC importante subsiste à l'intérieur des onduleurs après avoir coupé l'alimentation.


- Couper l'alimentation du poste et décharger les condensateurs d'entrée comme indiqué dans la Section Maintenance avant de toucher des composants.

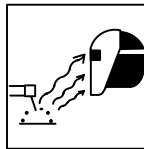

### LES RAYONS DE L'ARC peuvent provoquer des brûlures dans les yeux et sur la peau.

Le rayonnement de l'arc du procédé de soudage génère des rayons visibles et invisibles intenses (ultraviolets et infrarouges) susceptibles de provoquer des brûlures dans les yeux et sur la peau. Des étincelles sont projetées pendant le soudage.

- Porter un casque de soudage muni d'un écran de filtre approprié pour protéger votre visage et vos yeux pendant le soudage ou pour regarder (voir ANSI Z49.1 et Z87.1 énuméré dans les normes de sécurité).
- Porter des protections approuvés pour les oreilles si le niveau sonore est trop élevé.
- Utiliser des écrans ou des barrières pour protéger des tiers de l'éclair et de l'éblouissement; demander aux autres personnes de ne pas regarder l'arc.
- Porter des vêtements de protection constitué dans une matière durable, résistant au feu (laine ou cuir) et une protection des pieds.

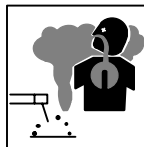

### LES FUMÉES ET LES GAZ peuvent être dangereux.

Le soudage génère des fumées et des gaz. Leur inhalation peut être dangereuse pour votre santé.


- Eloigner votre tête des fumées. Ne pas respirer les fumées.
- À l'intérieur, ventiler la zone et/ou utiliser un échappement au niveau de l'arc pour l'évacuation des fumées et des gaz de soudage.
- Si la ventilation est insuffisante, utiliser un respirateur à alimentation d'air homologué.
- Lire les spécifications de sécurité des matériaux (MSDSs) et les instructions du fabricant concernant les métaux, les consommables, les revêtements, les nettoyeurs et les dégraissateurs.
- Travailler dans un espace fermé seulement s'il est bien ventilé ou en portant un respirateur à alimentation d'air. Demander toujours à un surveillant dûment formé de se tenir à proximité. Des fumées et des gaz de soudage peuvent déplacer l'air et abaisser le niveau d'oxygène provoquant des blessures ou des accidents mortels. S'assurer que l'air de respiration ne présente aucun danger.
- Ne pas souder dans des endroits situés à proximité d'opérations de dégraissage, de nettoyage ou de pulvérisation. La chaleur et les rayons de l'arc peuvent réagir en présence de vapeurs et former des gaz hautement toxiques et irritants.
- Ne pas souder des métaux munis d'un revêtement, tels que l'acier galvanisé, plaqué en plomb ou au cadmium à moins que le revêtement n'ait été enlevé dans la zone de soudure, que l'endroit soit bien ventilé, et si nécessaire, en portant un respirateur à alimentation d'air. Les revêtements et tous les métaux renfermant ces éléments peuvent dégager des fumées toxiques en cas de soudage.



## LE SOUDAGE peut provoquer un incendie ou une explosion.

Le soudage effectué sur des conteneurs fermés tels que des réservoirs, tambours ou des conduites peut provoquer leur éclatement. Des étincelles peuvent être projetées de l'arc de soudure. La projection d'étincelles, des pièces chaudes et des équipements chauds peut provoquer des incendies et des brûlures. Le contact accidentel de l'électrode avec des objets métalliques peut provoquer des étincelles, une explosion, un surchauffement ou un incendie. Avant de commencer le soudage, vérifier et s'assurer que l'endroit ne présente pas de danger.

- Se protéger et d'autres personnes de la projection d'étincelles et de métal chaud.
- Ne pas souder dans un endroit où des étincelles peuvent tomber sur des substances inflammables.
- Déplacer toutes les substances inflammables à une distance de 10,7 m de l'arc de soudage. En cas d'impossibilité les recouvrir soigneusement avec des protections homologués.
- Des étincelles et des matériaux chauds du soudage peuvent facilement passer dans d'autres zones en traversant de petites fissures et des ouvertures.
- Surveiller tout déclenchement d'incendie et tenir un extincteur à proximité.
- Le soudage effectué sur un plafond, plancher, paroi ou séparation peut déclencher un incendie de l'autre côté.
- Ne pas effectuer le soudage sur des conteneurs fermés tels que des réservoirs, tambours, ou conduites, à moins qu'ils n'aient été préparés correctement conformément à AWS F4.1 (voir les normes de sécurité).
- Brancher le câble sur la pièce la plus près possible de la zone de soudage pour éviter le transport du courant sur une longue distance par des chemins inconnus éventuels en provoquant des risques d'électrocution et d'incendie.
- Ne pas utiliser le poste de soudage pour dégeler des conduites gelées.
- En cas de non utilisation, enlever la bague d'électrode du porte-électrode ou couper le fil à la pointe de contact.
- Porter des vêtements de protection dépourvus d'huile tels que des gants en cuir, une chemise en matériau lourd, des pantalons sans revers, des chaussures hautes et un couvre chef.
- Avant de souder, retirer toute substance combustible de vos poches telles qu'un allumeur au butane ou des allumettes.

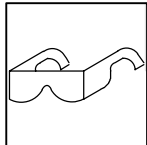

## DES PARTICULES VOLANTES peuvent blesser les yeux.

- Le soudage, l'écaillage, le passage de la pièce à la brosse en fil de fer, et le meulage génèrent des étincelles et des particules métalliques volantes.

Pendant la période de refroidissement des soudures, elles risquent de projeter du laitier.

- Porter des lunettes de sécurité avec écrans latéraux ou un écran facial.



## LES ACCUMULATIONS DE GAZ risquent de provoquer des blessures ou même la mort.


- Fermer l'alimentation du gaz protecteur en cas de non utilisation.

- Veiller toujours à bien aérer les espaces confinés ou se servir d'un respirateur d'adduction d'air homologué.



## DES PIÈCES CHAUDES peuvent provoquer des brûlures graves.


- Prévoir une période de refroidissement avant d'effectuer des travaux d'entretien.
- Porter des gants et des vêtements de protection pour travailler sur un moteur chaud.
- Ne pas toucher à mains nues les parties chaudes du moteur ni les pièces récemment soudées.

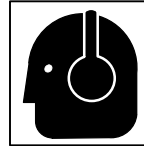

## LE BRUIT peut affecter l'ouïe.


Le bruit des processus et des équipements peut affecter l'ouïe.

- Porter des protections approuvés pour les oreilles si le niveau sonore est trop élevé.

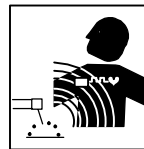

## LES CHAMPS MAGNÉTIQUES peuvent affecter les stimulateurs cardiaques.

- Porteurs de stimulateur cardiaque, restez à distance.
- Les porteurs d'un stimulateur cardiaque doivent d'abord consulter leur médecin avant de s'approcher des opérations de soudage à l'arc, de gougeage ou de soudage par points.

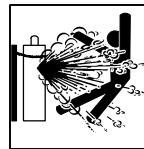

## Si des BOUTEILLES sont endommagées, elles pourront exploser.

Des bouteilles de gaz protecteur contiennent du gaz sous haute pression. Si une bouteille est endommagée, elle peut exploser. Du fait que les bouteilles de gaz font normalement partie du procédé de soudage, les manipuler avec précaution.


- Protéger les bouteilles de gaz comprimé d'une chaleur excessive, des chocs mécaniques, du laitier, des flammes ouvertes, des étincelles et des arcs.
- Placer les bouteilles debout en les fixant dans un support stationnaire ou dans un porte-bouteilles pour les empêcher de tomber ou de se renverser.
- Tenir les bouteilles éloignées des circuits de soudage ou autres circuits électriques.
- Ne jamais placer une torche de soudage sur une bouteille à gaz.
- Une électrode de soudage ne doit jamais entrer en contact avec une bouteille.
- Ne jamais souder une bouteille pressurisée – risque d'explosion.
- Utiliser seulement des bouteilles de gaz protecteur, régulateurs, tuyaux et raccords convenables pour cette application spécifique; les maintenir ainsi que les éléments associés en bon état.
- Ne pas tenir la tête en face de la sortie en ouvrant la soupape de la bouteille.
- Maintenir le chapeau de protection sur la soupape, sauf en cas d'utilisation ou de branchement de la bouteille.
- Lire et suivre les instructions concernant les bouteilles de gaz comprimé, les équipements associés et les publication P-1 CGA énumérées dans les normes de sécurité.

## 1-3. Dangers existant en relation avec le moteur



### LE CARBURANT MOTEUR peut provoquer un incendie ou une explosion.

- Arrêter le moteur avant de vérifier le niveau de carburant ou de faire le plein.
- Ne pas faire le plein en fumant ou proche d'une source d'étincelles ou d'une flamme nue.
- Ne pas faire le plein de carburant à ras bord; prévoir de l'espace pour son expansion.
- Faire attention de ne pas renverser de carburant. Nettoyer tout carburant renversé avant de faire démarrer le moteur.
- Jeter les chiffons dans un récipient ignifuge.

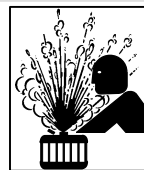


### LA VAPEUR ET LE LIQUIDE DE REFROIDISSEMENT CHAUD peuvent provoquer des brûlures.

- Il est préférable de vérifier le liquide de refroidissement une fois le moteur refroidi pour éviter de se brûler.
- Toujours vérifier le niveau de liquide de refroidissement dans le vase d'expansion (si présent), et non dans le radiateur (sauf si précisé autrement dans la section maintenance du manuel du moteur).
- Si le moteur est chaud et que le liquide doit être vérifié, opérer comme suivant :
- Mettre des lunettes de sécurité et des gants, placer un torchon sur le bouchon du radiateur.
- Dévisser le bouchon légèrement et laisser la vapeur s'échapper avant d'enlever le bouchon.




### DES ORGANES MOBILES peuvent provoquer des blessures.

- Ne pas approcher les mains des ventilateurs, courroies et autres pièces en mouvement.
- Maintenir fermés et fixement en place les portes, panneaux, recouvrements et dispositifs de protection.
- Arrêter le moteur avant d'installer ou brancher l'appareil.
- Demander seulement à un personnel qualifié d'enlever les dispositifs de sécurité ou les recouvrements pour effectuer, s'il y a lieu, des travaux d'entretien et de dépannage.
- Pour empêcher tout démarrage accidentel pendant les travaux d'entretien, débrancher le câble négatif (-) de batterie de la borne.
- Ne pas approcher les mains, cheveux, vêtements lâches et outils des organes mobiles.
- Remettre en place les panneaux ou les dispositifs de protection et fermer les portes à la fin des travaux d'entretien et avant de faire démarrer le moteur.
- Avant d'intervenir, déposer les bougies ou injecteurs pour éviter la mise en route accidentelle du moteur.
- Bloquer le volant moteur pour éviter sa rotation lors d'une intervention sur le générateur.

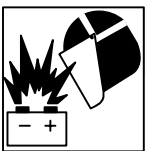


### L'EXPLOSION DE LA BATTERIE peut RENDRE AVEUGLE.

- Toujours porter une protection faciale, des gants en caoutchouc et vêtements de protection lors d'une intervention sur la batterie.
- Arrêter le moteur avant de débrancher ou de brancher les câbles de batterie.
- Eviter de provoquer des étincelles avec les outils en travaillant sur la batterie.
- Ne pas utiliser le poste de soudage pour charger les batteries ou des véhicules de démarrage rapide.
- Observer la polarité correcte (+ et -) sur les batteries.
- Débrancher le câble négatif (-) en premier lieu. Le rebrancher en dernier lieu.

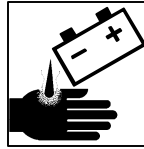


### L'ACIDE DE LA BATTERIE peut provoquer des brûlures dans les YEUX et sur la PEAU.

- Ne pas renverser la batterie.
- Remplacer une batterie endommagée.
- Rincer immédiatement les yeux et la peau à l'eau.

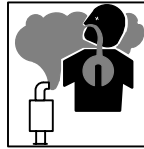

### LES GAZ D'ÉCHAPPEMENT DU MOTEUR peuvent provoquer des accidents mortels.

- Utiliser l'équipement à l'extérieur dans des zones ouvertes et bien ventilées.
- En cas d'utilisation dans un endroit fermé évacuer les gaz d'échappement du moteur vers l'extérieur à distance des entrées d'air dans les bâtiments.

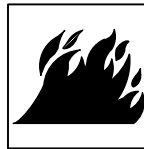

### LA CHALEUR DU MOTEUR peut provoquer un incendie.

- Ne pas placer l'appareil sur, au-dessus ou à proximité de surfaces inflammables.
- Tenir à distance les produits inflammables de l'échappement.



### LES ÉTINCELLES À L'ÉCHAPPEMENT peuvent provoquer un incendie.


- Empêcher les étincelles d'échappement du moteur de provoquer un incendie.
- Utiliser uniquement un pare-étincelles approuvé – voir codes en vigueur.

## 1-4. Dangers supplémentaires en relation avec l'installation, le fonctionnement et la maintenance




### LA CHUTE DE L'APPAREIL peut blesser.

- Utiliser l'anneau de levage uniquement pour soulever l'appareil lui-même ; sans chariot, de bouteilles de gaz, remorque, ou autres accessoires.
- Utiliser un équipement de levage de capacité suffisante pour lever l'appareil.
- En utilisant des fourches de levage pour déplacer l'unité, s'assurer que les fourches sont suffisamment longues pour dépasser du côté opposé de l'appareil.

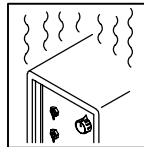


### L'EMPLOI EXCESSIF peut SURCHAUFFER L'ÉQUIPEMENT.

- Laisser l'équipement refroidir ; respecter le facteur de marche nominal.
- Réduire le courant ou le facteur de marche avant de poursuivre le soudage.
- Ne pas obstruer les passages d'air du poste.

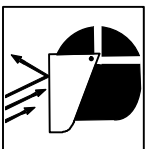


### LES ÉTINCELLES VOLANTES risquent de provoquer des blessures.

- Porter un écran facial pour protéger le visage et les yeux.
- Affûter l'électrode au tungstène uniquement à la meuleuse dotée de protecteurs. Cette manoeuvre est à exécuter dans un endroit sûr lorsque l'on porte l'équipement homologué de protection du visage, des mains et du corps.
- Les étincelles risquent de causer un incendie – éloigner toute substance inflammable.

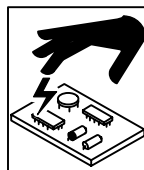

### LES CHARGES ÉLECTROSTATIQUES peuvent endommager les circuits imprimés.

- Établir la connexion avec la barrette de terre avant de manipuler des cartes ou des pièces.
- Utiliser des pochettes et des boîtes antistatiques pour stocker, déplacer ou expédier des cartes de circuits imprimés.

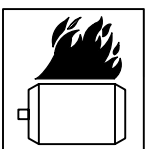


### LE SURCHAUFFEMENT peut endommager le moteur électrique.

- Arrêter ou déconnecter l'équipement avant de démarrer ou d'arrêter le moteur.
- Ne pas laisser tourner le moteur trop lentement sous risque d'endommager le moteur électrique à cause d'une tension et d'une fréquence trop faibles.
- Ne pas brancher de moteur de 50 ou de 60 Hz à la prise de 100 Hz, s'il y a lieu.




### UNE REMORQUE QUI BASCULE peut entraîner des blessures.

- Utiliser les supports de la remorque ou des blocs pour soutenir le poids.
- Installer convenablement le poste sur la remorque comme indiqué dans le manuel s'y rapportant.

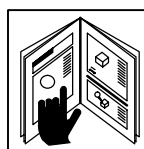


### LIRE LES INSTRUCTIONS.

- Utiliser seulement les pièces de rechange d'origine.
- Effectuer la maintenance et la mise en service d'après le manuel et celui du moteur.

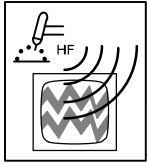

## LE RAYONNEMENT HAUTE FRÉQUENCE (H.F.) risque de provoquer des interférences.

- Le rayonnement haute fréquence (H.F.) peut provoquer des interférences avec les équipements de radio-navigation et de communication, les services de sécurité et les ordinateurs.
- Demander seulement à des personnes qualifiées familiarisées avec des équipements électroniques de faire fonctionner l'installation.
- L'utilisateur est tenu de faire corriger rapidement par un électricien qualifié les interférences résultant de l'installation.
- Si le FCC signale des interférences, arrêter immédiatement l'appareil.
- Effectuer régulièrement le contrôle et l'entretien de l'installation.
- Maintenir soigneusement fermés les portes et les panneaux des sources de haute fréquence, maintenir les éclateurs à une distance correcte et utiliser une terre et un blindage pour réduire les interférences éventuelles.

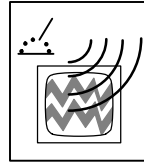

## LE SOUDAGE À L'ARC risque de provoquer des interférences.

- L'énergie électromagnétique risque de provoquer des interférences pour l'équipement électronique sensible tel que les ordinateurs et l'équipement commandé par ordinateur tel que les robots.
- Veiller à ce que tout l'équipement de la zone de soudage soit compatible électromagnétiquement.
- Pour réduire la possibilité d'interférence, maintenir les câbles de soudage aussi courts que possible, les grouper, et les poser aussi bas que possible (ex. par terre).
- Veiller à souder à une distance de 100 mètres de tout équipement électronique sensible.
- Veiller à ce que ce poste de soudage soit posé et mis à la terre conformément à ce mode d'emploi.
- En cas d'interférences après avoir pris les mesures précédentes, il incombe à l'utilisateur de prendre des mesures supplémentaires telles que le déplacement du poste, l'utilisation de câbles blindés, l'utilisation de filtres de ligne ou la pose de protecteurs dans la zone de travail.

## 1-5. Principales normes de sécurité

*Safety in Welding and Cutting*, norme ANSI Z49.1, de l'American Welding Society, 550 N.W. Lejeune Rd, Miami FL 33126

*Safety and Health Standards*, OSHA 29 CFR 1910, du Superintendent of Documents, U.S. Government Printing Office, Washington, D.C. 20402.

*Recommended Safe Practice for the Preparation for Welding and Cutting of Containers That Have Held Hazardous Substances*, norme AWS F4.1, de l'American Welding Society, 550 N.W. Lejeune Rd, Miami FL 33126

*National Electrical Code*, NFPA Standard 70, de la National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

*Safe Handling of Compressed Gases in Cylinders*, CGA Pamphlet P-1, de la Compressed Gas Association, 1235 Jefferson Davis Highway, Suite 501, Arlington, VA 22202.

*Règles de sécurité en soudage, coupage et procédés connexes*, norme CSA W117.2, de l'Association canadienne de normalisation, vente de normes, 178 Rexdale Boulevard, Rexdale (Ontario) Canada M9W 1R3.

*Safe Practices For Occupation And Educational Eye And Face Protection*, norme ANSI Z87.1, de l'American National Standards Institute, 1430 Broadway, New York, NY 10018.

*Cutting and Welding Processes*, norme NFPA 51B, de la National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

## 1-6. Information sur les champs électromagnétiques

Données sur le soudage électrique et sur les effets, pour l'organisme, des champs magnétiques basse fréquence

Le courant de soudage, pendant son passage dans les câbles de soudage, causera des champs électromagnétiques. Il y a eu et il y a encore un certain souci à propos de tels champs. Cependant, après avoir examiné plus de 500 études qui ont été faites pendant une période de recherche de 17 ans, un comité spécial ruban bleu du National Research Council a conclu: "L'accumulation de preuves, suivant le jugement du comité, n'a pas démontré que l'exposition aux champs magnétiques et champs électriques à haute fréquence représente un risque à la santé humaine". Toutefois, des études sont toujours en cours et les preuves continuent à être examinées. En attendant que les conclusions finales de la recherche soient établies, il vous serait souhaitable de réduire votre exposition aux champs électromagnétiques pendant le soudage ou le coupage.

Afin de réduire les champs électromagnétiques dans l'environnement de travail, respecter les consignes suivantes :






 

 
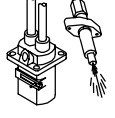
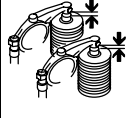







 







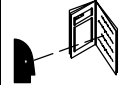
- 1 Garder les câbles ensemble en les torsadant ou en les attachant avec du ruban adhésif.
- 2 Mettre tous les câbles du côté opposé de l'opérateur.
- 3 Ne pas courber pas et ne pas entourer pas les câbles autour de votre corps.
- 4 Garder le poste de soudage et les câbles le plus loin possible de vous.
- 5 Relier la pince de masse le plus près possible de la zone de soudure.

### Consignes relatives aux stimulateurs cardiaques :

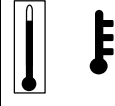Les personnes qui portent un stimulateur cardiaque doivent avant tout consulter leur docteur. Si vous êtes déclaré apte par votre docteur, il est alors recommandé de respecter les consignes ci-dessus.

# SECTION 2 – DEFINITIONS

## 2-1. Symbols And Definitions

	Stop Engine		Start Engine		Ether Starting Aid		Engine
	Do Not Switch While Welding Or Under Load		Battery (Engine)		Circuit Breaker		Engine Oil
	Check Injectors/ Pump		Check Valve Clearance		Fuel		Protective Earth (Ground)
+	Positive	-	Negative		Certified/Trained Mechanic		Welding Arc
<b>A</b>	Amperes	<b>V</b>	Volts		Panel/Local		Remote
I	On		Temperature		Output (Contactor)		Alternating Current
	Stick (SMAW) Welding		TIG (GTAW) Welding		MIG (GMAW) Welding	<b>3</b> 	Three Phase
	Time	<b>h</b>	Hours	<b>s</b>	Seconds	<b>1</b> 	Single Phase
			Read Operator's Manual				

# SECTION 3 – SPECIFICATIONS

## 3-1. Description

This unit has two CC/CV modules with separate weld controls for applications where two welding arcs are needed. A Welder Selector switch controls whether one or both sets of weld output terminals are active (see Section 5-2). When the unit is operated in the dual operator mode, each welder has CC and CV weld output available for Stick, TIG, and MIG welding. When in the single operator mode, CC weld output is available to the welder on the Welder B (right) side only (CV not active in single operator mode).

## 3-2. Weld, Power, And Engine Specifications

Weld Mode	Weld Stations Available	Weld Output	Weld Output Range	Max. Open-Circuit Voltage	Rated Welding Output	Auxiliary Power Rating	Engine	Fuel Capacity
Single	1 (Right Side)	CC/DC	30 – 600 A	85	550 A at 30 Volts DC, 40% Duty Cycle	Single-Phase, 4 kVA/kW, 34/17 A, 120/240 V AC, 50/60 Hz (4 kVA/kW Shared By All Receptacles)	Deutz F3L-912 Air-Cooled, Three-Cylinder, 41.5 HP Diesel Engine	22.3 gal (84.4 L)
Dual	2 (Both Sides)	CC/DC	15 – 300 A	85	275 A at 31 Volts DC, 40% Duty Cycle			
		CV/DC	10 – 32 V	49				

## 3-3. Dimensions, Weights, And Operating Angles

Dimensions	
Height	47-5/8 in (1210 mm)
Width	31-1/4 in (794 mm)
Depth	60-1/2 in (1537 mm)
A	59-1/8 in (1502 mm)
B	47-1/4 in (1200 mm)
C	43-1/4 in (1099 mm)
D	32-3/4 in (832 mm)
E	24-15/16 in (633 mm)
F	10-1/2 in (267 mm)
G	6-1/2 in (165 mm)
H	2-7/8 in (73 mm)
J	29-7/8 in (759 mm)
K	11/16 in (24 mm)
L	21/32 in (17 mm) Dia. 16 Holes
Weight	
2005 lb (909 kg)	

158 699


▲ Do not exceed tilt angles or engine could be damaged or unit could tip.

▲ Do not move or operate unit where it could tip.

angles\_1 8/99

### 3-4. Fuel Consumption


The curve shows typical fuel use under the combined weld loads of both sides (Welder A and Welder B).

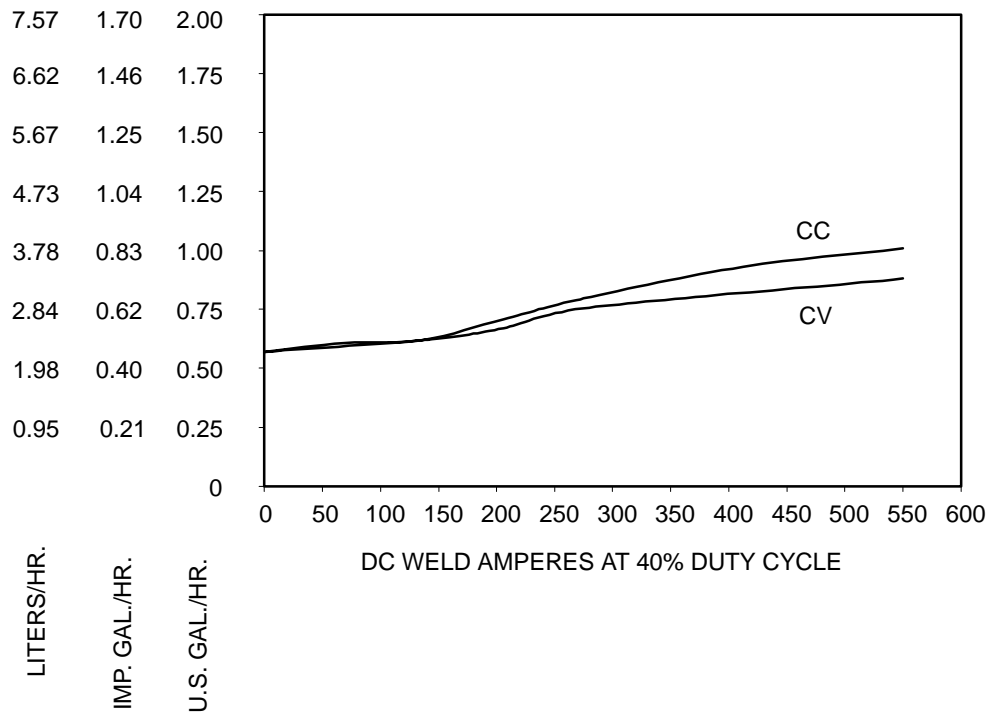

195 711


### 3-5. AC Auxiliary Power

The ac power curve shows the auxiliary power in amperes available at the 120 and 240 volt receptacles.

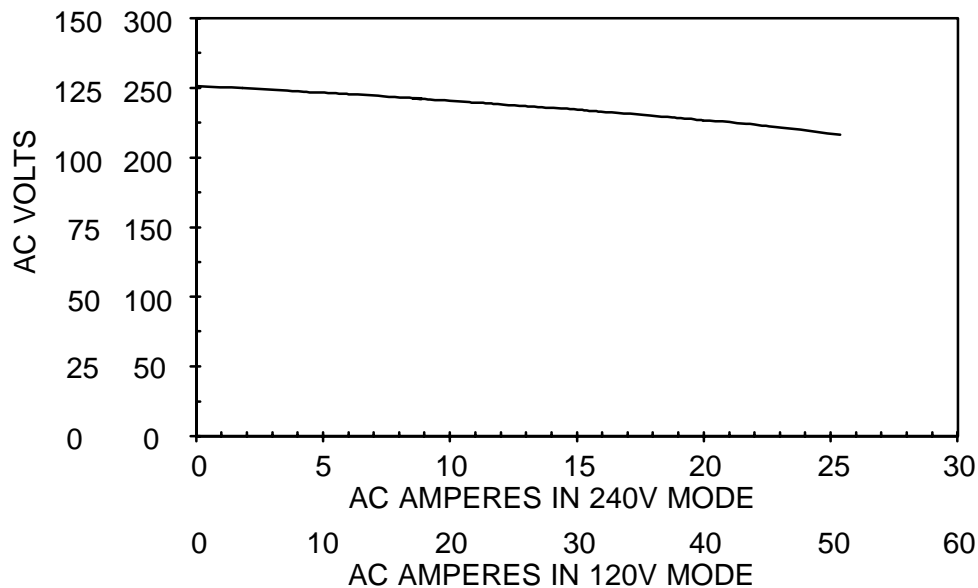


193 018

### 3-6. Duty Cycle And Overheating

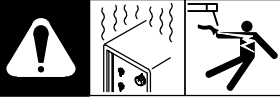

Dual Operator Mode – 40% Duty Cycle At 275 Amperes From Each Side  
 Single Operator Mode – 40% Duty Cycle At 550 Amperes From Welder B side (Right)

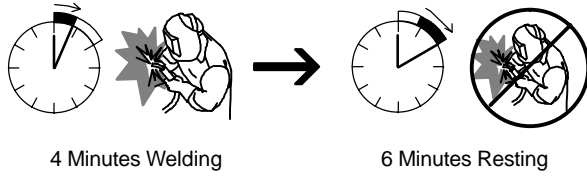

Duty Cycle is percentage of 10 minutes that unit can weld at rated load without overheating.


▲ Exceeding duty cycle can damage unit and void warranty.

If a weld module overheats, the High Temperature light goes on and the thermostat opens to stop weld output to that module. Wait fifteen minutes for module to cool. Reduce amperage, voltage, or duty cycle before welding.

This unit has separate duty cycle ratings for each operating mode. If the unit is operated in the dual operator mode, the unit is rated at 40% duty cycle. This means each side of the unit can be operated at 275 amperes at 40% duty cycle.

When the unit is operated in the single operator mode, the Welder B side (right) is rated at 40% duty cycle (550 A at 40% duty cycle).

#### Overheating

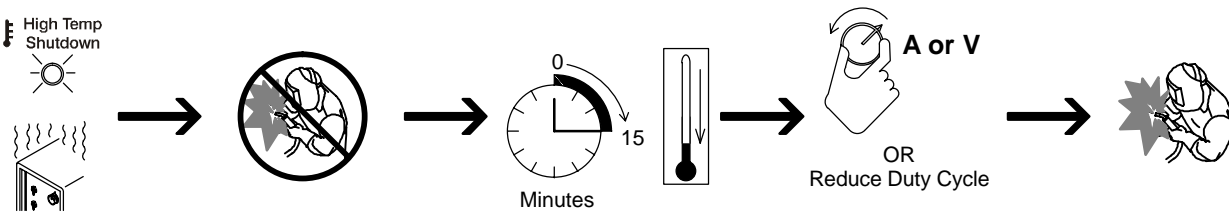


Ref. rduy1 5/95 – 194 313-A




### 3-7. Volt-Ampere Curves

**A. CC/DC – Single Mode**

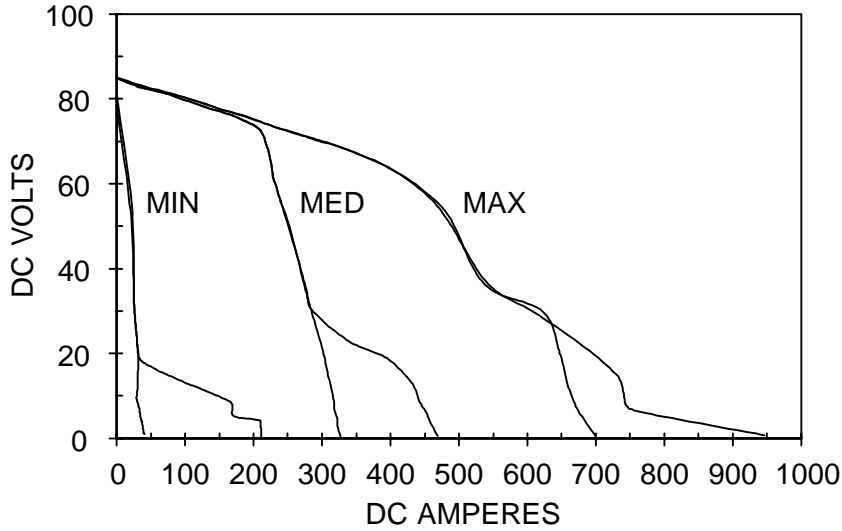


The volt-ampere curve shows the minimum, medium, and maximum voltage and amperage output capabilities of the welding generator. Curves of all other settings fall between the curves shown.

**B. CC/DC – Dual Mode**

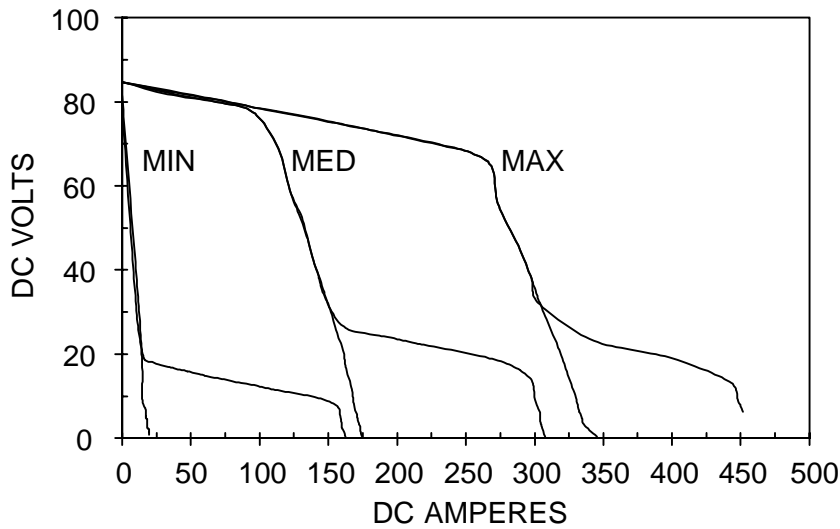

**C. CV/DC Mode**

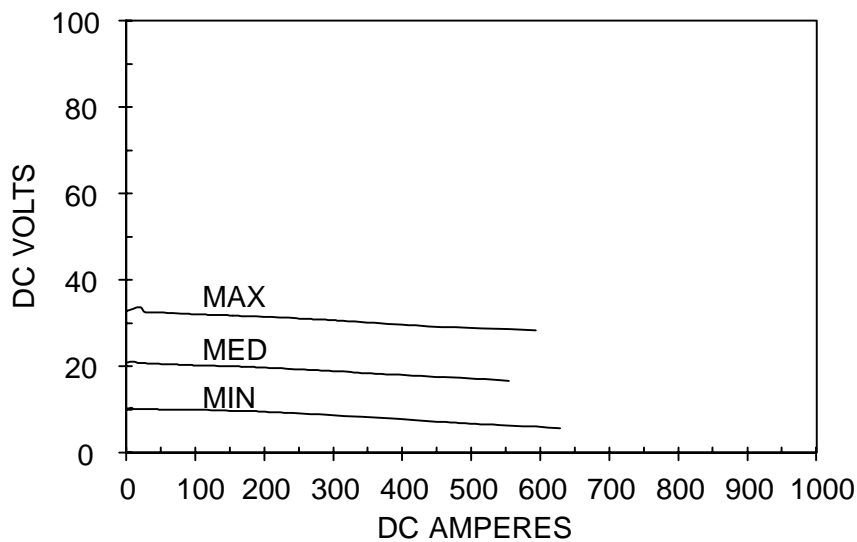


# SECTION 4 – INSTALLATION

## NOTE


When facing the front panel, the Welder B controls and weld terminals are on the right and the Welder A controls and weld terminals are on the left.

### 4-1. Installing Welding Generator

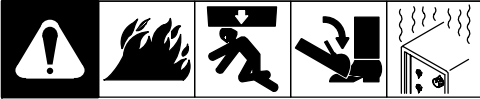


#### Movement


▲ Do Not Lift Unit From End

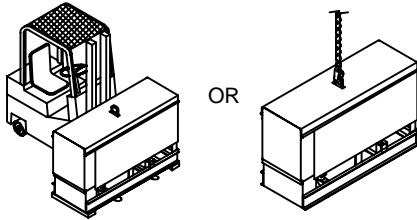


#### Airflow Clearance

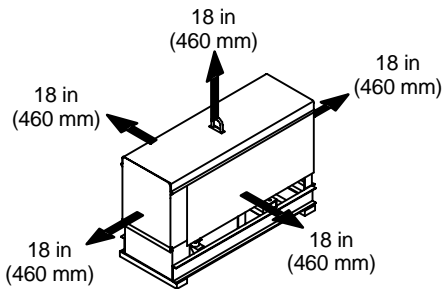

#### Location

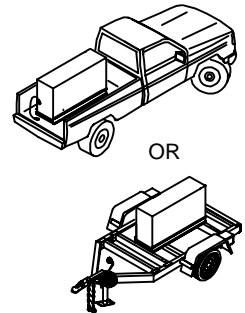

#### Grounding

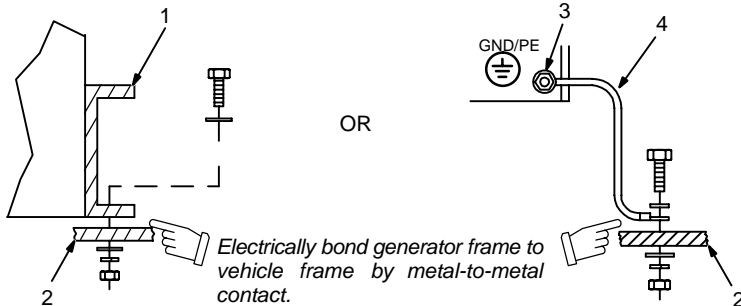

▲ Always ground generator frame to vehicle frame to prevent electric shock and static electricity hazards.

▲ Always securely fasten welding generator onto transport vehicle or trailer and comply with all DOT and other applicable codes.









- 1 Generator Base
- 2 Metal Vehicle Frame
- 3 Equipment Grounding Terminal
- 4 Grounding Cable

Use #10 AWG or larger insulated copper wire.

▲ Be sure equipment connected to the 240 V receptacles is GFCI-protected.

install1 10/00\* – Ref. 800 652 / Ref. 800 477-A / 158 936-A / S-0854

## 4-2. Activating The Dry Charge Battery

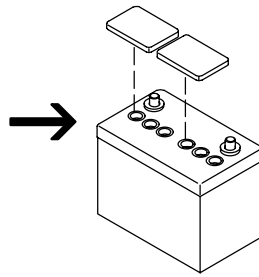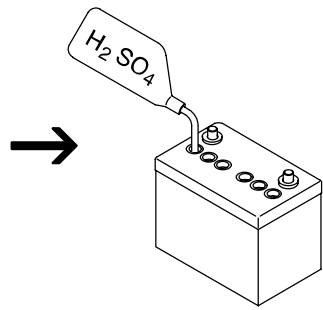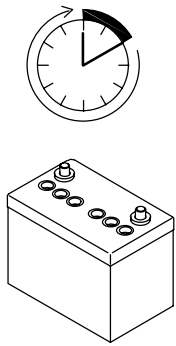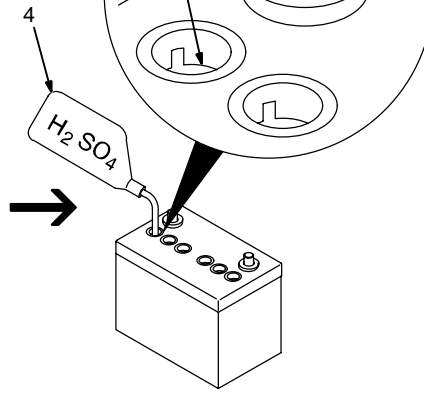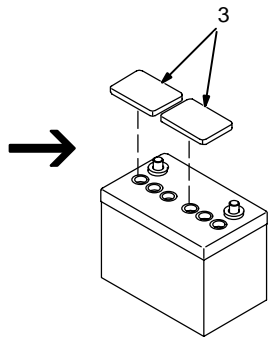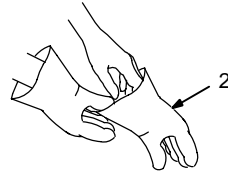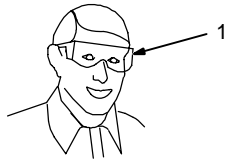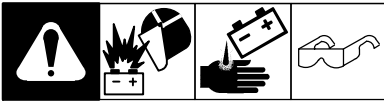


5 A For 30 Minutes

OR



30 A For 12 Minutes

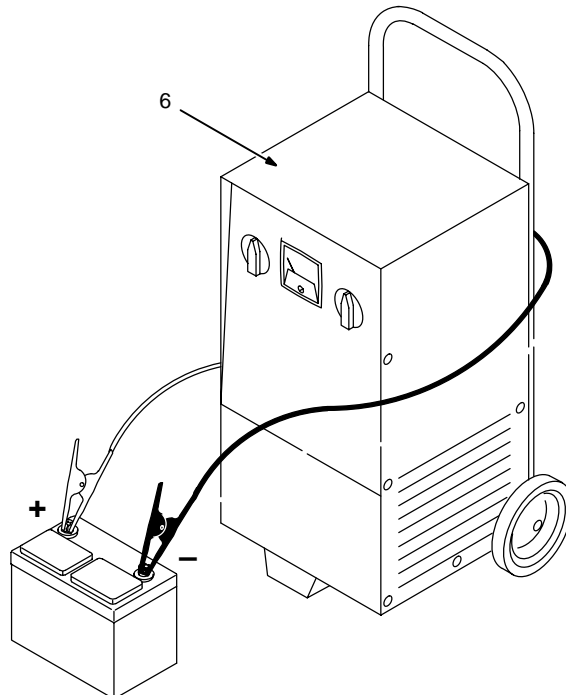

Remove battery from unit.

- 1 Eye Protection – Safety Glasses Or Face Shield
- 2 Rubber Gloves
- 3 Vent Caps
- 4 Sulfuric Acid Electrolyte (1.265 Specific Gravity)
- 5 Well

Fill each cell with electrolyte to **bottom** of well (maximum).

▲ **Do not overfill battery cells.**

Wait ten minutes and check electrolyte level. If necessary, add electrolyte to raise to proper level. Reinstall vent caps.

- 6 Battery Charger

▲ **Read and follow all instructions supplied with battery charger.**


Charge battery for 12 minutes at 30 amperes or 30 minutes at 5 amperes. Disconnect charging cables and install battery.

☞ *When electrolyte is low, add only distilled water to cells to maintain proper level.*


Tools Needed:








### 4-3. Connecting The Battery

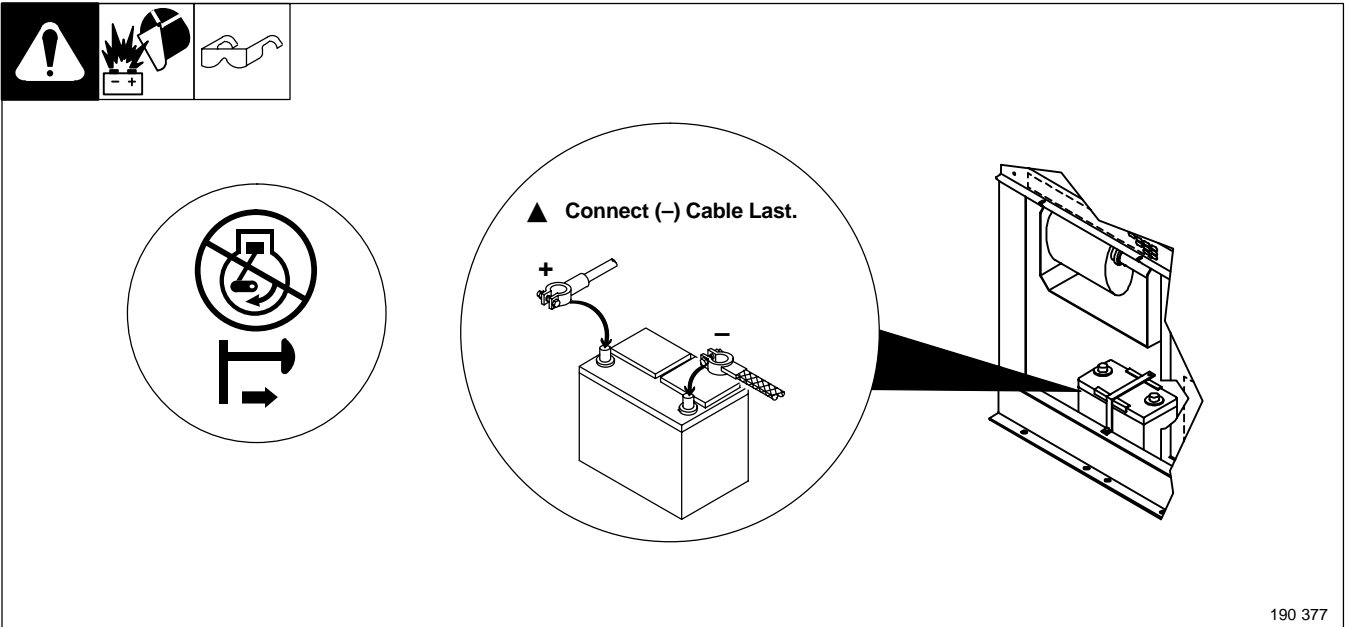

### 4-4. Installing Exhaust Pipe

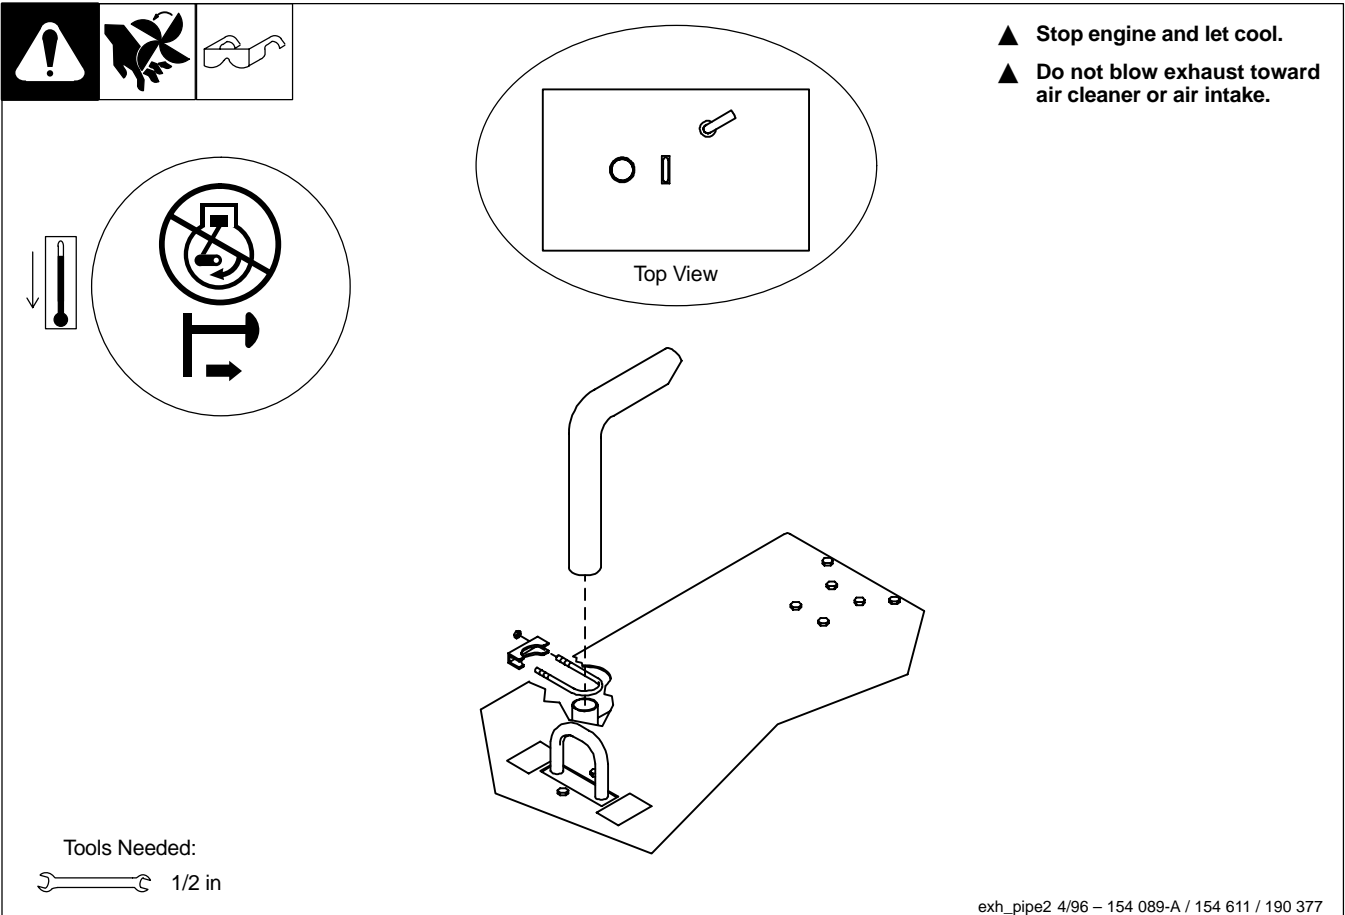

## 4-5. Engine Prestart Checks

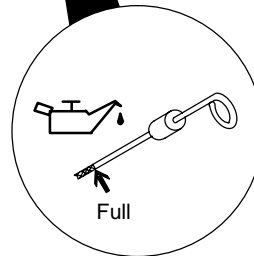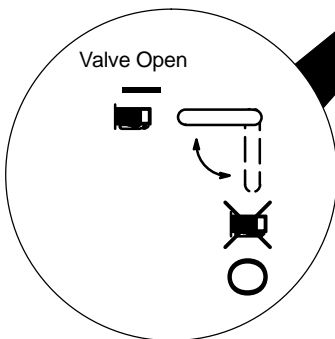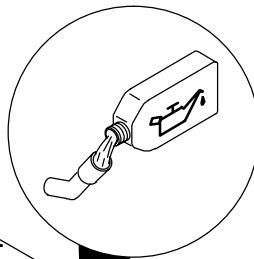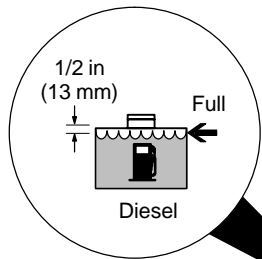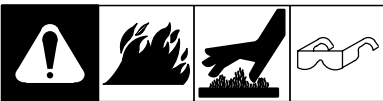

Check all fluids daily. Engine must be cold and on a level surface.

Follow run-in procedure in engine manual. If unburned fuel and oil collect in exhaust pipe during run-in, see Section 9.

### Fuel

▲ **Do not use gasoline. Gasoline will damage engine.**

Add diesel fuel before starting engine the first time (see maintenance label for specifications). Fill fuel tank up to 1/2 in. (13 mm) from top to allow room for expansion. Open fuel shut-off valve.

Do not run out of fuel or air enters fuel system and causes starting problems. See engine manual to bleed air from fuel system.

### Oil

After fueling, check oil with unit on level surface. If oil is not up to full mark on dipstick, add oil (see maintenance label).

☞ *Engine stops if oil pressure is too low.*

☞ *To improve cold weather starting:*

*Keep battery in good condition. Store battery in warm area off concrete surface.*

*Use fuel formulated for cold weather (diesel fuel can gel in cold weather). Contact local fuel supplier for fuel information.*

*Use correct grade oil for cold weather.*

Ref. 158 633-C / S-176 697

## 4-6. Safety Information For Connecting To Weld Output Terminals



### ▲ UNEXPECTED WELD OUTPUT can cause injury or fire.

- Both weld outputs can be live (ON) when Welder Selector switch is in Welder A/Welder B position and engine is running.
- Disconnect or insulate any unused cables.
- Know where cables are located BEFORE starting engine.


### ▲ ELECTRIC SHOCK can kill; ARCING can burn skin or damage electrical connections.

- Stop engine before making any weld output connections.
- Do not connect welding output of different polarities to the same structure.
- See ANSI Z49.1 and OSHA Title 29, Chapter XVII, Part 1910, Subpart Q (addresses at beginning of manual).
- When welding on the same workpiece, all connections to the workpiece must be of the same polarity.
- Do not handle or come in contact with two live electrodes at the same time.


### ▲ ELECTRIC SHOCK can kill; TWO TIMES NORMAL OPEN-CIRCUIT VOLTS can exist between electrode holders of opposite polarity.

- Do not touch electrode holders of opposite polarity at the same time.
- Separate electrode holders of opposite polarity to prevent contact.
- Consult ANSI Z49.1 for common grounding safe practices.


## 4-7. Weld Output Terminals

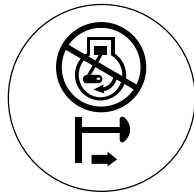



Welder A (Left) Side

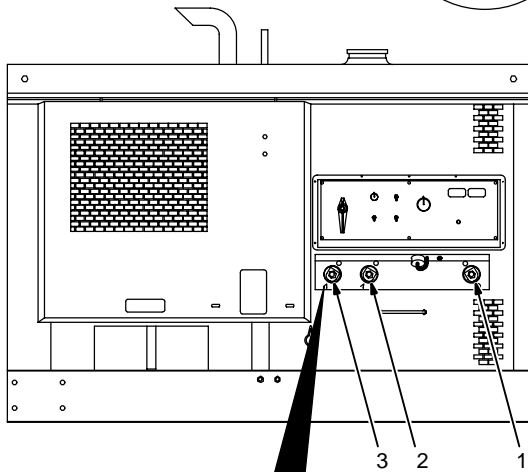


Welder B (Right) Side

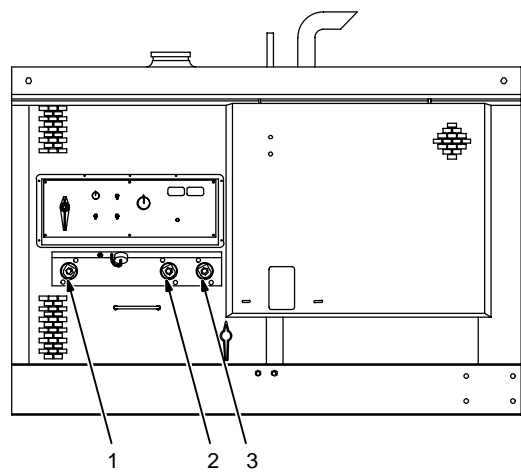

  Dinse receptacles only on units with Polarity switch option.

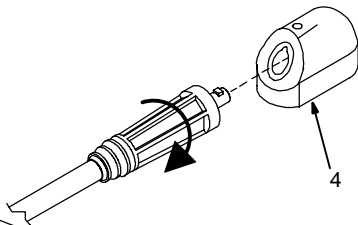

Tools Needed:

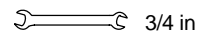

Ref. 190 377 / 802 292-A / 802 554

### ▲ Stop engine.

- 1 Negative (-) Weld Output Terminal
- 2 CV Weld Output Terminal
- 3 CC Weld Output Terminal

### 4 Dinse Weld Receptacles (Only On Units With Polarity Switch Option)



See Sections 4-8 thru 4-13 for dual operator output connections for CC and CV welding.

See Section 4-14 for single operator output


connections (CC only).

If unit has the Polarity switch option, the Negative (-) weld output terminals are labeled Work receptacles and the CC weld output terminals are labeled Electrode receptacles.

## 4-8. Making Dual Operator CC Weld Connections w/ Separate Work Cables

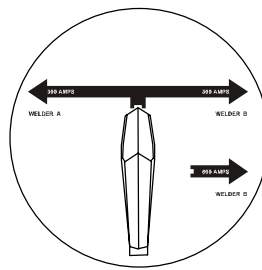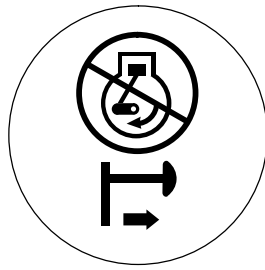


Tools Needed:

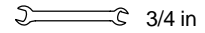

Direct Current Electrode Positive (DCEP) connections are shown.

Welder A (Left Side)

Welder B (Right Side)

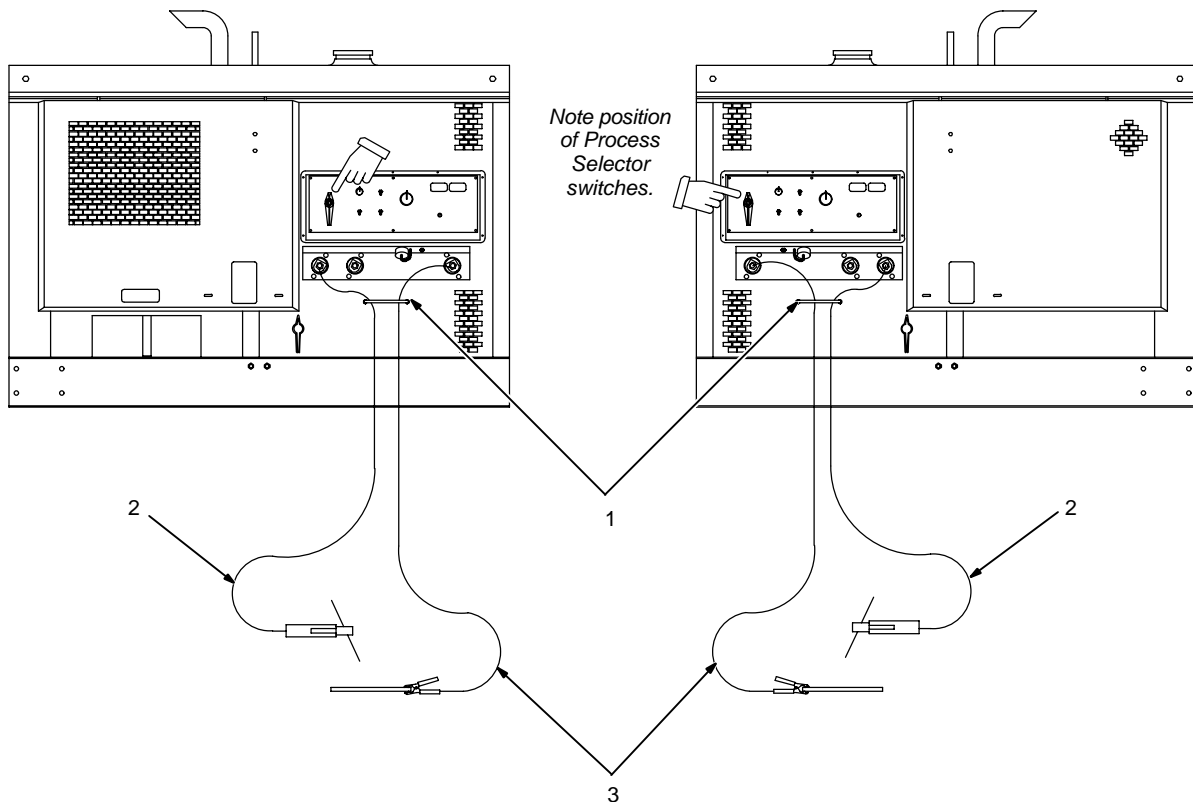

Ref. 190 377 / 802 292-A

▲ **Stop engine.**

▲ **Do not exceed machine duty cycle.**

☞ Use Dual Operator mode for CC and CV welding (see Section 5-1).

See Section 4-15 for proper cable size.

1 Strain Reliefs

Route cables through strain reliefs.

2 Electrode Holder Cables

3 Work Cables

For Stick/TIG welding Direct Current Electrode Positive (DCEP), connect work cables to Negative (-) terminals and electrode holder cables to CC terminals.


For Stick/TIG Direct Current Electrode Negative (DCEN), connect work cables to

CC terminals and electrode holder cables to Negative (-) terminals.

If unit has the Polarity switch option, connect work cables to Work receptacles and electrode holder cables to Electrode receptacles.

☞ Be sure Process Selector switches are set correctly. See Section 5-3.

## 4-9. Making Dual Operator Mode CC Weld Connections w/ Common Work Cable

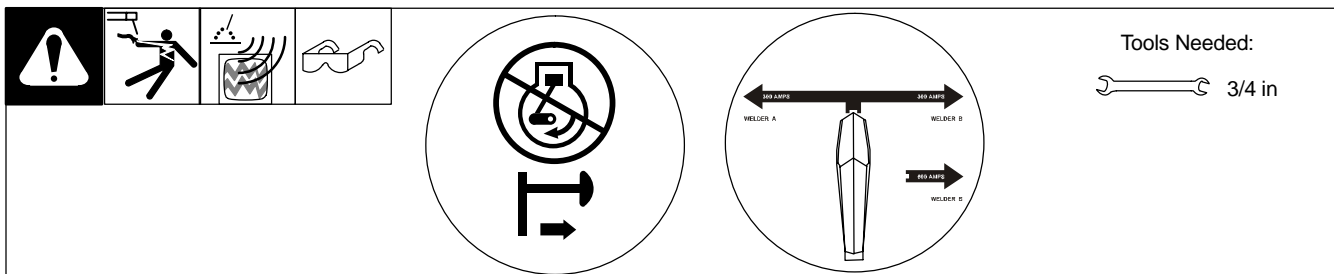


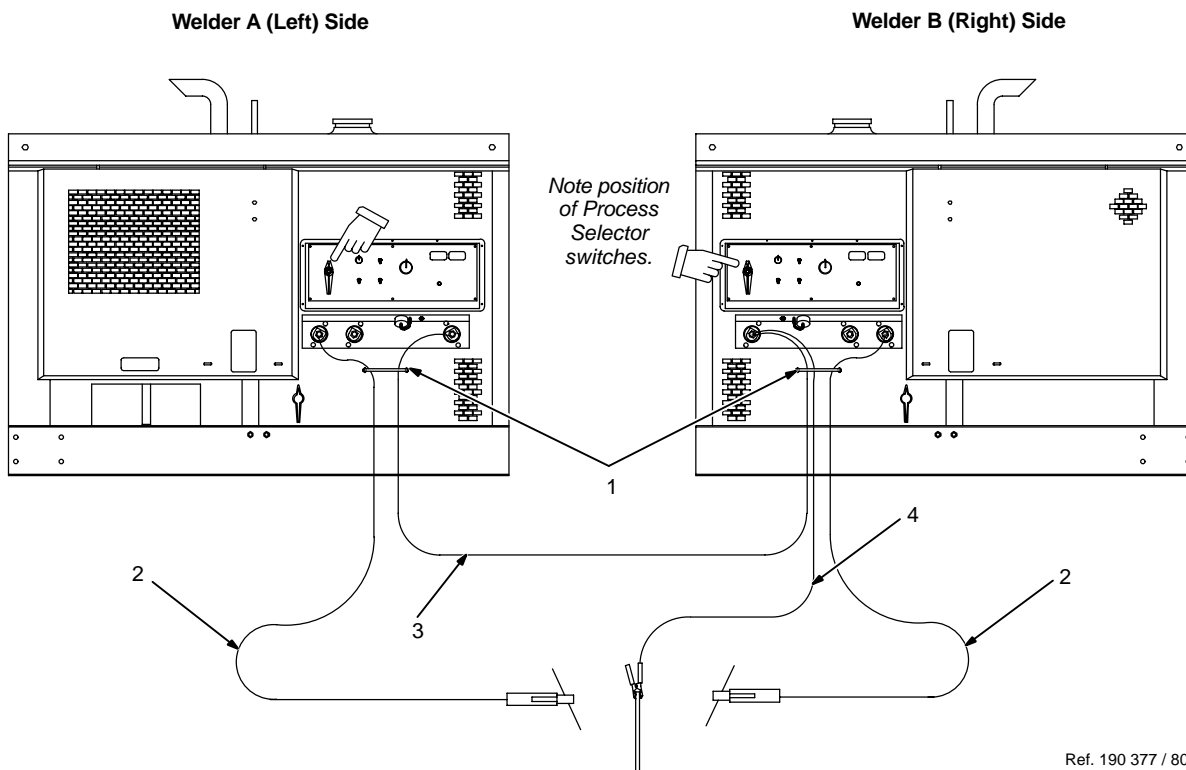
### ▲ INADEQUATE CABLE CONNECTIONS can cause serious damage to welding generator and create a hazardous condition.

When making weld connections with a common work cable, connect a weld cable of adequate size between the Negative (–) weld terminals, and connect a single weld cable of adequate size from the Welder B (right) Negative (–) terminal to the workpiece.

When using these connections as a common work terminal, all connections must be of the same polarity.

For a common work cable connection, the work cable must be able to carry the combined weld output of both modules (see Section 4-15 for proper cable size).


 Direct Current Electrode Positive (DCEP) connections are shown.




Ref. 190 377 / 802 292-A

### ▲ Stop engine.
 
### ▲ Do not exceed machine duty cycle.

  For common work connection, work cable must be able to carry combined weld output of both CC weld output terminals (see Section 4-15 for proper cable size).

 Use Dual Operator mode for CC and CV welding (see Section 5-1).

1 Strain Relief

Route cables through strain reliefs.

2 Electrode Holder Cables

3 Work Jumper Cable

4 Common Work Cable

For Stick/TIG welding Direct Current Electrode Positive (DCEP), connect common work cable and work jumper cable to Welder B (right) Negative (–) terminal. Connect other end of work jumper cable to Welder A (left) Negative (–) terminal.

Connect electrode holder cables to CC terminals.


For Stick/TIG Direct Current Electrode Negative (DCEN), connect common work cable and work jumper cable to Welder B (right) CC terminal. Connect other end of

work jumper cable to Welder A (left) CC terminal.

Connect electrode holder cables to Negative (–) terminals.



If unit has the Polarity switch option, connect common work cable and work jumper cable to Welder B (right) Work receptacle. Connect other end of work jumper cable to Welder A (left) Work receptacle.

Connect electrode holder cables to Electrode receptacles.


 Be sure Process Selector switches and optional Polarity switches are set correctly. See Section 5-3.



## 4-10. Making Dual Operator CV Weld Connections w/ Separate Work Cables

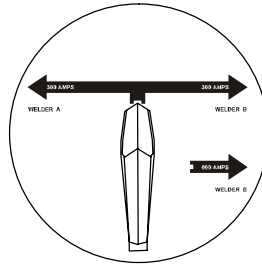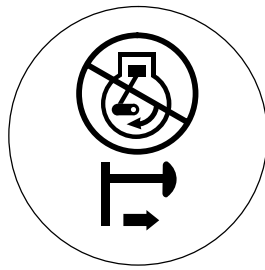


Tools Needed:

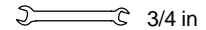

Direct Current Electrode Positive (DCEP) connections are shown.

Welder A (Left Side)

Welder B (Right Side)

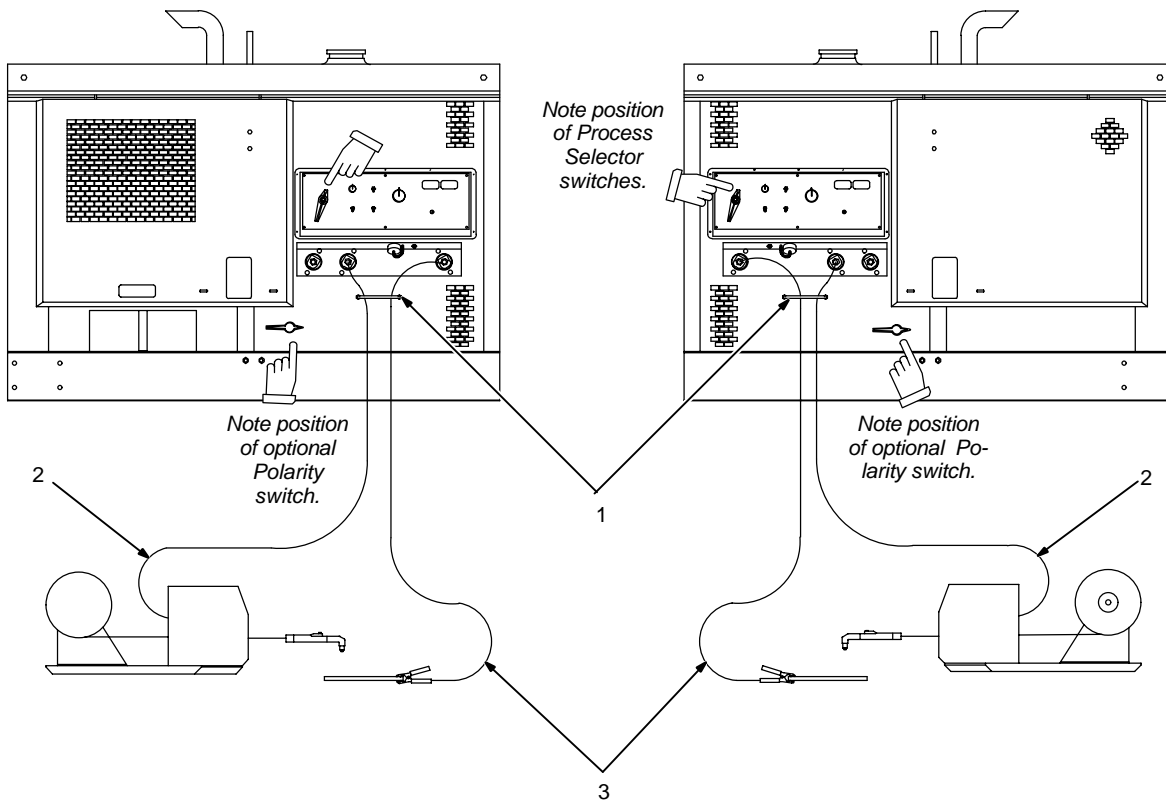

Ref. 190 377 / 802 292-A

▲ **Stop engine.**

▲ **Do not exceed machine duty cycle.**

Use Dual Operator mode for CC and CV welding (see Section 5-1).

See Section 4-15 for proper cable size.

1 Strain Reliefs

Route cables through strain reliefs.

2 Wire Feeder Cables

3 Work Cables

For MIG and FCAW welding Direct Current Electrode Positive (DCEP), connect work cables to Negative (-) terminals and wire feeder cables to CV terminals.



For MIG and FCAW Direct Current Electrode Negative (DCEN), connect work cables to CV terminals and wire feeder cables to Negative (-) terminals.

If unit has the Polarity switch option, connect work cables to Work receptacles and wire feeder cables to CV receptacles.

Place optional Polarity switches in Reverse position when using CV weld receptacles. There is no CV weld output when switch is in Straight position.

Be sure Process Selector and Polarity switches are set correctly. See Section 5-3.

## 4-11. Making Dual Operator CV Weld Connections w/ Common Work Cable

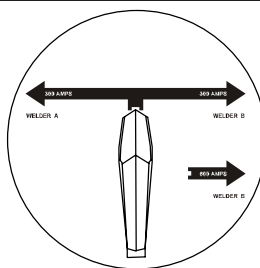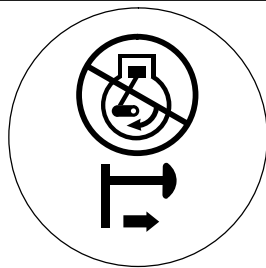

Tools Needed:




3/4 in

### ▲ INADEQUATE CABLE CONNECTIONS can cause serious damage to welding generator and create a hazardous condition.

When making weld connections with a common work cable, connect a weld cable of adequate size between the Negative (-) weld terminals, and connect a single weld cable of adequate size from the Welder B (right) Negative (-) terminal to the workpiece.

When using these connections as a common work terminal, all connections must be of the same polarity.

For a common work cable connection, the work cable must be able to carry the combined weld output of both modules (see Section 4-15 for proper cable size).

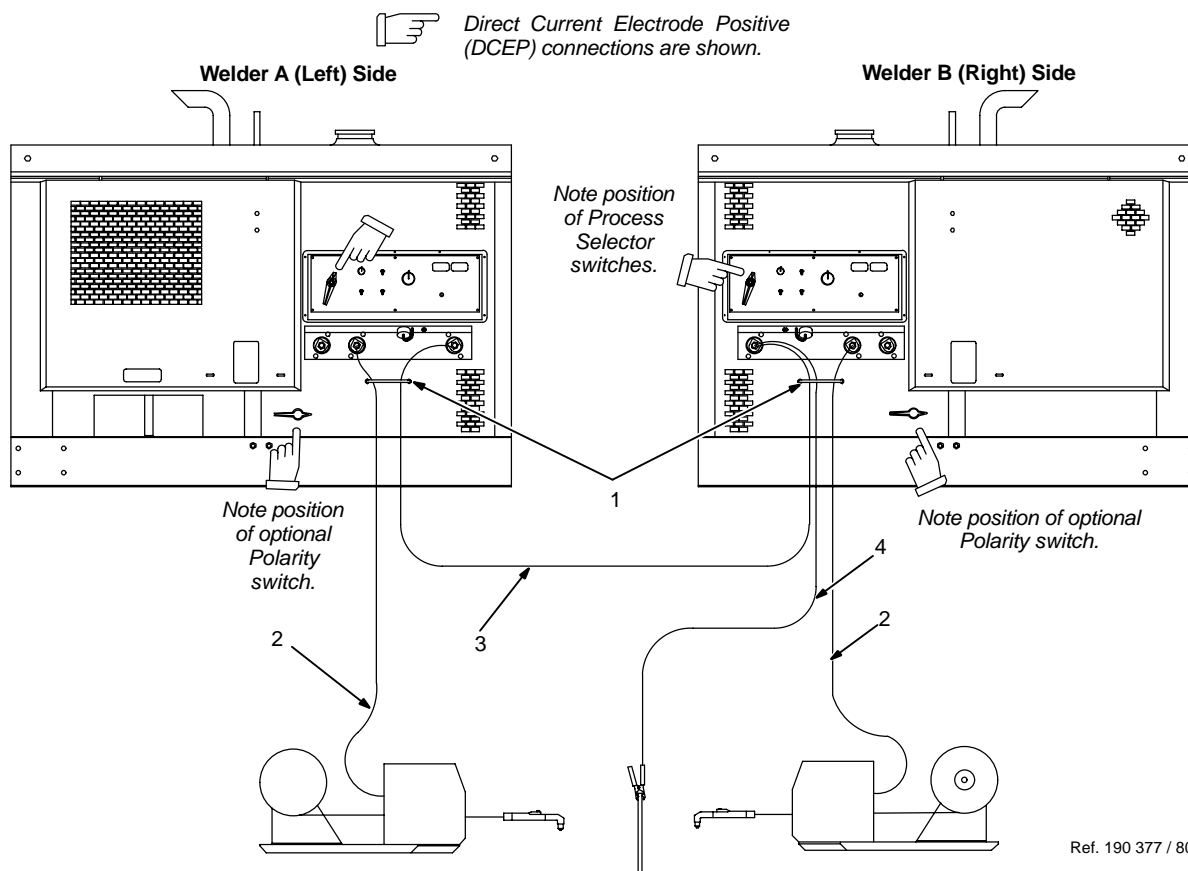

Ref. 190 377 / 802 292-A

### ▲ Stop engine.

### ▲ Do not exceed machine duty cycle.

☞ For common work connection, work cable must be able to carry combined weld output of both CC weld output terminals (see Section 4-15 for proper cable size).

☞ Use Dual Operator mode for CC and CV welding (see Section 5-1).

#### 1 Strain Relief

Route cables through strain reliefs.

#### 2 Wire Feeder Cables

#### 3 Work Jumper Cable

#### 4 Common Work Cable

For MIG and FCAW welding Direct Current Electrode Positive (DCEP), connect common work cable and work jumper cable to Welder B (right) Negative (-) terminal. Connect other end of work jumper cable to Welder A (left) Negative (-) terminal.

Connect wire feeder cables to CV terminals.

For MIG and FCAW Direct Current Electrode Negative (DCEN), connect common work cable and work jumper cable to Welder B (right) CV terminal. Connect other end of work jumper cable to Welder A (left) CV terminal.

Connect wire feeder cables to Negative (-) terminals.





If unit has the Polarity switch option, connect common work cable and work jumper cable to Welder B (right) Work receptacle. Connect other end of work jumper cable to Welder A (left) Work receptacle.


Connect wire feeder cables to CV receptacles.


☞ Place optional Polarity switches in Reverse position when using CV weld receptacles. There is no CV weld output when switch is in Straight position.

☞ Be sure Process Selector and Polarity switches are set correctly. See Section 5-3.


## 4-12. Making Dual Operator CC And CV Weld Connections w/ Separate Work Cables

 


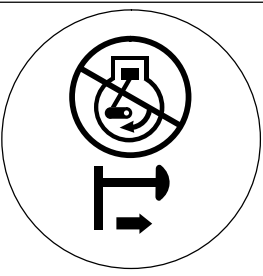

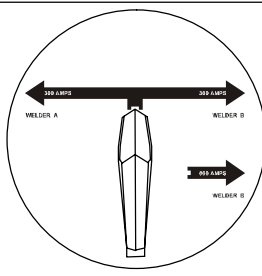


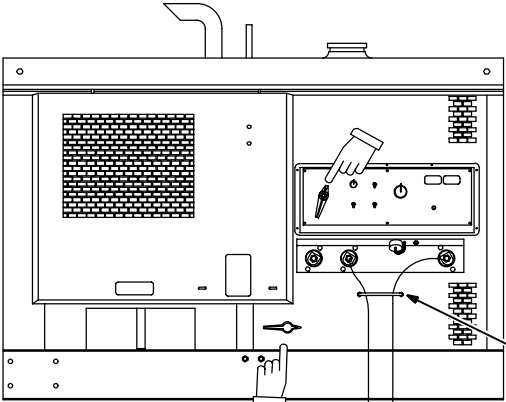


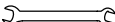Tools Needed:


 3/4 in

 *Direct Current Electrode Positive (DCEP) connections are shown.*

**Welder A (Left Side)**





**Welder B (Right Side)**

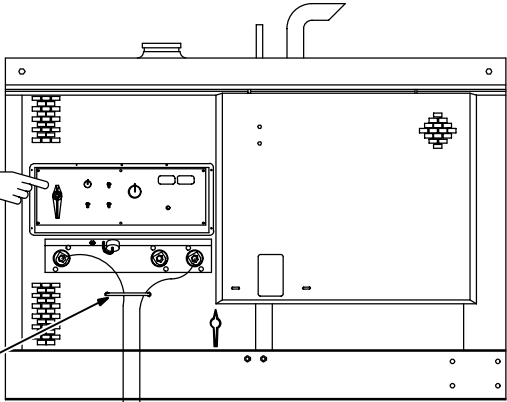

*Note position of Process Selector switches.*


*Note position of optional Polarity switch.*

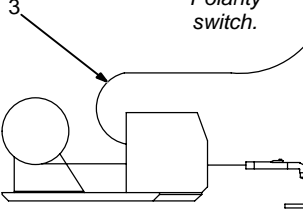

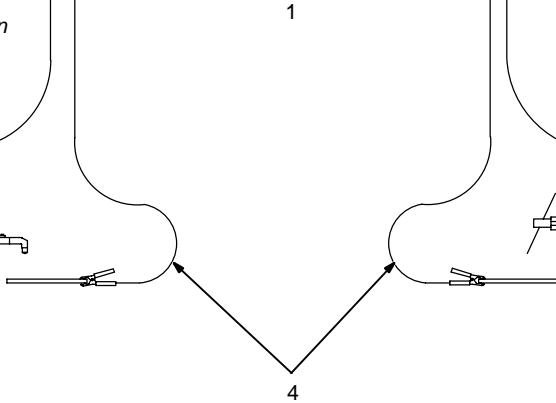

**▲ Stop engine.**

 **▲ Do not exceed machine duty cycle.**

 Use Dual Operator mode for CC and CV welding (see Section 5-1).

 
See Section 4-15 for proper cable size.

- 1 Strain Reliefs
- 2 Electrode Holder Cable
- 3 Wire Feeder Cable
- 4 Work Cables

For Stick/TIG welding Direct Current Electrode Positive (DCEP), connect work cable

to Negative (-) terminal and electrode holder cable to CC terminal.

For Stick/TIG Direct Current Electrode Negative (DCEN), connect work cable to CC terminal and electrode holder cable to Negative (-) terminal.


 Be sure Process Selector switches are set correctly. See Section 5-3.


For MIG and FCAW welding Direct Current Electrode Positive (DCEP), connect work cable to Negative (-) terminal and wire feeder cable to CV terminal.

For MIG and FCAW Direct Current Electrode Negative (DCEN), connect work cable to CV terminal and wire feeder cable to Negative (-) terminal.

For Stick/TIG welding on units with Polarity switch option, connect work cable to Work receptacle and electrode cable to Electrode receptacle.

 
For MIG/FCAW welding on units with Polarity switch option, connect work cable to Work receptacle and wire feeder cable to CV receptacle.

  Place optional Polarity switches in Reverse position when using CV weld receptacles. There is no CV weld output when switch is in Straight position.


 Be sure Process Selector and Polarity switches are set correctly. See Section 5-3.

Ref. 190 377 / 802 292-A

## 4-13. Making Dual Operator CC And CV Weld Connections w/ Common Work Cable

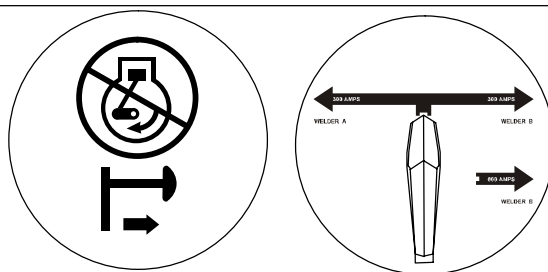

Tools Needed:

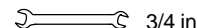


### ▲ INADEQUATE CABLE CONNECTIONS can cause serious damage to welding generator and create a hazardous condition.

When making weld connections with a common work cable, connect a weld cable of adequate size between the Negative (-) weld terminals, and connect a single weld cable of adequate size from the Welder B (right) Negative (-) terminal to the workpiece.

When using these connections as a common work terminal, all connections must be of the same polarity.

For a common work cable connection, the work cable must be able to carry the combined weld output of both modules (see Section 4-15 for proper cable size).

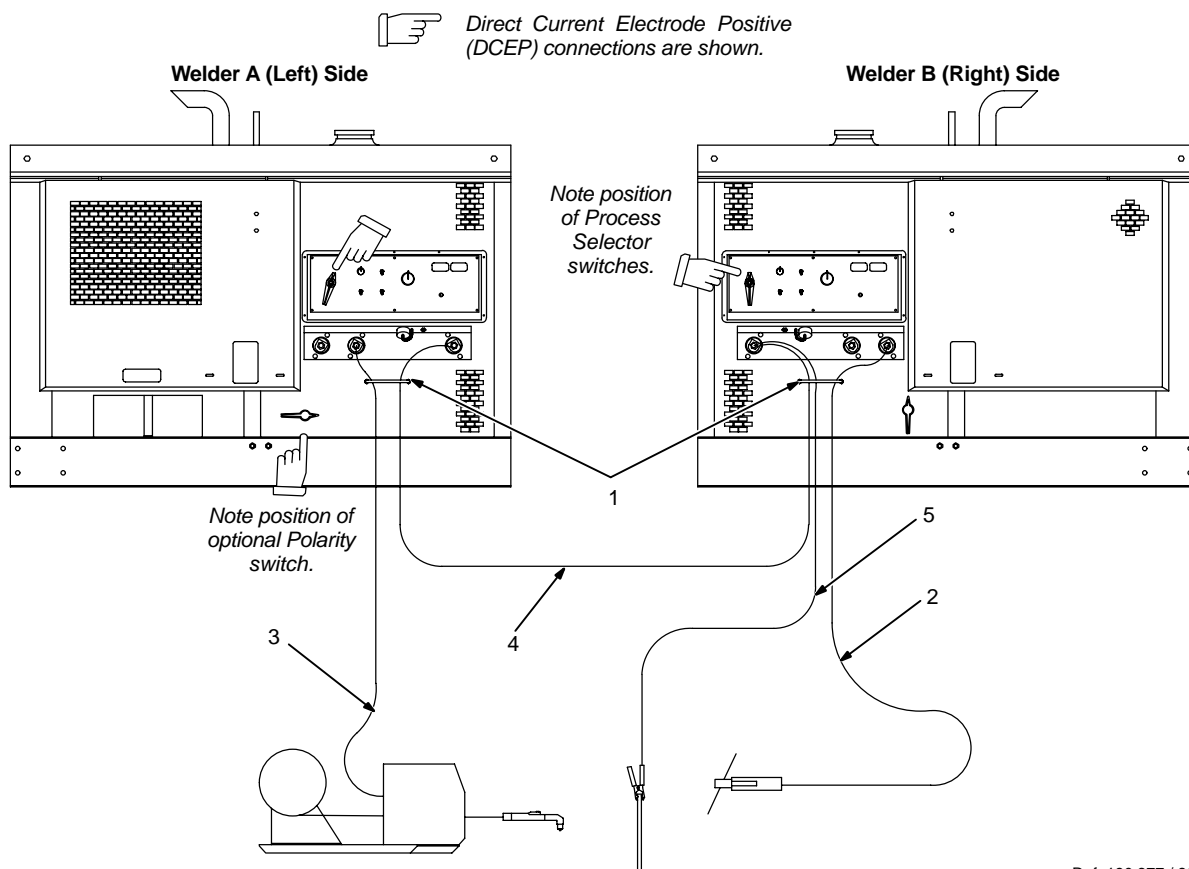

Ref. 190 377 / 802 292-A

### ▲ Stop engine.

### ▲ Do not exceed machine duty cycle.

☞ For common work connection, work cable must be able to carry combined weld output of both CC weld output terminals (see Section 4-15 for proper cable size).

☞ Use Dual Operator mode for CC and CV welding (see Section 5-1).

#### 1 Strain Reliefs

Route cables through strain reliefs.

#### 2 Electrode Holder Cable

#### 3 Wire Feeder Cable

#### 4 Work Jumper Cable

#### 5 Common Work Cable

For Direct Current Electrode Positive (DCEP), connect common work cable and work jumper cable to Welder B (right) Negative (-) terminal. Connect other end of work jumper cable to Welder A (left) Negative (-) terminal.

Connect electrode holder cable to either CC terminal.

Connect wire feeder cable to CV terminal on other side.

☞ Be sure Process Selector switches are set correctly. See Section 5-3.

For Direct Current Electrode Negative (DCEN), connect common work cable and work jumper cable to Welder B (right) CC terminal. Connect other end of work jumper cable to Welder A (left) CV terminal.

Connect electrode holder cable to either Negative (-) terminal, and wire feeder cable to remaining Negative (-) terminal.

If unit has the Polarity switch option, connect common work cable and work jumper cable to Welder B (right) Work receptacle. Connect other end of work jumper cable to Welder A (left) Work receptacle.



Connect electrode holder cable to either Electrode receptacle.

Connect wire feeder cable to CV receptacle on other side.

☞ Place optional Polarity switch in Reverse position when using CV weld receptacle. There is no CV weld output when switch is in Straight position.


☞ Be sure Process Selector and Polarity switches are set correctly. See Section 5-3.

## 4-14. Making Single Operator CC Weld Connections

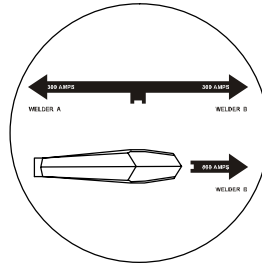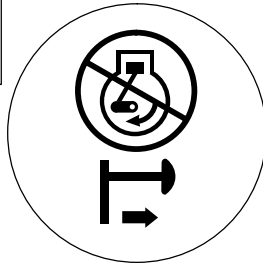


Direct Current Electrode Positive (DCEP) connections are shown.

**Welder A (left) Terminals Inactive In Single Operator Mode**

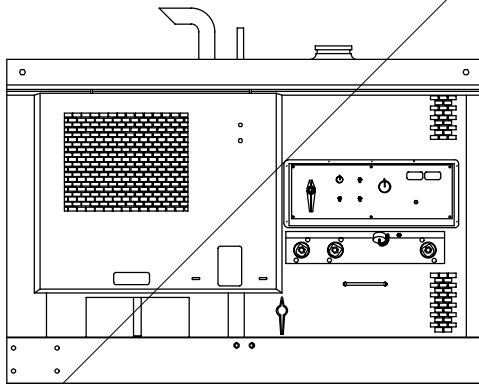


**Welder B(Right) Side**

Note position of Process Selector switch.

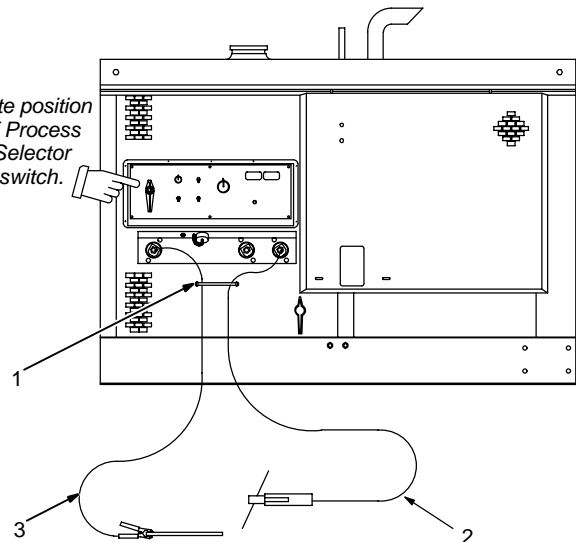

Tools Needed:

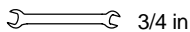

190 377 / 802 292-A

▲ **Stop engine.**

▲ **Do not exceed machine duty cycle.**

☞ *Welder A (left) weld output terminals are disabled in Single Operator mode. Connect only to Welder B (right) terminals for Single Operator mode operation.*

☞ *Use Single Operator mode for CC welding only. Welder A and Welder B CV weld output terminals are disabled in*

*Single Operator mode. (see Section 4-8).*

☞ *See Section 4-15 for proper cable size.*

See Section 4-15 for proper cable size.

1 Strain Relief

Route cables through strain reliefs.

2 Electrode Holder Cable

3 Work Cable

For Stick/TIG welding Direct Current Electrode Positive (DCEP), connect work cable

to Negative (-) terminal and electrode holder cable to CC terminal.

For Stick/TIG Direct Current Electrode Negative (DCEN), connect work cable to CC terminal and electrode holder cable to Negative (-) receptacle.

If unit has the Polarity switch option, connect work cable to Work terminal and electrode holder cable to Electrode receptacle.

☞ *Be sure Process Selector switch is set correctly. See Section 5-3.*

## 4-15. Selecting Weld Cable Sizes

Welding Amperes	Total Cable (Copper) Length In Weld Circuit Not Exceeding							
	100 ft (30 m) Or Less		150 ft (45 m)	200 ft (60 m)	250 ft (70 m)	300 ft (90 m)	350 ft (105 m)	400 ft (120 m)
	10 – 60% Duty Cycle	60 – 100% Duty Cycle	10 – 100% Duty Cycle					
100	4	4	4	3	2	1	1/0	1/0
150	3	3	2	1	1/0	2/0	3/0	3/0
200	3	2	1	1/0	2/0	3/0	4/0	4/0
250	2	1	1/0	2/0	3/0	4/0	2-2/0	2-2/0
300	1	1/0	2/0	3/0	4/0	2-2/0	2-3/0	2-3/0
350	1/0	2/0	3/0	4/0	2-2/0	2-3/0	2-3/0	2-4/0
400	1/0	2/0	3/0	4/0	2-2/0	2-3/0	2-4/0	2-4/0
500	2/0	3/0	4/0	2-2/0	2-3/0	2-4/0	3-3/0	3-3/0
600	3/0	4/0	2-2/0	2-3/0	2-4/0	3-3/0	3-4/0	3-4/0
700	4/0	2-2/0	2-3/0	2-4/0	3-3/0	3-4/0	3-4/0	4-4/0
800	4/0	2-2/0	2-3/0	2-4/0	3-4/0	3-4/0	4-4/0	4-4/0

\*Weld cable size (AWG) is based on either a 4 volts or less drop or a current density of at least 300 circular mils per ampere. Contact your distributor for the mm<sup>2</sup> equivalent weld cable sizes.

S-0007-E

## 4-16. Installing Ether Cylinder (Optional Ether Starting Aid)

- ▲ **Stop engine.**
- ▲ **Improper handling or exposure to ether can harm your health. Follow manufacturer's safety instructions on cylinder.**
- ▲ **Do not use Ether Starting Aid while engine is running.**

Open right side door.

1 Ether Cylinder  
2 Nozzle

Remove cover and clean cylinder nozzle.

3 Clamp  
4 Fitting  
5 Cap  
6 Valve

Remove cap and clean fitting. Install cylinder on fitting. Tighten clamp.

After installing cylinder, wait at least 10 minutes before using to let ether particles settle and prevent atomizer plugging.




Put cap on fitting when cylinder is removed.

ether1 7/96 – 153 382-A / 190 377 / 802 291-A

## 4-17. Remote 14 Receptacle Information

### NOTE



Place Welder Selector switch in Welder A/Welder B position (dual operator mode) for both remote receptacles to work. Welder A (left) remote receptacle output contactor and control is disabled when switch is in Welder B position.

 REMOTE 14	Socket*	Socket Information
24 VOLTS AC  OUTPUT (CONTACTOR)	A	24 volts ac. Protected by circuit breakers CB5 and CB6.
	B	Contact closure to A completes 24 volts ac contactor control circuit.
REMOTE OUTPUT CONTROL	C	Output to remote control; +10 volts dc in CV, 0 to +10 volts dc in CC.
	D	Remote control circuit common.
	E	0 to +10 volts dc input command signal from remote control.
A/V AMPERAGE VOLTAGE	F	Current feedback; 0 to +10 volts dc, 1 volt per 100 amperes.
	H	Voltage feedback; +1 volts dc per 10 arc volts.
115 VOLTS AC  OUTPUT (CONTACTOR)	I	115 volts, 15 amperes, 60 Hz ac. Protected by circuit breakers CB5 and CB6.
	J	Contact closure to I completes 115 volts ac contactor control circuit.
GND	K	Chassis common.
	G	Circuit common for 24 and 115 volts ac circuits.



\*The remaining sockets are not used.

# 4-18. Remote 14 Receptacle Connections

## Dual Operator Operation

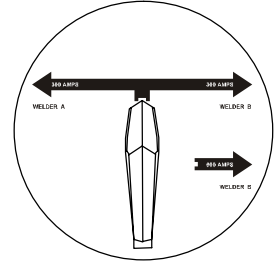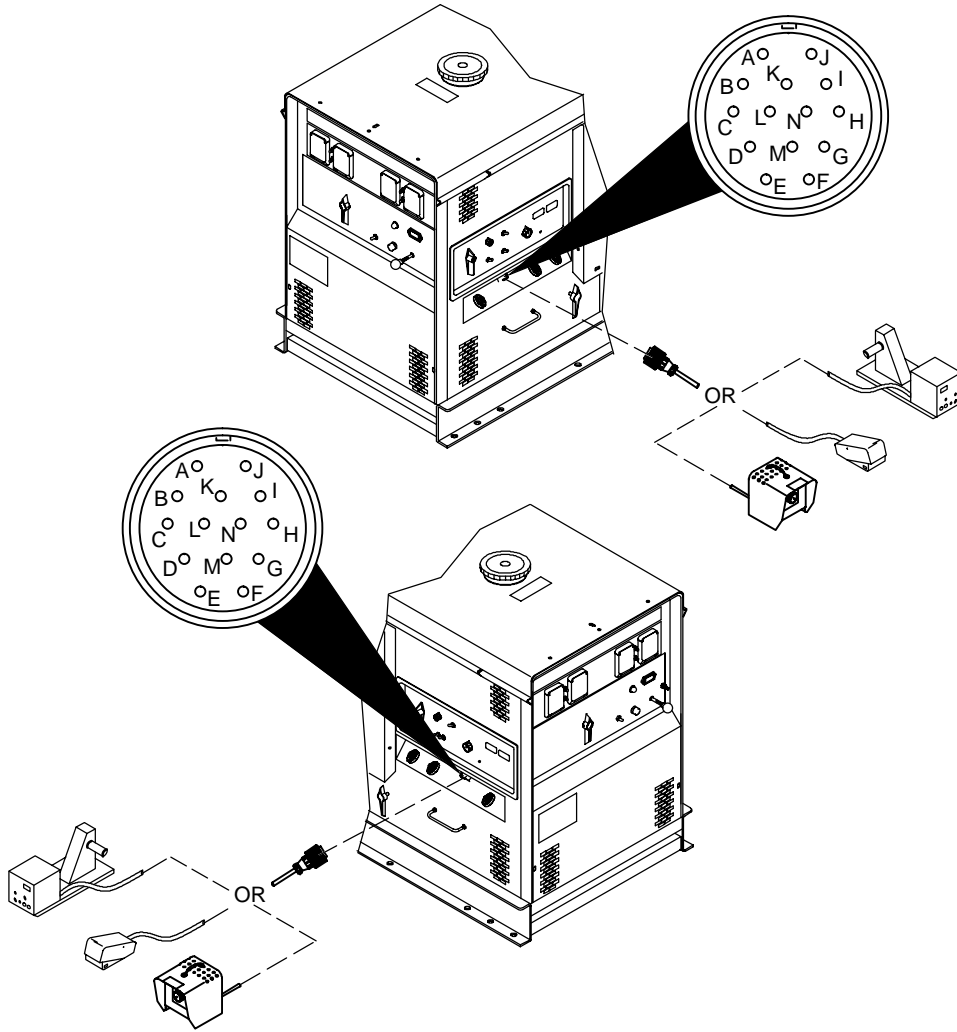

## Single Operator Operation

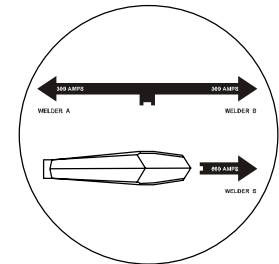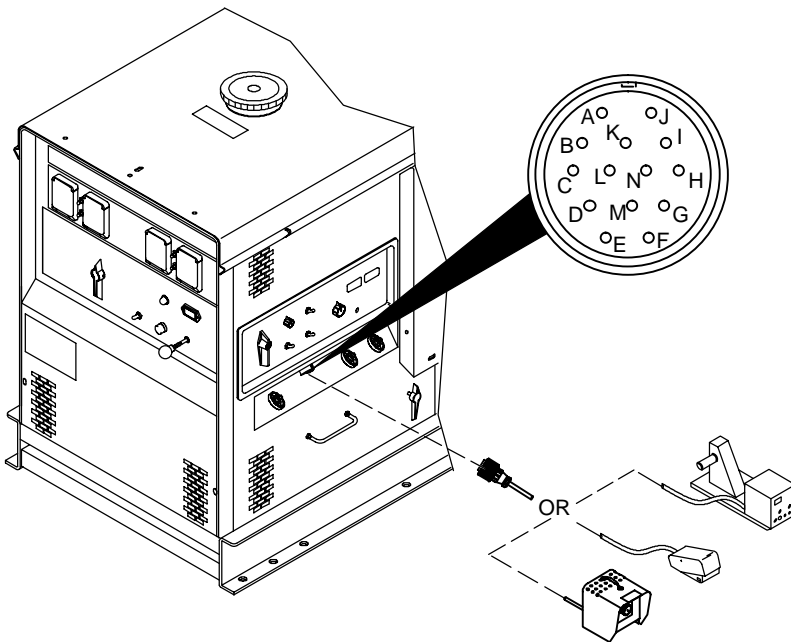

Ref. 802 291-A





# SECTION 5 – OPERATING THE WELDING GENERATOR

## NOTE

When facing the front panel, the Welder B controls and weld terminals are on the right and the Welder A side controls and weld terminals are on the left.

### 5-1. Engine Controls

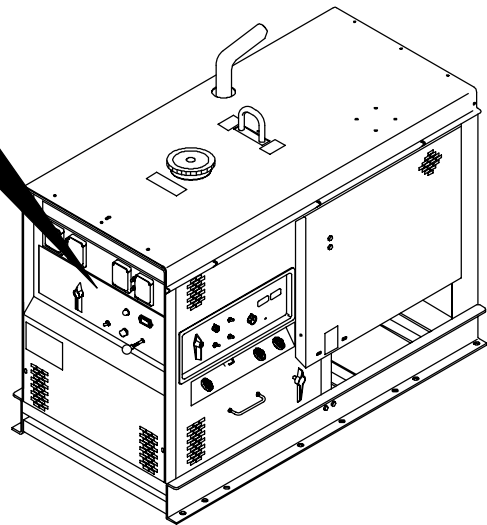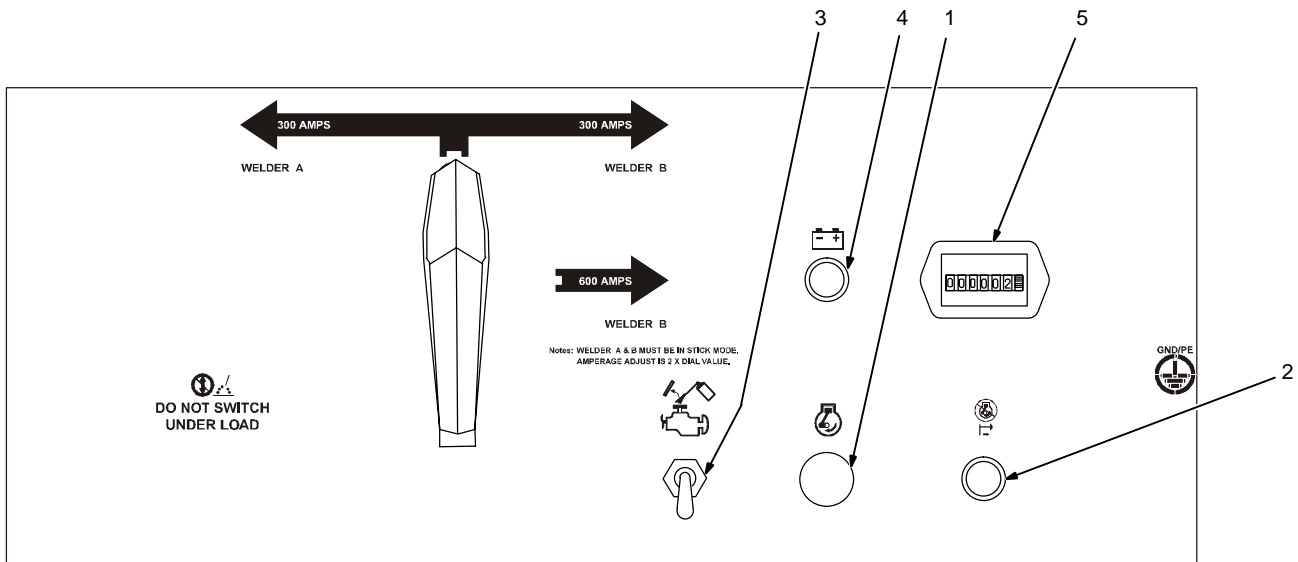

190 377

☞ See Section 5-3 for weld control descriptions.

- 1 Engine Start Button
  - 2 Manual Stop Control
  - 3 Ether Starting Aid Switch (Optional)
- Push switch up and release while cranking engine to release ether.

**To Start:** Press button and use Ether switch (if necessary). Release button when engine starts.

☞ If the engine does not start, let engine come to a complete stop before attempting restart.


**To Stop:** Pull control out and hold. Release control when engine stops.

4 Battery Charging Warning Light  
Light goes on when battery is not charging.

▲ If light goes on, stop engine and check engine belt.

5 Engine Hour Meter

## 5-2. Weld Controls (See Section 5-3)

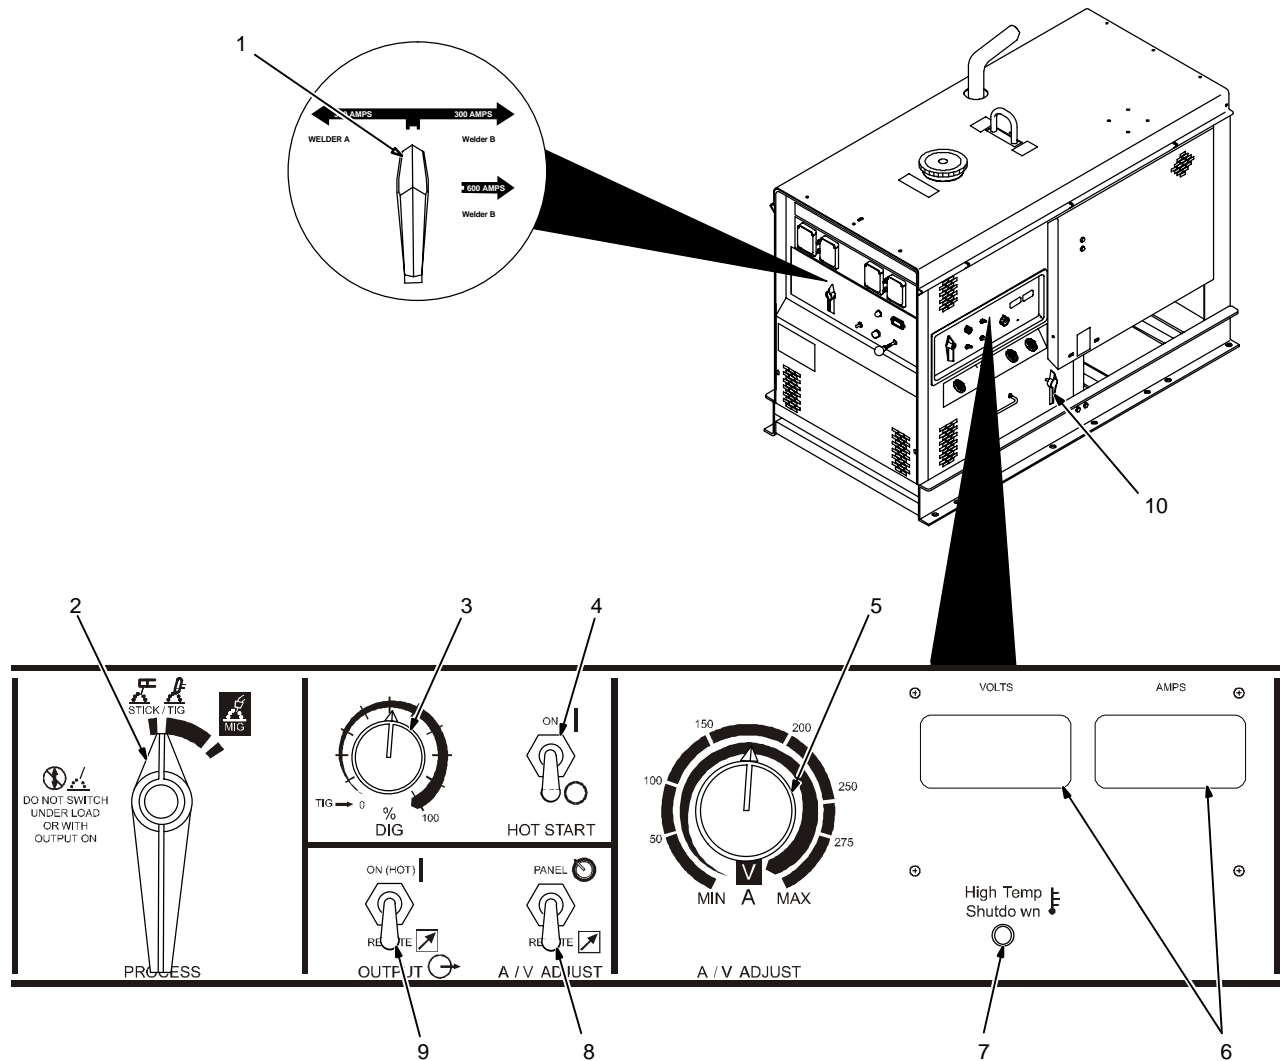

## 5-3. Weld Control Descriptions (See Section 5-2)



### 1 Welder Selector Switch

Use switch to select Dual Operator or Single Operator welding mode.

Place switch in Welder A/Welder B (dual operator) position for CC and CV output from Welder A (left) and Welder B (right) weld output terminals. Control the weld output from the terminals on each side using the weld controls on that same side.

Place switch in Welder B (single operator) position for CC weld output from Welder B (right) weld output terminals only. CV weld output terminals on both sides do not work when unit is in Single Operator mode.

**☞** *Welder A (left) weld output terminals are disabled in Single Operator mode. Connect only to Welder B (right) terminals for Single Operator operation.*

**☞** *When in single Operator mode, only CC weld output is available. Welder A (left) and Welder B (right) side CV weld output terminals are disabled in Single Operator mode. (see Section 4-8).*

### 2 Process Selector Switch

Use switch to select output for weld process. If switch is in Stick/Tig position, place Welder Selector switch in Welder A/Welder B or Welder B Position. If switch is in MIG position, place Welder Selector switch in Welder A/Welder B position only.

**☞** *CV weld output for MIG is only available when Welder Selector switch is in Welder A/Welder B position. **All weld output stops if either Process Selector switch is placed in MIG position when Welder Selector switch is in Welder B position.***

**☞** *Place optional Polarity switch in Reverse position when using CV weld output. There is no CV weld output when Polarity switch is in Straight position.*

**▲ Do not switch under load or with output on.**

### 3 Arc Force (Dig) Control

Use control to automatically increase amperage as arc length is decreased to assist in arc starts and reduce the chance of the electrode sticking in the puddle. Turn clockwise to increase short-circuit amperage. Set at minimum for TIG welding.

### 4 Hot Start Switch

Use switch to disable hot start circuit. Turn switch On for Stick (SMAW) and Submerged Arc (SAW) Welding, and Air Carbon Arc Cutting and Gouging (CAC-A). Turn switch Off for TIG (GTAW) welding.

When switch is in On position, higher short-circuit amperage helps arc starting. After arc starts, the front panel or remote Amperage/Voltage control setting determines weld amperage.

**☞** *The hot start circuit does not function when constant voltage (CV) welding.*

### 5 Amperage/Voltage Control

When Process Selector switch is in the Stick/TIG position, turn control clockwise to increase amperage. Read amperage from outer scale of control. The Amperage/Voltage control adjusts amperage only when constant current (CC) welding and does not adjust open-circuit voltage.

When Process Selector switch is in the MIG position, turn control clockwise to increase voltage. Voltmeter value changes as control knob is turned. Control can be adjusted while welding.

**☞** *When Welder Selector switch is in Welder B position (single operator mode), weld amperage is two times the value selected by the Amperage/Voltage control. For example, if Amperage/Voltage control is set to 250 A, weld output is actually 500A.*

### 6 Weld Meters

With Process Selector switch in the Stick/Tig position, meters read 0 (zero) with contactor off. Meters display actual output voltage and amperage with contactor on.

With Process Selector switch in the MIG position, voltmeter displays preset voltage with contactor off. Voltmeter and ammeter display actual output voltage and amperage with contactor on.

### 7 High Temperature Shutdown Light

Light goes on and weld output stops if weld rectifier gets too warm. Let unit cool before welding.

### 8 Remote Amperage/Voltage Control Switch

For front panel control, place switch in Panel position. For remote control, place switch in Remote position, and connect remote device (see Section 4-17).

### 9 Output (Contactor) Switch

For front panel control of output, place switch in On (Hot) position. For remote control of output, place switch in Remote position, and connect remote device (see Section 4-17).

**▲ Weld output terminals are energized when Output (Contactor) switch is On and engine is running.**

### 10 Polarity Switch (Optional)

**▲ Do not switch under load.**

Use switch to change polarity of weld output (see Sections 4-7 thru 4-14).

**☞** *Place optional Polarity switch in Reverse position when using CV weld receptacle. There is no CV weld output when switch is in Straight position.*

# SECTION 6 – OPERATING AUXILIARY EQUIPMENT

## 6-1. 120 Volt And 240 Volt Duplex Receptacles

190 376

**▲ Be sure equipment connected to the 240 V receptacles is GFCI-protected.**

- ☞ Auxiliary power is not affected by position of Welder Selector switch.
- ☞ 4 kVA/kW auxiliary power output is shared by all receptacles.

- 1 240 V 20 A AC Receptacle RC1
- 2 120 V 20 A AC GFCI Receptacle GFCI 1
- 3 240 V 20 A AC Receptacle RC2
- 4 120 V 20 A AC GFCI Receptacle GFCI 2

Receptacles supply 60 Hz single-phase power at weld/power speed.

If a ground fault is detected, the GFCI receptacle(s) circuit opens to disconnect the faulty equipment and the GFCI Reset button pops out. Check for damaged tools, cords, plugs, etc. connected to the receptacle. Press button to reset receptacle and resume operation.

- ☞ At least once a month, run engine at weld/power speed and press Test button to verify GFCI is working properly.

- 5 Circuit Breakers CB1 And CB2
- 6 Circuit Breakers CB3 And CB4

CB1 and CB2 protect RC1 and GFCI 1 from overload. If CB1 or CB2 opens, RC1 does not work. 120 volts may still be present at RC1. If CB2 opens, GFCI 1 does not work. Press button to reset breaker.

CB3 and CB4 protect RC2 and GFCI 2 from overload. If CB3 or CB4 opens, RC2 does not work. 120 volts may still be present at RC2. If CB4 opens, GFCI 2 does not work. Press button to reset breaker.

- ☞ If a circuit breaker continues to open, contact Factory Authorized Service Agent.

Maximum output from each 120 volt GFCI receptacle is 2.4 kVA/kW. Maximum output from each 240 volt duplex receptacle half is 4.0 kVA/kW.

Total combined output from all receptacles is 4 kVA/kW.

EXAMPLE: If 12 A is drawn from RC1, only 9 A is available at GFCI 1:  
 $(240\text{ V} \times 12\text{ A}) + (120\text{ V} \times 9\text{ A}) = 4.0\text{ kVA/kW}$

- ☞ Auxiliary power is not affected by weld output.

# SECTION 7 – MAINTENANCE & TROUBLESHOOTING

## 7-1. Routine Maintenance

**▲ Stop engine before maintaining.**

- ☞ See also Engine Manual and Maintenance Label. Service engine more often if used in severe conditions.

\* To be done by Factory Authorized Service Agent.

**8 h**

Wipe Up Spills.

OIL Full

Check Fluid Levels. See Section 4-5.

**FUEL WATER**


Drain Water From Fuel System. See Section 7-4.

**50 h**


Clean Air Filter. See Section 7-3.

Clean And Tighten Weld Terminals.


🕒 100 h

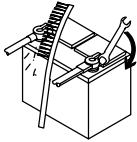

Clean And Tighten Battery Connections.

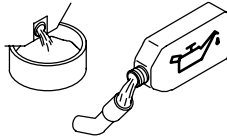


Change Oil. See Section 7-4.

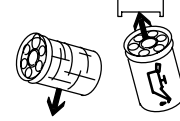


Change Oil Filter. See Section 7-4.

Check air cleaner hoses for cracks and loose clamps.

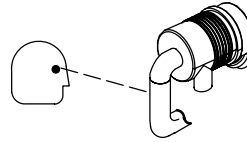


🕒 200 h

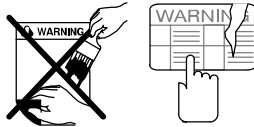


Replace Unreadable Labels.

🕒 250 h

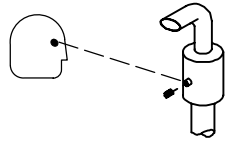


Check And Clean Spark Arrestor. See Section 7-9.

🕒 500 h

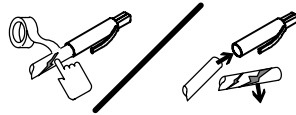


Repair Or Replace Cracked Cables.


🕒 1000 h

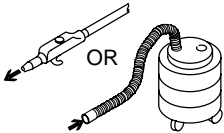


Blow Out Or Vacuum Inside. During Heavy Service, Clean Monthly.

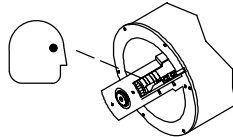


Service Welding Generator Brushes And Slip Rings. Service More Often In Dirty Conditions.\*

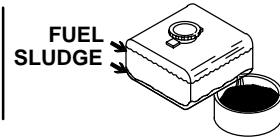


Drain Sludge From Fuel Tank.\*

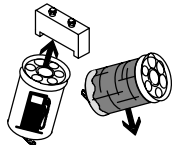

Change Fuel Filters. See Section 7-4.

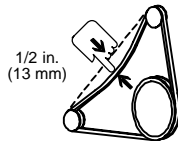



Check Belt Tension. See Section 7-7.

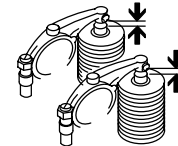

Check Valve Clearance.\*



## 7-3. Servicing Air Cleaner

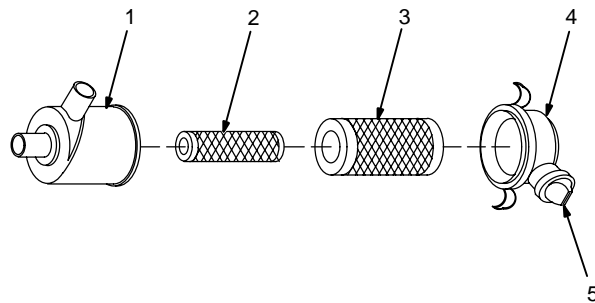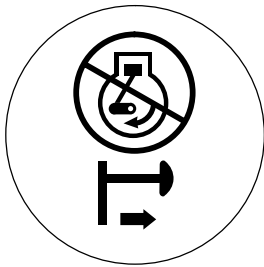

▲ **Stop engine.**

▲ **Do not run engine without air cleaner or with dirty element. Engine damage caused by using a damaged element is not covered by the warranty.**

☞ *The air cleaner primary element can be cleaned but the dirt holding capacity of the filter is reduced with each cleaning. The chance of dirt reaching the clean side of the filter while cleaning and the possibility of filter damage makes cleaning a risk. Consider the risk of unwarrantable equipment damage when determining whether to clean or replace the primary element.*

*If you decide to clean the primary element, we strongly recommend installing an optional safety element to provide additional engine protection. **Never clean a safety element.** Replace the safety element after servicing the primary element three times.*

Clean or replace primary element if dirty (see note above before cleaning). **Replace** primary element if damaged. Replace primary element yearly or after six cleanings.

- 7 Housing
- 8 Safety Element (Optional)
- 9 Primary Element
- 10 Dust Cap
- 11 Dust Ejector

**To clean air filter:**


Wipe off cap and housing. Remove cap and dump out dust. Remove element(s). Wipe dust from inside cap and housing with damp cloth. Reinstall safety element (if present). Reinstall cap.

▲ **Do not clean housing with air hose.**







Clean primary element with compressed air only.

Air pressure must not exceed 100 psi (690 kPa). Use 1/8 in (3 mm) nozzle and keep nozzle at least 2 in (51 mm) from inside of element. Replace primary element if it has holes or damaged gaskets.

Reinstall primary element and cap (dust ejector down).

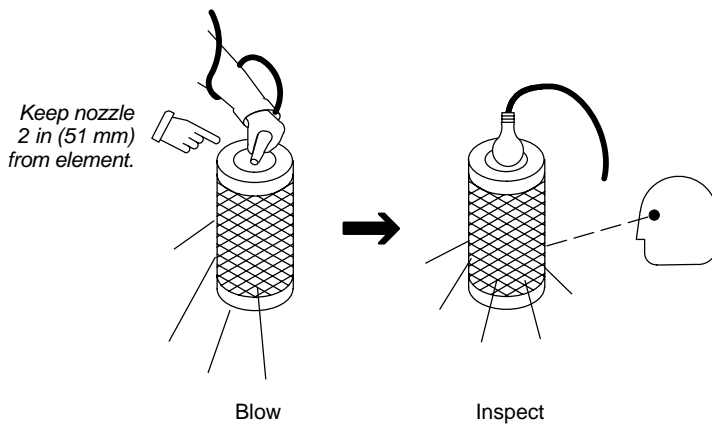

## 7-4. Servicing Fuel And Lubrication Systems

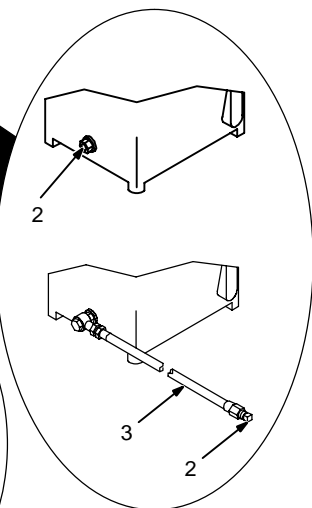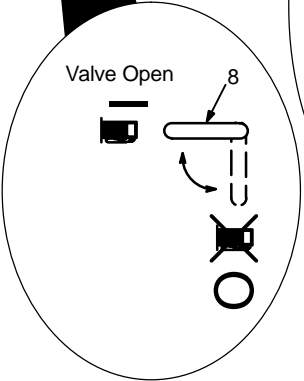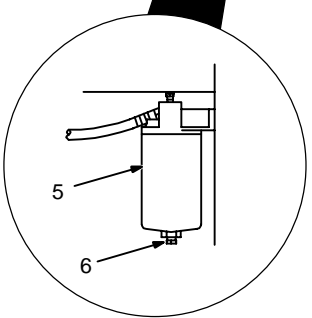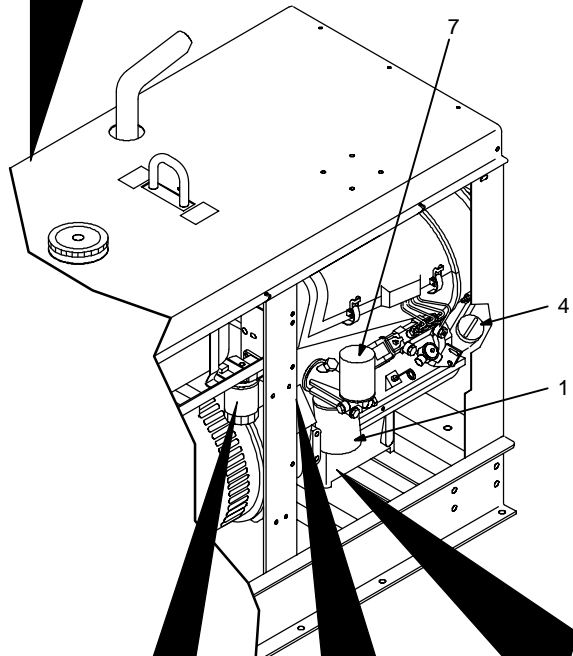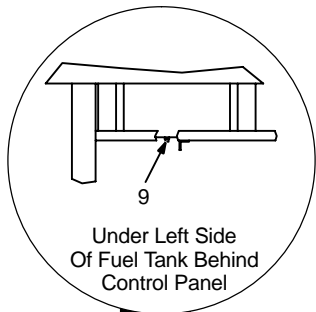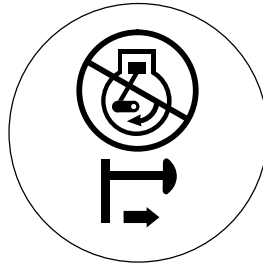

**▲ Stop engine and let cool.**

- 1 Oil Filter
- 2 Oil Drain Plug
- 3 Oil Drain Hose (Optional)
- 4 Oil Fill Cap
- 5 Primary Fuel Filter (Fuel/Water Separator)
- 6 Petcock
- 7 Secondary Fuel Filter
- 8 Fuel Shutoff Valve Lever
- 9 Sludge Drain Plug

**To change oil and filter:**

See engine manual.

**To drain water from fuel system:**

Open primary fuel filter petcock and drain water into metal container. Close petcock when water-free fuel flows.

**To replace primary fuel filter:**

Close shutoff valve and turn filter counterclockwise. Remove filter.

Apply thin coat of fuel to gasket on new filter. Install new filter and turn clockwise. Open shutoff valve. Bleed air from fuel system according to engine manual.

Inspect fuel line, and replace if cracked or worn.

**To replace secondary fuel filter:**

See engine manual.

**To drain sludge from fuel tank:**

This procedure should only be done by a Factory Authorized Service Agent.

Remove Welder A (left) control panel to access sludge drain plug.

Put metal container under drain and remove plug. Reinstall plug when sludge has drained.

Reinstall control panel.

**▲ After servicing, start engine and check for fuel leaks.**

**▲ Stop engine, tighten connections as necessary, and wipe up spilled fuel.**

Close doors.

**Tools Needed:**


3/8, 7/16, 3/4 in




## 7-5. Adjusting Engine Speed




Engine Speed (No Load)		RPM
Weld/Power		1850

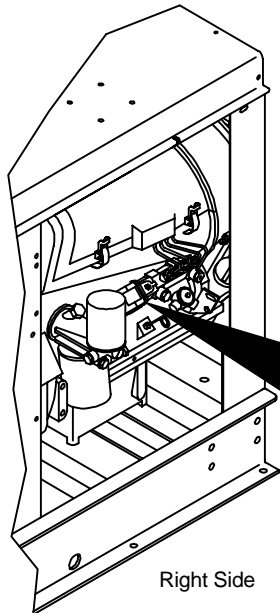

Right Side

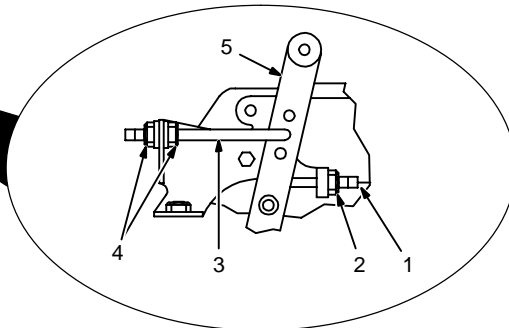

Tools Needed:

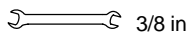

3/8 in

Engine speed is factory set and should not require adjustment. After tuning engine, check engine speed with tachometer. See table for proper no load speed. If necessary, adjust speed as follows:

- 1 High Speed Stop Screw
- 2 Lock Nut

Loosen nut. Turn screw out (toward front of engine) several turns.

- 3 Linkage
- 4 Lock Nuts

Loosen nuts. Start engine and move linkage until engine runs at weld/power speed. Tighten nuts.

### ▲ Stop engine.




- 5 Speed Control Lever

Turn screw in until screw touches lever. Tighten lock nut on screw.

Close side door.

Ref. 045 768-B

## 7-6. Servicing Optional Ether Starting Aid

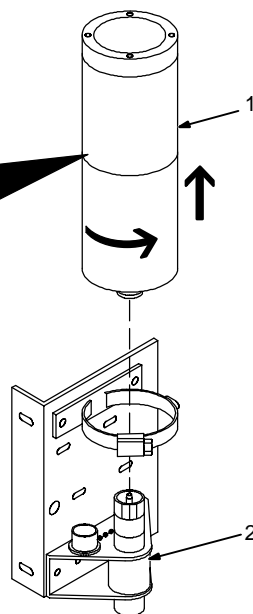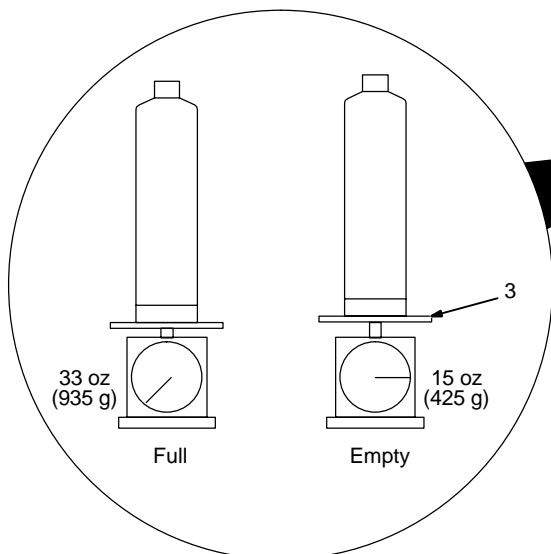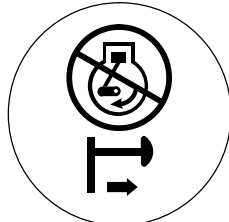

### ▲ Stop engine.

▲ Improper handling or exposure to ether can harm your health. Follow manufacturer's safety instructions on cylinder.

If engine does not start in cold weather, check ether cylinder as follows:

Remove cylinder from valve.



- 1 Ether Cylinder
- 2 Valve
- 3 Scale

Weigh cylinder to see if it is empty. Be sure atomizer is not plugged and valve fitting is clean.

Replace cylinder according to Section 4-16.

ether2 7/96 - 153 382-A / Ref. 190 377 / S-0692

## 7-7. Checking And Replacing Alternator Belt

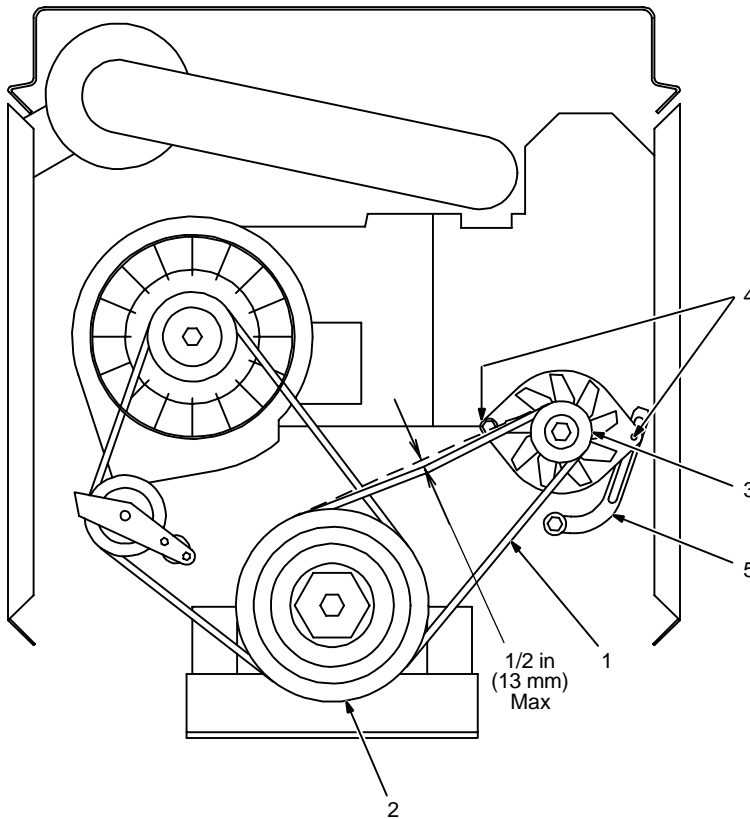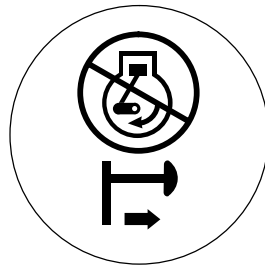

### ▲ Stop engine.

#### To check belt tension:

Remove rear panel.

- 1 Alternator V-Belt
- 2 Crank Pulley
- 3 Alternator Pulley

Place straight edge along top of pulleys. Pull down belt as far as it will go, then measure distance from belt to straight edge.

If measurement is less than 1/2 in (13 mm), belt is okay. If not okay, adjust belt tension.

#### To adjust belt tension:

- 4 Hex Nuts (2)
- 5 Alternator Bracket

Loosen nuts. Pivot alternator until belt is tight. Tighten nuts. Recheck tightness of belt. Readjust if necessary.

Replace belt if damaged or cracked.


#### To replace belt:

Loosen hex nuts and pivot alternator clockwise. Remove belt.


Install new belt, pivot alternator until belt is tight, and tighten nuts. Recheck tightness of belt after running engine 15 minutes.

Reinstall rear panel.

Tools Needed:

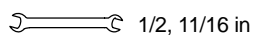

## 7-8. Resetting Fan Belt Safety Shutdown

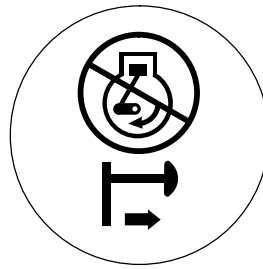

### ▲ Stop engine.

1 Cooling Fan V-Belt

See engine manual to replace or tighten belt.

If belt breaks or becomes loose, safety shutdown stops engine.

Correct problem, then reset safety shutdown as follows:

2 Rod



3 Stop

4 Bracket


5 Handle

Pull handle towards front of unit until stop snaps in position behind bracket.


Close door.

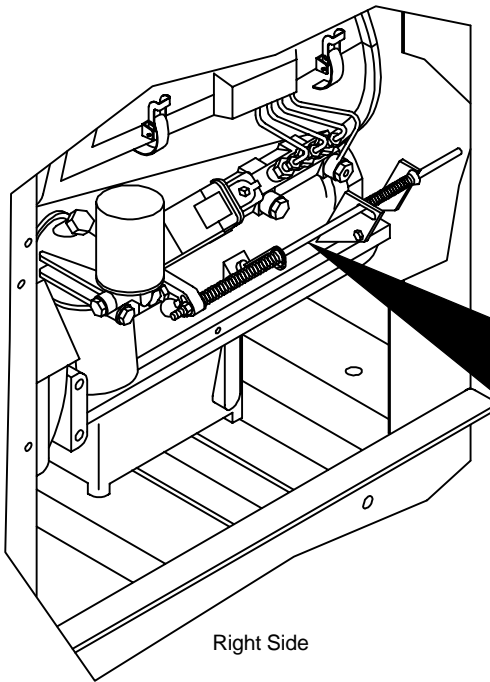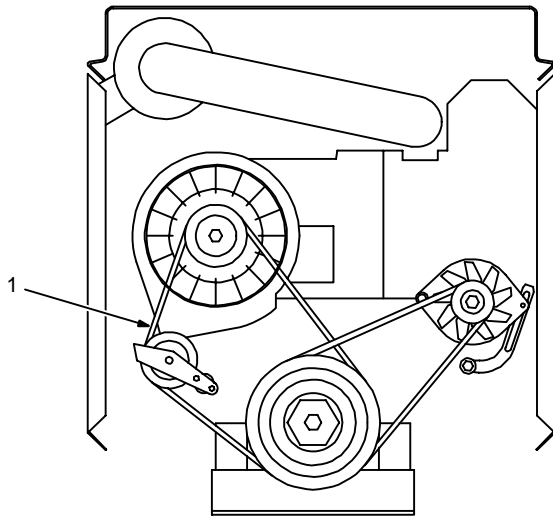

Right Side

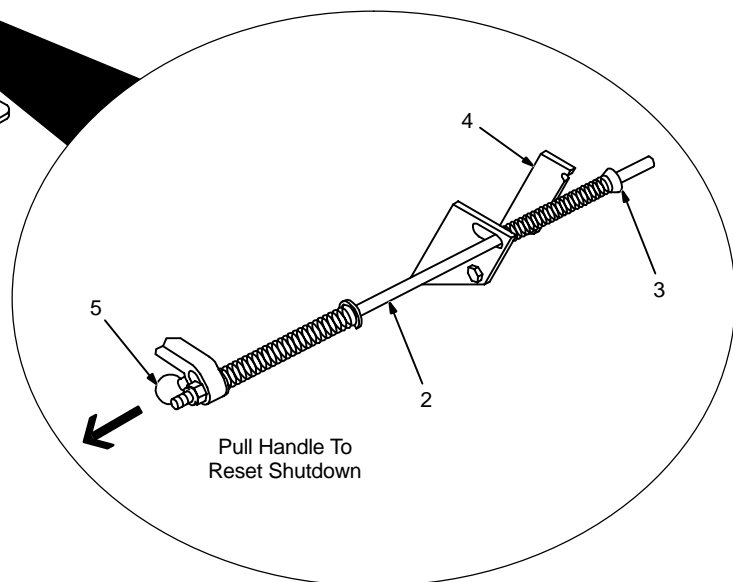





Tools Needed:

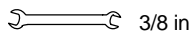

3/8 in

158 715 / Ref. 158 632 / Ref. 190 377

## 7-9. Inspecting And Cleaning Optional Spark Arrestor Muffler

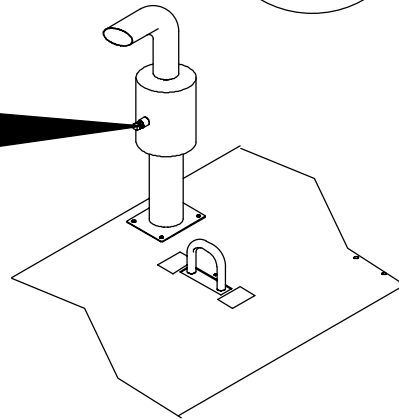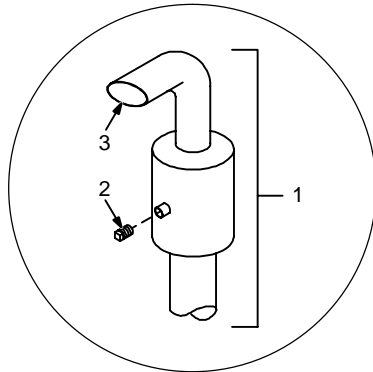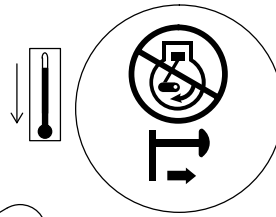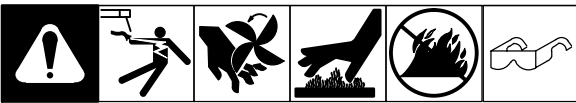

**▲ Stop engine and let cool.**

1 Spark Arrestor Muffler

2 Cleanout Plug

Remove plug and remove any dirt covering cleanout hole.


3 Exhaust Pipe

Start engine and run several minutes to blow out cleanout hole. If nothing blows out of hole, briefly cover end of exhaust pipe with fire-proof material.

**▲ Stop engine and let cool.**


Reinstall cleanout plug.

Tools Needed:

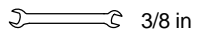


Ref. 800 633-B / Ref. 190 377

## 7-10. Circuit Protection

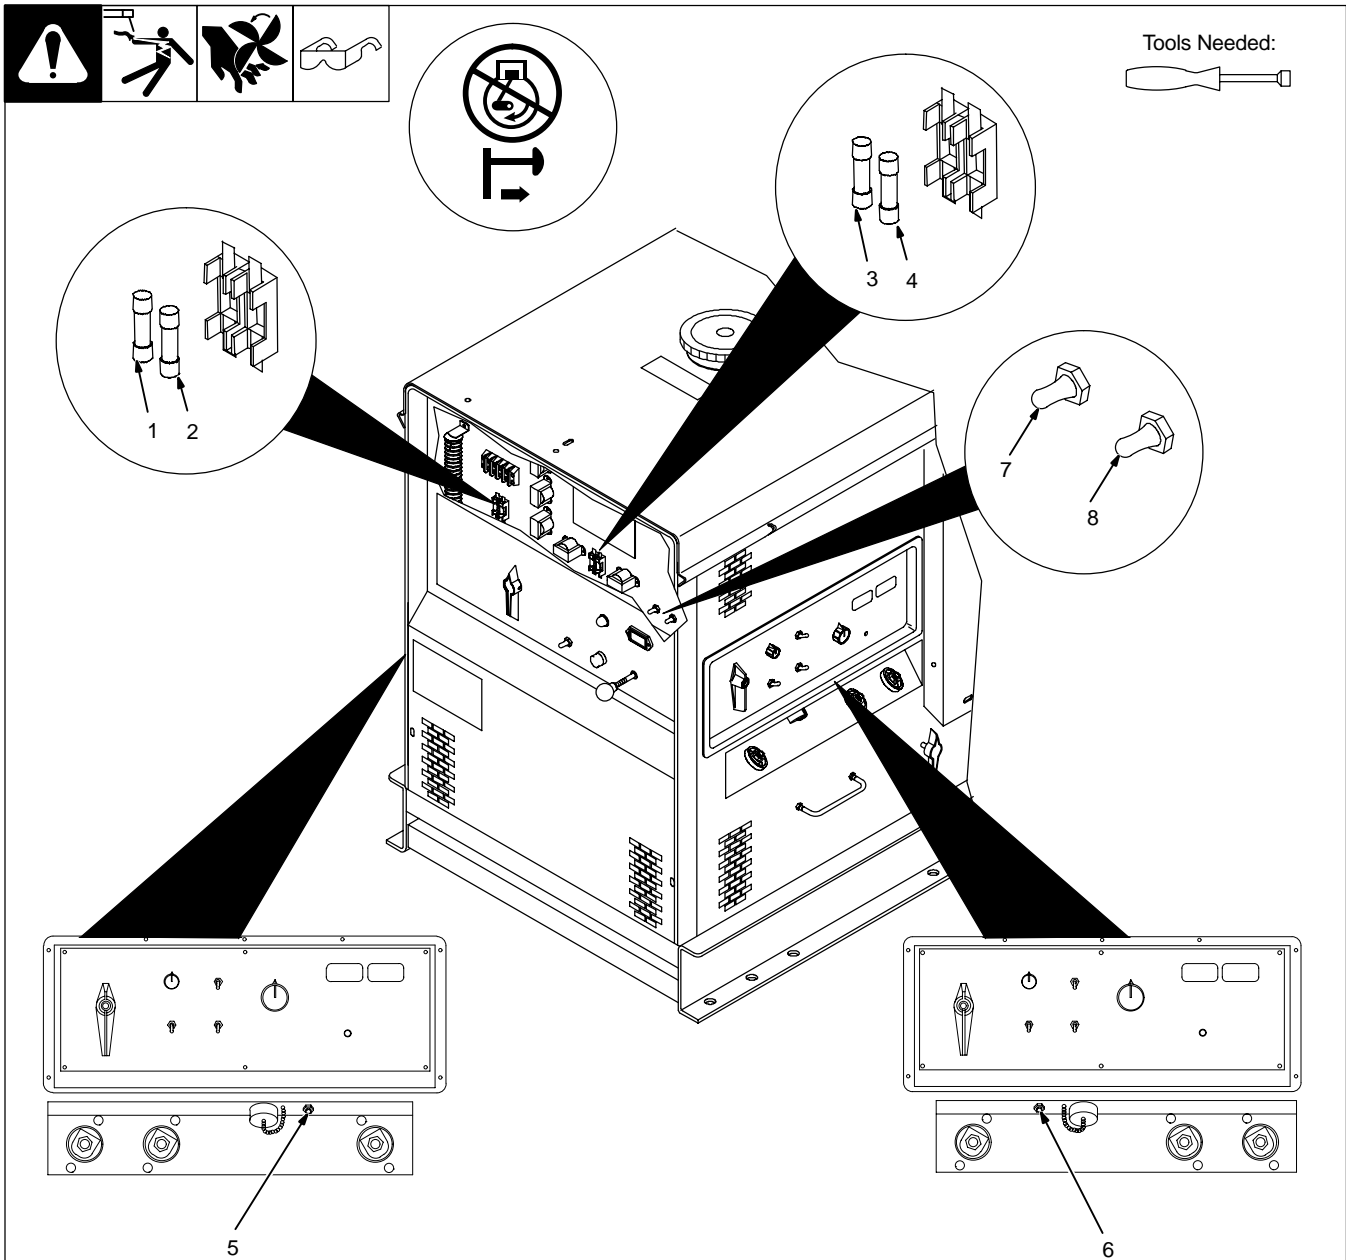

Tools Needed:

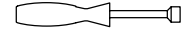

### ▲ Stop engine.

☞ *When a circuit breaker or fuse opens, it usually indicates a more serious problem exists. Contact Factory Authorized Service Agent.*

- 1 Fuse F1
- 2 Fuse F2
- 3 Fuse F3
- 4 Fuse F4

Open front panel.

Fuse F1 protects the exciter excitation winding. If F1 opens, there is no weld or auxiliary power output on both sides.

Fuse F2 protects the exciter main field excitation winding. If F2 opens, there is no weld output on both sides.

Fuse F3 protects Welder A (left) control board PC1. If F3 opens, Welder A (left) weld output stops.

Fuse F4 protects Welder B (right) control board PC1. If F4 opens, Welder B (right) weld output stops.

- 5 Circuit Breaker CB5
- 6 Circuit Breaker CB6
- 7 Circuit Breaker CB7
- 8 Circuit Breaker CB8

Circuit Breaker CB5 protects the 24 volt and 115 volt ac output to Welder A (left) remote receptacle RC9. If CB5 opens, Welder A (left) RC9 24 and 115 volt ac output stops.

Circuit Breaker CB6 protects the 24 volt and 115 volt ac output to Welder B (right) remote receptacle RC8. If CB6 opens, Welder B (right) RC8 24 and 115 volt ac output stops.

Circuit Breaker CB7 protects field current regulator board PC4. If CB7 opens, weld

and auxiliary power output on both sides stops.

Circuit Breaker CB8 protects the generator field flashing circuit. If CB8 opens, weld and auxiliary power output may continue if generator maintains excitation. Weld and auxiliary power output stops if generator requires field flashing circuit to restore excitation.


Press button to reset circuit breaker.

- 9 Thermostats TP3 And TP4 (Internal – Not Shown)

Thermostat TP3 protects Welder A (left) SR2 rectifier and TP4 protects Welder B (right) SR3 rectifier from overheating. If TP3 or TP4 opens, Welder A (left) or Welder B (right) weld output stops and the High Temp. Shutdown light goes on. Wait fifteen minutes for module to cool and thermostat to automatically reset. Reduce amperage, voltage, or duty cycle before welding.

Ref. 802 300 / Ref. 802 292-A

## 7-11. Troubleshooting

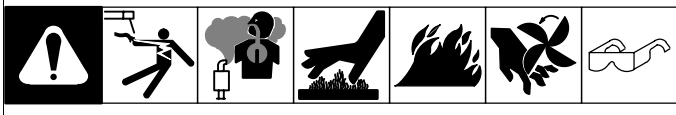

### A. Welding

Trouble	Remedy
No weld output on either side; auxiliary power output okay.	Place Output (Contactor) switches in On (Hot) position, or place switches in Remote position and connect remote contactors to remote receptacles RC8 and RC9 (see Section 5-3).
	Unit overheated (High Temp. Shutdown light goes on); wait several minutes for thermostat(s) TP3 and TP4 to reset (see Section 7-10).
	Check position of Process Selector switches and Welder Selector switch. All weld output stops if either Process Selector switch is placed in CV position when Welder Selector switch is in Welder B position (see Sections 5-1 and 5-3).
	Check fuse F2, and replace if open (see Section 7-10). Have Factory Authorized Service Agent check field current regulator board PC4.
	Have Factory Authorized Service Agent check field current regulator board PC4 and Welder Selector switch S2.
No weld output on either side and no auxiliary power output.	Disconnect equipment from auxiliary power receptacles during start-up.
	Check fuse F1, and replace if open (see Section 7-10).
	Reset circuit breakers CB7 and/or CB8 (see Section 7-10).
	Have Factory Authorized Service Agent check brushes and slip rings, field excitation circuit, rotor, stator, and field current regulator board PC4.
No Welder A (left) weld output; Welder B (right) weld output okay.	Check fuse F3, and replace if open (see Section 7-10).
	Check position of Welder Selector switch. Welder A (left) weld output stops when Welder Selector switch is placed in Welder B position (see Section 5-1).
	Unit overheated (High Temp. Shutdown light goes on); wait several minutes for thermostat(s) TP3 to reset (see Section 7-10).
	Have Factory Authorized Service Agent check Welder A (left) contactor circuit.
No Welder B (right) weld output; Welder A (left) weld output okay;	Check fuse F4, and replace if open (see Section 7-10).
	Unit overheated (High Temp. Shutdown light goes on); wait several minutes for thermostat(s) TP4 to reset (see Section 7-10).
	Have Factory Authorized Service Agent check Welder B (right) contactor circuit.
Low Welder A (left) weld output; Welder B (right) output okay.	Check position of Process Selector switch (see Section 5-3).
	Increase Amperage/Voltage control setting.
	Have Factory Authorized Service Agent check main rectifier SR2, synchronization transformers T5, T6 and T7, and control board PC1.
Low Welder B (right) weld output; Welder A (left) weld output okay.	Check position of Process Selector switch (see Section 5-3).
	Increase Amperage/Voltage control setting.
	Have Factory Authorized Service Agent check main rectifier SR3, synchronization transformers T8, T9 and T10, and control board PC5.
Low weld output on both sides.	Check engine speed, and adjust if necessary (see Section 7-5).
	Check position of Process Selector switch(s) (see Section 5-3).
	Increase Amperage/Voltage controls settings.
	Have Factory Authorized Service Agent check field current regulator board PC4.

<b>Trouble</b>	<b>Remedy</b>
High weld output on both sides.	Have Factory Authorized Service Agent check field current regulator board PC4.
Erratic weld output on either side.	Check and tighten connections inside and outside unit.
	Be sure connection to work piece is clean and tight.
	Use dry, properly stored electrodes.
	Remove excessive coils from weld cables.
	Check Process Selector switch(s) connections and contacts.
	Have Factory Authorized Service Agent check Welder Selector switch S2.
Low open-circuit voltage on both sides.	Check engine speed, and adjust if necessary (see Section 7-5).
	Have Factory Authorized Service Agent check field current regulator board PC4.
Low open-circuit voltage on either side.	Increase Amperage/Voltage control setting.
	Have Factory Authorized Service Agent check main rectifiers SR2 and SR3, synchronization transformers T5 thru T10, and control board PC1 or PC5.
No control of weld output on either side.	Place A/V Control switch in Panel position, or place switch in Remote position and connect remote control to remote receptacle RC8 or RC9 (see Sections 4-17 and 5-3).
	Have Factory Authorized Service Agent check control board PC1 or PC5.
No voltage control on either side; open-circuit voltage present.	Repair or replace remote device.
	Place A/V Control switch in Panel position, or place switch in Remote position and connect remote control to remote receptacle RC8 or RC9 (see Sections 4-17 and 5-3).
	Check connections to Remote receptacle RC8 and RC9.
	Have Factory Authorized Service Agent check control board PC1 or PC5.
Wire feeder does not work (either side).	Reset Welder A (left) circuit breaker CB5 or Welder B (right) circuit breaker CB6 (see Section 7-10).
	Check position of Process Selector switches and Welder Selector switch. All weld output stops if either Process Selector switch is placed in CV position when Welder Selector switch is in Welder B position (see Sections 5-1 and 5-3).
	Check connections to Remote 14 receptacle RC8 (see Section 4-17).
	Place optional Polarity switches in Reverse position. There is no CV weld output when Polarity switch is in Straight position.
	Have Factory Authorized Service Agent check brushes and slip rings, and field excitation circuit.
	Repair or replace wire feeder.

## **B. Auxiliary Power**

<b>Trouble</b>	<b>Remedy</b>
No output at auxiliary power receptacles.	Reset receptacle circuit breakers (see Section 6-1).
	Press GFCI reset button on 120 volt GFCI receptacles (see Section 6-1).
	Check fuse F1, and replace if open (see Section 7-10).
	Check receptacle(s) for continuity and proper connections. Replace receptacle(s) if necessary.
	Have Factory Authorized Service Agent check brushes and slip rings.
High or low output at auxiliary power receptacles.	Check engine speed, and adjust if necessary (see Section 7-5).

### C. Engine

Trouble	Remedy
Engine will not crank.	Check battery voltage, and replace battery if necessary.
	Check battery connections and tighten if necessary.
	Have Factory Authorized Service Agent check Engine Start Button PB1.
Engine cranks but does not start.	Check fuel level (see Section 4-5).
	Open fuel valve (see Section 4-5).
	Check battery voltage, and replace battery if necessary.
	Check blower fan V-belt according to engine manual. Safety shutdown stops engine if belt is broken or loose (see Section 7-8).
	Check engine charging system according to engine manual.
	See engine manual.
Engine suddenly stops.	Check blower fan V-belt according to engine manual. Safety shutdown stops engine if belt is broken or loose (see Section 7-8).
	See engine manual.
Battery discharges between uses.	Clean battery, terminals, and posts with baking soda and water solution; rinse with clear water.
	Periodically recharge battery (approximately every 3 months).
	Replace battery.
	Check voltage regulator and connections according to engine manual.
Engine uses oil during run-in period; wetstacking occurs.	Dry engine (see Section 9).





# SECTION 8 – ELECTRICAL DIAGRAMS

## SLAVE SIDE-A

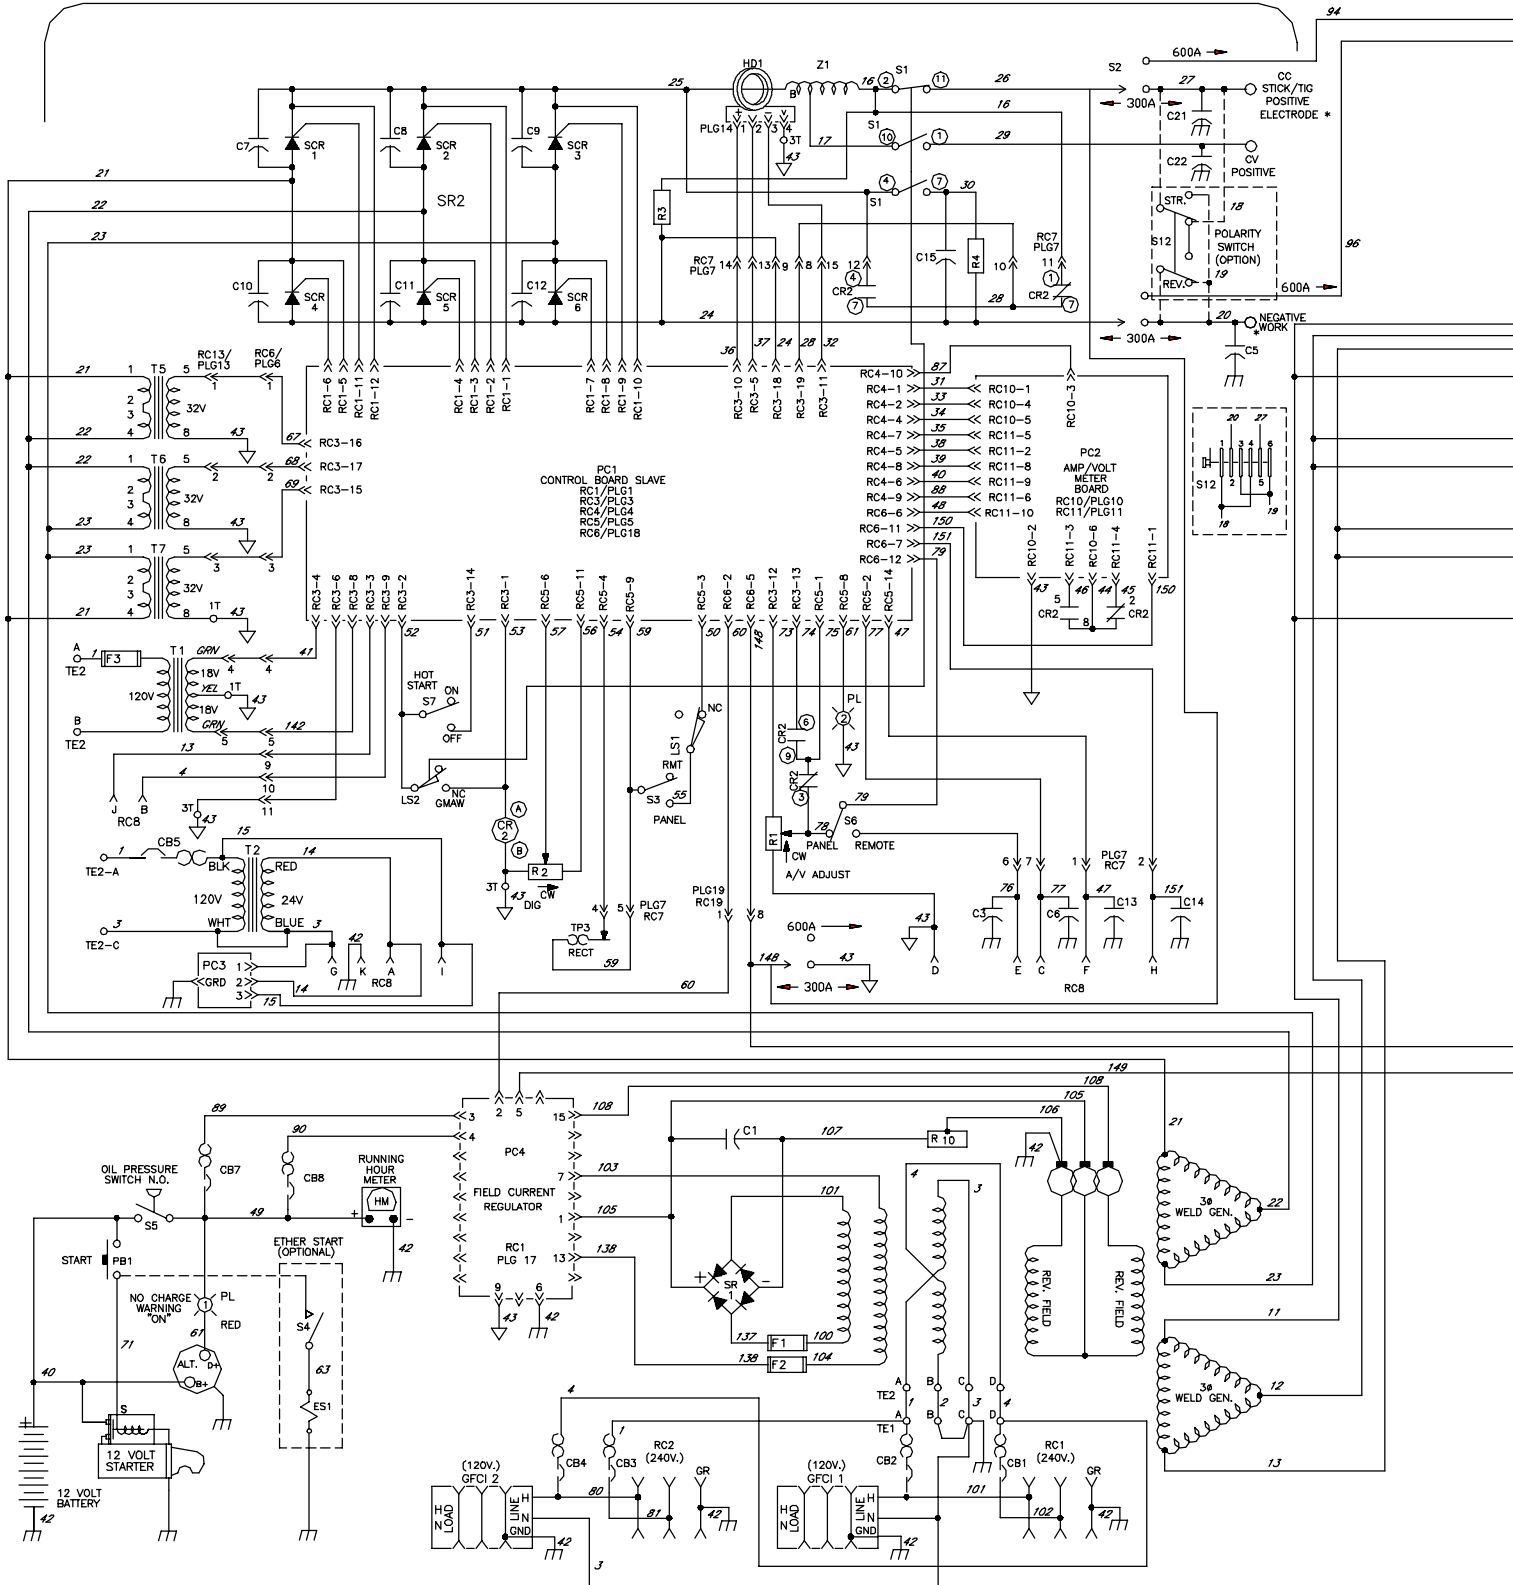




Figure 8-1. Circuit Diagram For Welding Generator

**⚠ WARNING**

- Do not touch live electrical parts.
- Disconnect input power or stop engine before servicing.
- Do not operate with covers removed.
- Have only qualified persons install, use, or service this unit.


**ELECTRIC SHOCK HAZARD**

## MASTER SIDE-B

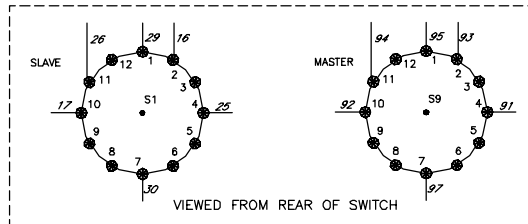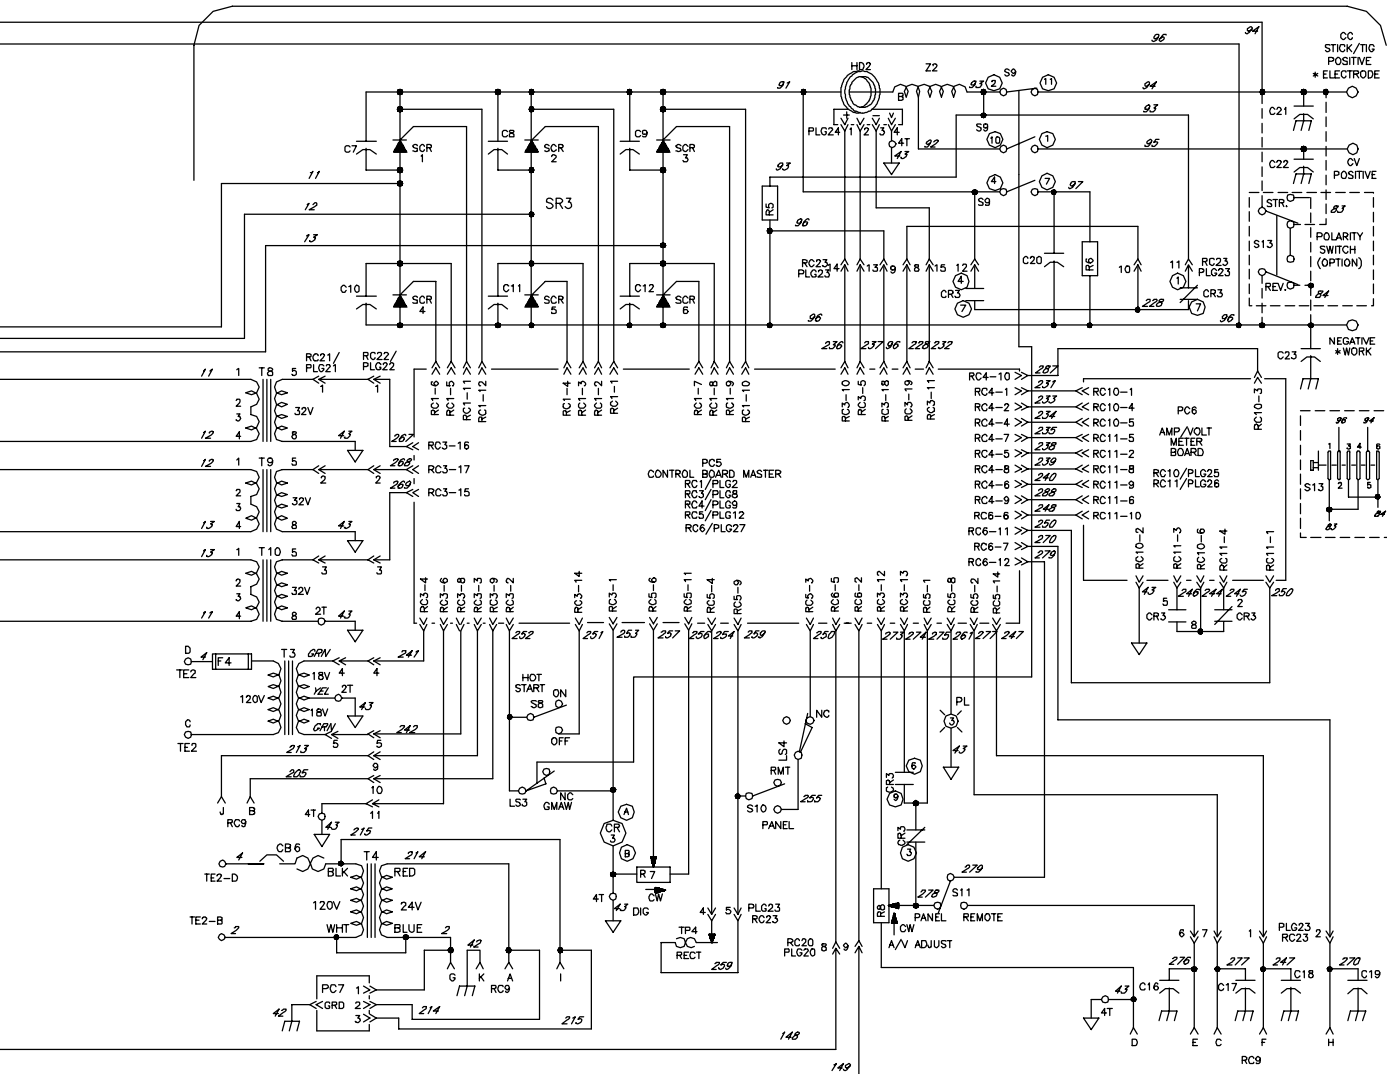

PC1 SLAVE RC6/PLG18	RC19/ PLG19	RC20/ PLG20	PC5 MASTER RC6/PLG27
RC6-14	143	3	RC6-14
RC6-8	144	4	RC6-10
RC6-13	145	5	RC6-3
RC6-9	146	6	RC6-9
RC6-1	147	7	RC6-1

\* WITH THE POLARITY SWITCH OPTION  
LEADS 20 & 27 ON SIDE A AND  
LEADS 94 & 96 ON SIDE B GO TO  
THE POLARITY SWITCH RATHER THAN  
THE OUTPUT STUDS. THE OUTPUT  
STUDS ARE LABELED ELECTRODE AND  
WORK.

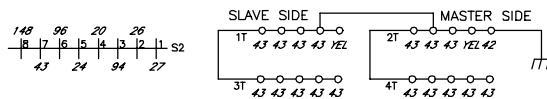


D-192298-F

# SECTION 9 – RUN-IN PROCEDURE

run\_in3 6/99

## 9-1. Wetstacking

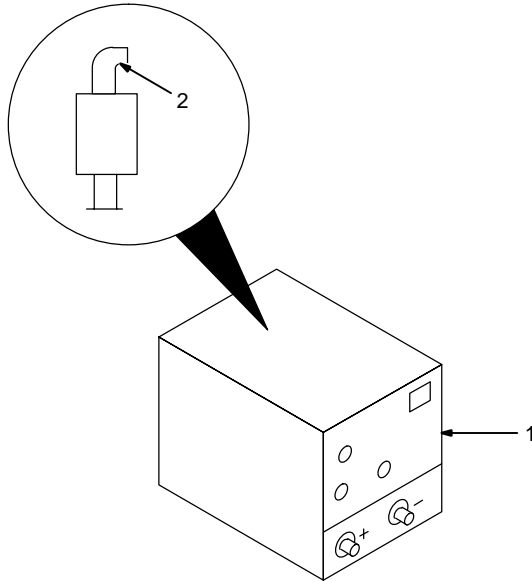

### 1 Welding Generator

Run diesel engines near rated output during run-in period to properly seat piston rings and prevent wetstacking. See nameplate or rating label to find rated output.

**☞ Do not idle engine longer than necessary. Piston rings seat faster if engine runs at weld/power rpm, and the welding generator is kept loaded during run-in.**


### 2 Engine Exhaust Pipe

Wetstacking is unburned fuel and oil in the exhaust pipe and occurs during run-in if the engine is run too long at light load or idle rpm.

If exhaust pipe is coated with a wet, black, tar-like substance, dry the engine using one of the following run-in procedures.

See the engine manual for additional engine run-in information.

## 9-2. Run-In Procedure Using Load Bank

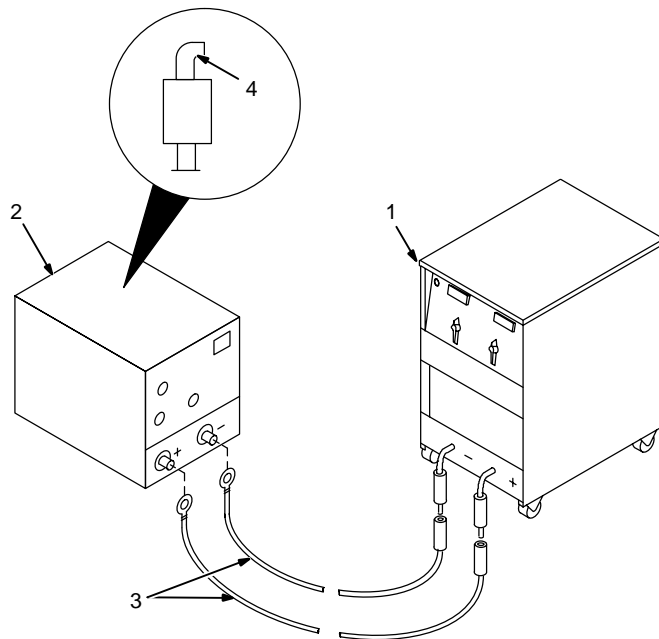

- ▲ Stop engine.
- ▲ Do not touch hot exhaust pipe, engine parts, or load bank/grid.
- ▲ Keep exhaust and pipe away from flammables.

### 1 Load Bank

Turn all load bank switches Off. If needed, connect load bank to 115 volts ac wall receptacle or generator auxiliary power receptacle.

### 2 Welding Generator

Place Welder Selector switch in Welder B position (600 Amps), A/V control in minimum position, and both Process Selector switches in Stick/TIG position.

### 3 Weld Cables

Connect load bank to generator Welder B (right) weld output terminals using proper size weld cables with correct connectors. Observe correct polarity.

Start engine and run for several minutes.

Set load bank switches and then adjust generator A/V control so load equals 350 Amps at 40 volts.

Check generator and load bank meters after first five minutes then every fifteen minutes to be sure generator is loaded properly.

☞ Check oil level frequently during run-in; add oil if needed.


After one hour (minimum) place A/V control in minimum position, then turn off load bank to remove load. Run engine several minutes at no load.

- ▲ Stop engine and let cool.

### 4 Engine Exhaust Pipe

Repeat procedure if wetstacking is present.

## 9-3. Run-In Procedure Using Resistance Grid

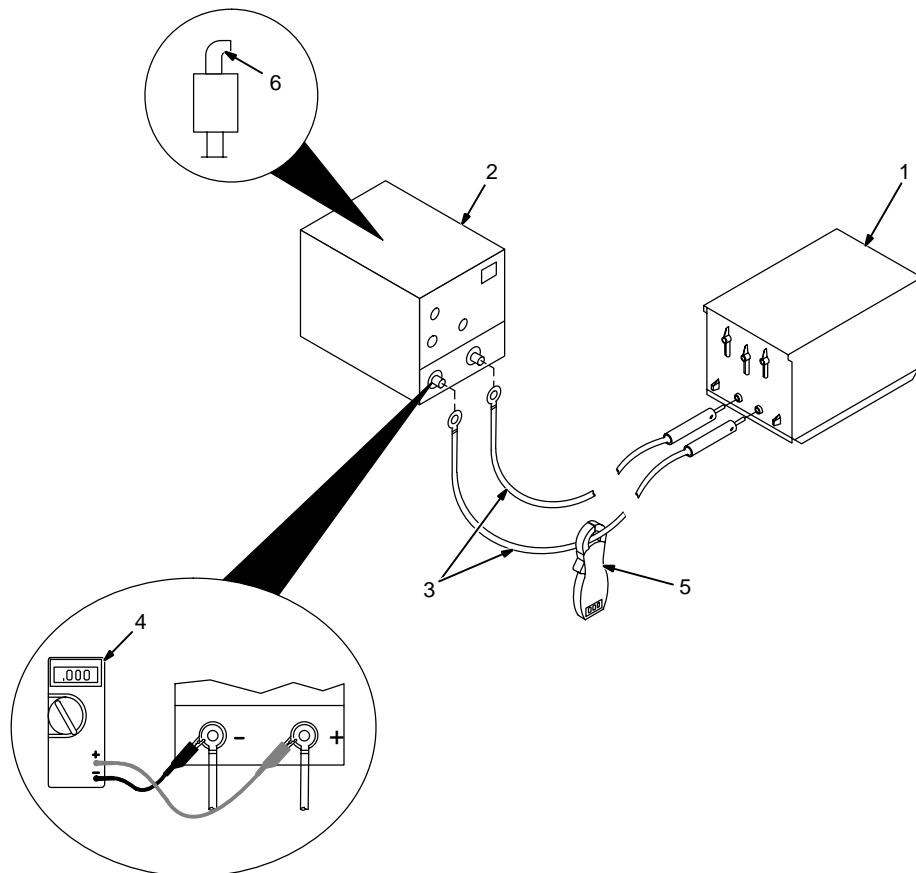

▲ **Stop engine.**

▲ **Do not touch hot exhaust pipe, engine parts, or load bank/grid.**

▲ **Keep exhaust and pipe away from flammables.**

1 Resistance Grid

Use grid sized for generator rated output.

Turn Off grid.

2 Welding Generator

Place Welder Selector switch in Welder B position (600 Amps), A/V control in minimum position, and both Process Selector switches in Stick/TIG position.

3 Weld Cables

Connect grid to generator Welder B (right) weld output terminals using proper size weld cables with correct connectors (polarity is not important).

4 Voltmeter

5 Clamp-On Ammeter

Connect voltmeter and ammeter as shown, if not provided on generator.

Start engine and run for several minutes.

Set grid switches and then adjust generator A/V control so load equals 350 Amps at 40 volts.

Check generator and meters after first five minutes then every fifteen minutes to be sure generator is loaded properly.

☞ *Check oil level frequently during run-in; add oil if needed.*

After one hour (minimum), place A/V control in minimum position, then shut down grid to remove load. Run engine several minutes at no load.


▲ **Stop engine and let cool.**


6 Engine Exhaust Pipe

Repeat procedure if wetstacking is present.

# SECTION 10 – AUXILIARY POWER GUIDELINES

## 10-1. Selecting Equipment

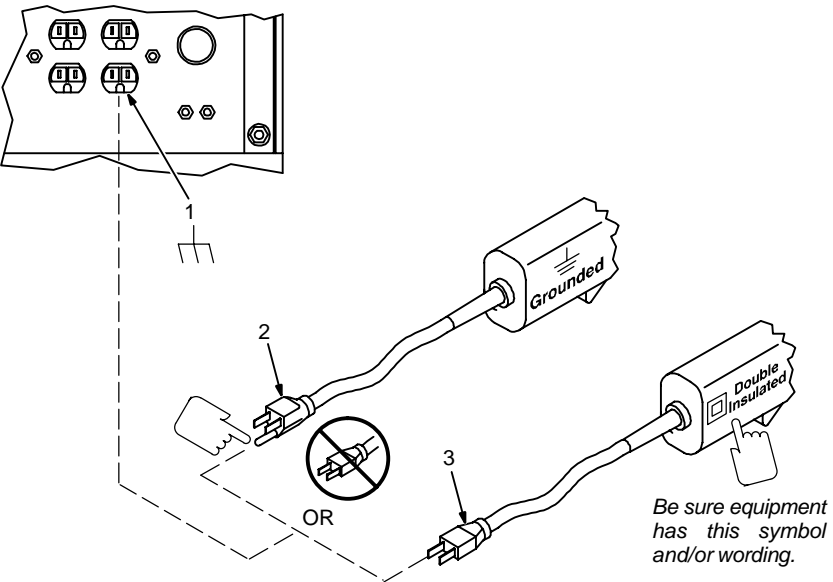


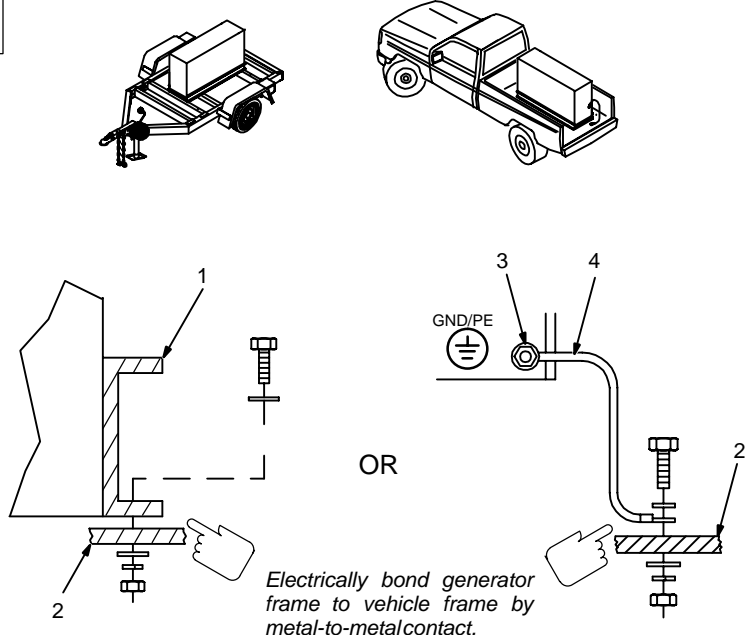


- 1 Auxiliary Power Receptacles – Neutral Bonded To Frame
- 2 3-Prong Plug From Case Grounded Equipment
- 3 2-Prong Plug From Double Insulated Equipment

aux\_pwr 2/99– Ref. ST-159 730 / ST-800 577

## 10-2. Grounding Generator To Truck Or Trailer Frame






- 1 Generator Base
- 2 Metal Vehicle Frame
- 3 Equipment Grounding Terminal
- 4 Grounding Cable

Use #10 AWG or larger insulated copper wire.

▲ If unit does not have GFCI receptacles, use GFCI-protected extension cord.

S-0854

### 10-3. Grounding When Supplying Building Systems

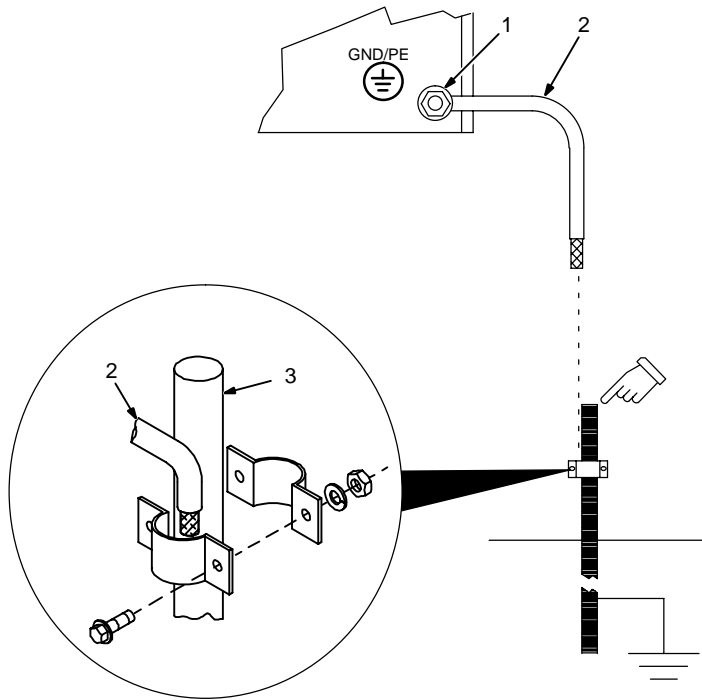


- 1 Equipment Grounding Terminal
  - 2 Grounding Cable  
Use #10 AWG or larger insulated copper wire.
  - 3 Ground Device
- ▲ **Ground generator to system earth ground if supplying power to a premises (home, shop, farm) wiring system.**

*Use ground device as stated in electrical codes.*

ST-800 576-B

### 10-4. How Much Power Does Equipment Require?

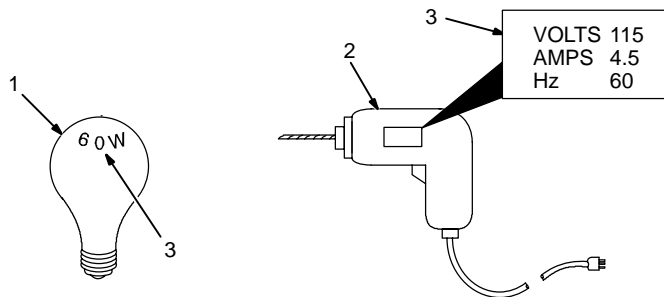

- 1 Resistive Load  
A light bulb is a resistive load and requires a constant amount of power.
- 2 Non-Resistive Load  
Equipment with a motor is a non-resistive load and requires approximately six times more power while starting the motor than when running (see Section 10-8).
- 3 Rating Data  
Rating shows volts and amperes, or watts required to run equipment.

**AMPERES x VOLTS = WATTS**

**EXAMPLE 1:** If a drill uses 4.5 amperes at 115 volts, calculate its running power requirement in watts.

$$4.5 \text{ A} \times 115 \text{ V} = 520 \text{ W}$$

The load applied by the drill is 520 watts.

**EXAMPLE 2:** If three 200 watt flood lamps are used with the drill from Example 1, add the individual loads to calculate total load.

$$(200 \text{ W} + 200 \text{ W} + 200 \text{ W}) + 520 \text{ W} = 1120 \text{ W}$$

The total load applied by the three flood lamps and drill is 1120 watts.

S-0623



## 10-5. Approximate Power Requirements For Industrial Motors

Industrial Motors	Rating	Starting Watts	Running Watts
Split Phase	1/8 HP	800	300
	1/6 HP	1225	500
	1/4 HP	1600	600
	1/3 HP	2100	700
	1/2 HP	3175	875
Capacitor Start-Induction Run	1/3 HP	2020	720
	1/2 HP	3075	975
	3/4 HP	4500	1400
	1 HP	6100	1600
	1-1/2 HP	8200	2200
	2 HP	10550	2850
	3 HP	15900	3900
	5 HP	23300	6800
Capacitor Start-Capacitor Run	1-1/2 HP	8100	2000
	5 HP	23300	6000
	7-1/2 HP	35000	8000
	10 HP	46700	10700
Fan Duty	1/8 HP	1000	400
	1/6 HP	1400	550
	1/4 HP	1850	650
	1/3 HP	2400	800
	1/2 HP	3500	1100


## 10-6. Approximate Power Requirements For Farm/Home Equipment

Farm/Home Equipment	Rating	Starting Watts	Running Watts
Stock Tank De-Icer		1000	1000
Grain Cleaner	1/4 HP	1650	650
Portable Conveyor	1/2 HP	3400	1000
Grain Elevator	3/4 HP	4400	1400
Milk Cooler		2900	1100
Milker (Vacuum Pump)	2 HP	10500	2800
FARM DUTY MOTORS	1/3 HP	1720	720
Std. (e.g. Conveyors,	1/2 HP	2575	975
Feed Augers, Air	3/4 HP	4500	1400
Compressors)	1 HP	6100	1600
	1-1/2 HP	8200	2200
	2 HP	10550	2850
	3 HP	15900	3900
	5 HP	23300	6800
High Torque (e.g. Barn	1-1/2 HP	8100	2000
Cleaners, Silo Unloaders,	5 HP	23300	6000
Silo Hoists, Bunk Feeders)	7-1/2 HP	35000	8000
	10 HP	46700	10700
3-1/2 cu. ft. Mixer	1/2 HP	3300	1000
High Pressure 1.8 Gal/Min	500 PSI	3150	950
Washer 2 gal/min	550 PSI	4500	1400
2 gal/min	700 PSI	6100	1600
Refrigerator or Freezer		3100	800
Shallow Well Pump	1/3 HP	2150	750
	1/2 HP	3100	1000
Sump Pump	1/3 HP	2100	800
	1/2 HP	3200	1050

## 10-7. Approximate Power Requirements For Contractor Equipment

Contractor	Rating	Starting Watts	Running Watts
Hand Drill	1/4 in	350	350
	3/8 in	400	400
	1/2 in	600	600
Circular Saw	6-1/2 in	500	500
	7-1/4 in	900	900
	8-1/4 in	1400	1400
Table Saw	9 in	4500	1500
	10 in	6300	1800
Band Saw	14 in	2500	1100
Bench Grinder	6 in	1720	720
	8 in	3900	1400
	10 in	5200	1600
Air Compressor	1/2 HP	3000	1000
	1 HP	6000	1500
	1-1/2 HP	8200	2200
	2 HP	10500	2800
Electric Chain Saw	1-1/2 HP, 12 in	1100	1100
	2 HP, 14 in	1100	1100
Electric Trimmer	Standard 9 in	350	350
	Heavy Duty 12 in	500	500
Electric Cultivator	1/3 HP	2100	700
Elec. Hedge Trimmer	18 in	400	400
Flood Lights	HID	125	100
	Metal Halide	313	250
	Mercury	1000	
	Sodium Vapor	1400	1000
Submersible Pump	400 gph	600	200
Centrifugal Pump	900 gph	900	500
Floor Polisher	3/4 HP, 16 in	4500	1400
	1 HP, 20 in	6100	1600
High Pressure Washer	1/2 HP	3150	950
	3/4 HP	4500	1400
	1 HP	6100	1600
55 gal Drum Mixer	1/4 HP	1900	700
Wet & Dry Vac	1.7 HP	900	900
	2-1/2 HP	1300	1300

## 10-8. Power Required To Start Motor

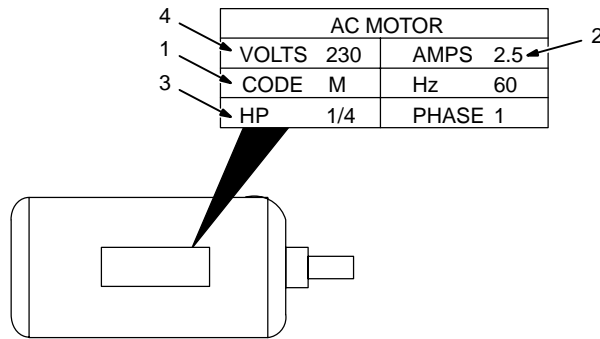

- 1 Motor Start Code
- 2 Running Amperage
- 3 Motor HP
- 4 Motor Voltage

To find starting amperage:

**Step 1:** Find code and use table to find kVA/HP. If code is not listed, multiply running amperage by six to find starting amperage.

**Step 2:** Find Motor HP and Volts.

**Step 3:** Determine starting amperage (see example).

Welding generator amperage output must be at least twice the motor's running amperage.

Single-Phase Induction Motor Starting Requirements

Motor Start Code	G	H	J	K	L	M	N	P
KVA/HP	6.3	7.1	8.0	9.0	10.0	11.2	12.5	14.0

$$\frac{\text{kVA/HP} \times \text{HP} \times 1000}{\text{VOLTS}} = \text{STARTING AMPERAGE}$$


**EXAMPLE:** Calculate the starting amperage required for a 230 V, 1/4 HP motor with a motor start code of M.

Volts = 230    HP = 1/4    Using Table, Code M results in kVA/HP = 11.2

$$\frac{11.2 \times 1/4 \times 1000}{230} = 12.2 \text{ A} \quad \text{Starting the motor requires 12.2 amperes.}$$

S-0624

## 10-9. How Much Power Can Generator Supply?

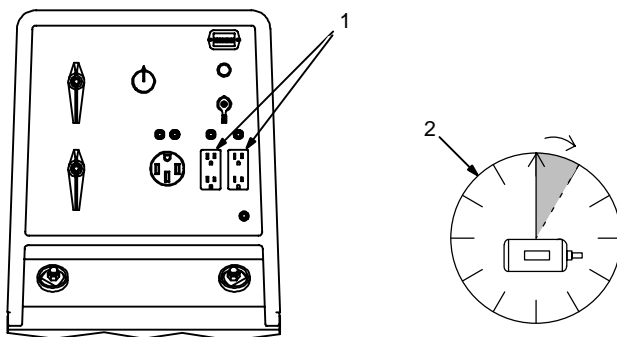

- 1 Limit Load To 90% Of Generator Output

Always start non-resistive (motor) loads in order from largest to smallest, and add resistive loads last.

- 2 5 Second Rule


If motor does not start within 5 seconds, turn off power to prevent motor damage. Motor requires more power than generator can supply.

Ref. ST-800 396-A / S-0625

# 10-10. Typical Connections To Supply Standby Power



☞ *Customer-supplied equipment is required if generator is to supply standby power during emergencies or power outages.*

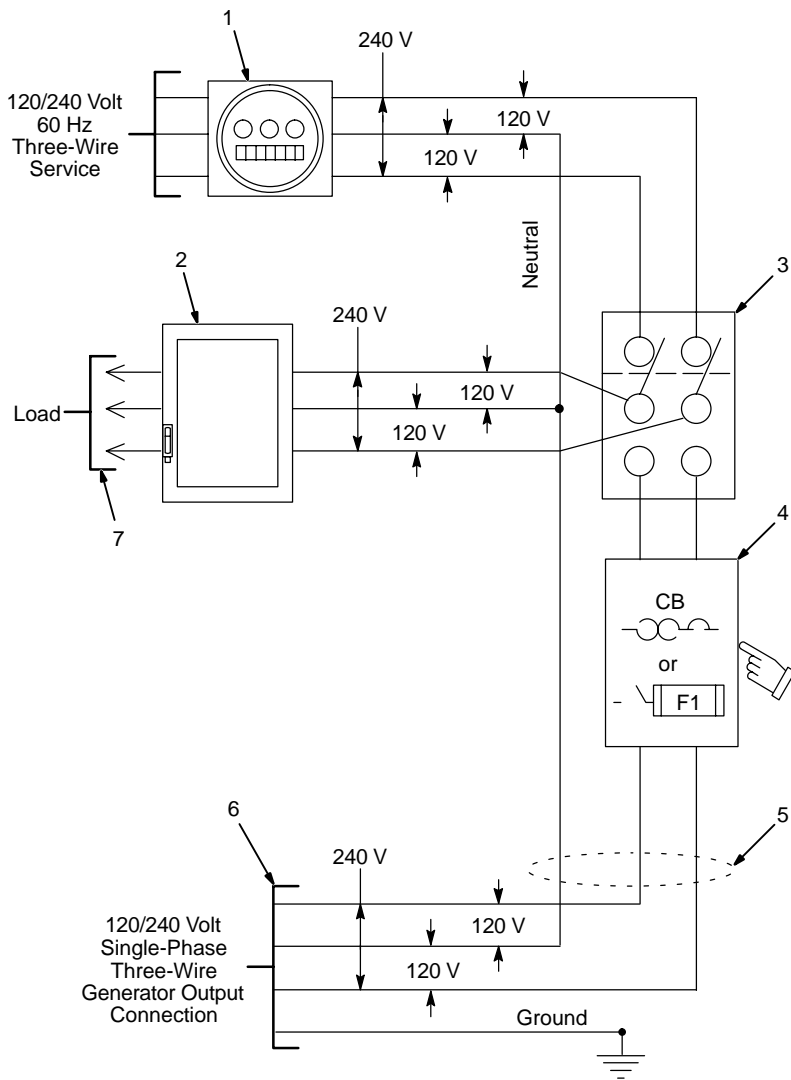

- 1 Power Company Service Meter
- 2 Main and Branch Overcurrent Protection
- 3 Double-Pole, Double-Throw Transfer Switch

Obtain and install correct switch. Switch rating must be same as or greater than the branch overcurrent protection.

- 4 Circuit Breakers or Fused Disconnect Switch

Obtain and install correct switch.

- 5 Extension Cord

Select as shown in Section 10-11.

- 6 Generator Connections

Connect terminals or plug of adequate amperage capacity to cord. Follow all applicable codes and safety practices.

Turn off or unplug all equipment connected to generator before starting or stopping engine. When starting or stopping, the engine has low speed which causes low voltage and frequency.

- 7 Load Connections

*Item 4 is not necessary if circuit protection is already present in welding generator auxiliary power output circuit.*

## 10-11. Selecting Extension Cord (Use Shortest Cord Possible)



### Cord Lengths for 120 Volt Loads

▲ If unit does not have GFCI receptacles, use GFCI-protected extension cord.

Current (Amperes)	Load (Watts)	Maximum Allowable Cord Length in ft (m) for Conductor Size (AWG)*					
		4	6	8	10	12	14
5	600			350 (106)	225 (68)	137 (42)	100 (30)
7	840		400 (122)	250 (76)	150 (46)	100 (30)	62 (19)
10	1200	400 (122)	275 (84)	175 (53)	112 (34)	62 (19)	50 (15)
15	1800	300 (91)	175 (53)	112 (34)	75 (23)	37 (11)	30 (9)
20	2400	225 (68)	137 (42)	87 (26)	50 (15)	30 (9)	
25	3000	175 (53)	112 (34)	62 (19)	37 (11)		
30	3600	150 (46)	87 (26)	50 (15)	37 (11)		
35	4200	125 (38)	75 (23)	50 (15)			
40	4800	112 (34)	62 (19)	37 (11)			
45	5400	100 (30)	62 (19)				
50	6000	87 (26)	50 (15)				

\*Conductor size is based on maximum 2% voltage drop

 
### Cord Lengths for 240 Volt Loads


▲ If unit does not have GFCI receptacles, use GFCI-protected extension cord.

Current (Amperes)	Load (Watts)	Maximum Allowable Cord Length in ft (m) for Conductor Size (AWG)*					
		4	6	8	10	12	14
5	1200			700 (213)	450 (137)	225 (84)	200 (61)
7	1680		800 (244)	500 (152)	300 (91)	200 (61)	125 (38)
10	2400	800 (244)	550 (168)	350 (107)	225 (69)	125 (38)	100 (31)
15	3600	600 (183)	350 (107)	225 (69)	150 (46)	75 (23)	60 (18)
20	4800	450 (137)	275 (84)	175 (53)	100 (31)	60 (18)	
25	6000	350 (107)	225 (69)	125 (38)	75 (23)		
30	7000	300 (91)	175 (53)	100 (31)	75 (23)		
35	8400	250 (76)	150 (46)	100 (31)			
40	9600	225 (69)	125 (38)	75 (23)			
45	10,800	200 (61)	125 (38)				
50	12,000	175 (53)	100 (31)				

\*Conductor size is based on maximum 2% voltage drop


# SECTION 11 – PARTS LIST

 Hardware is common and not available unless listed.

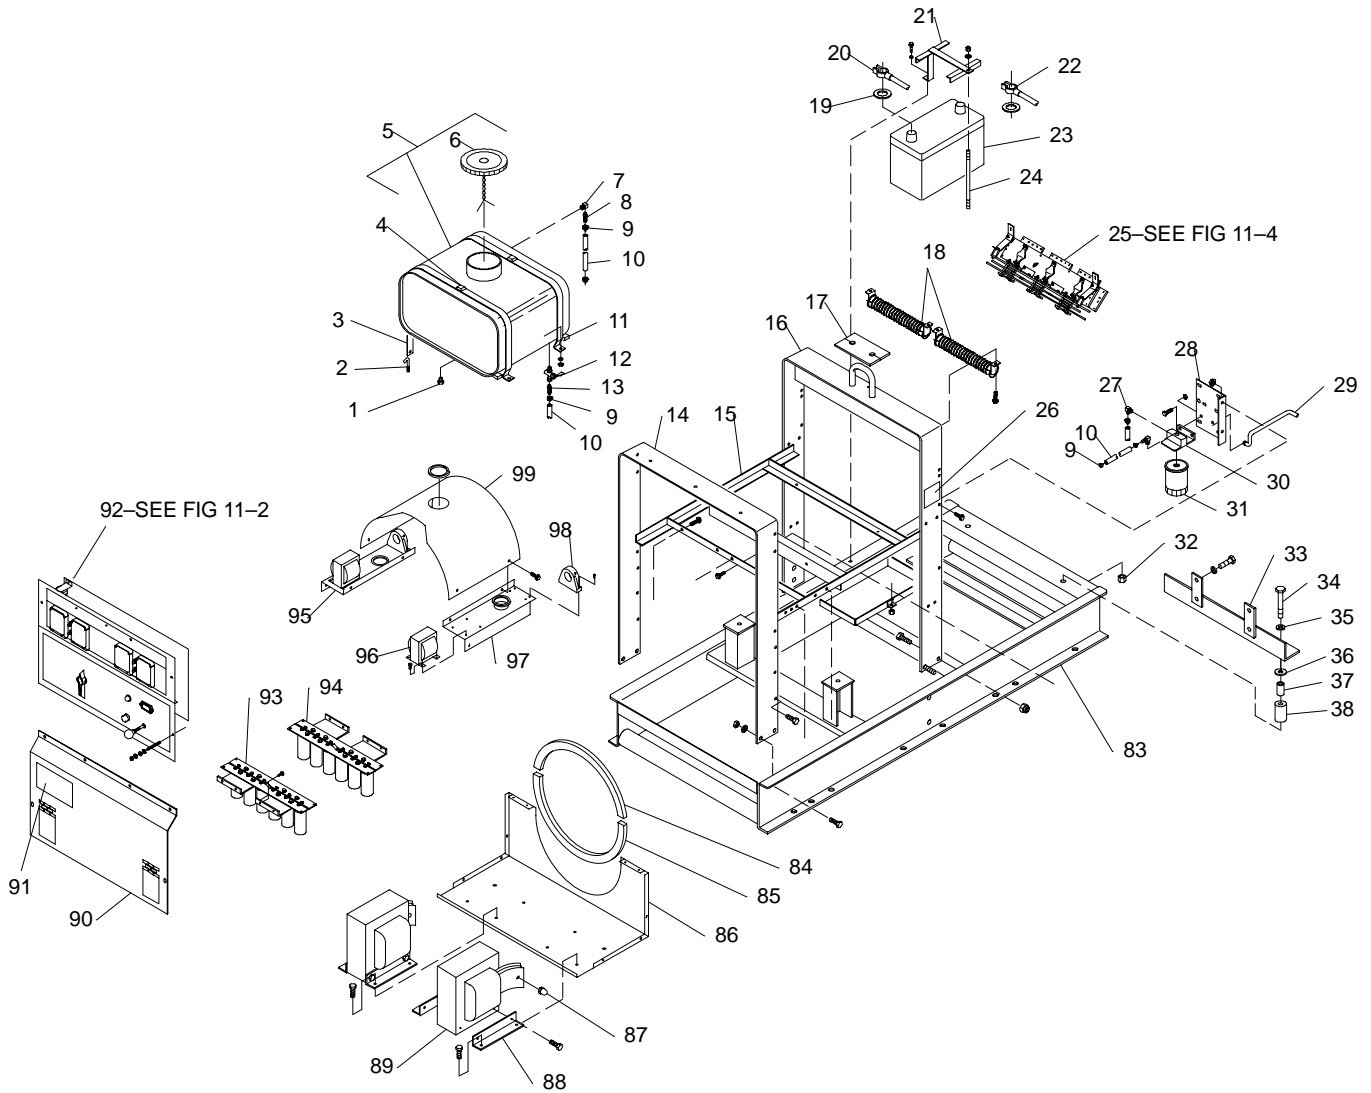

802 317-B

Figure 11-1. Main Assembly

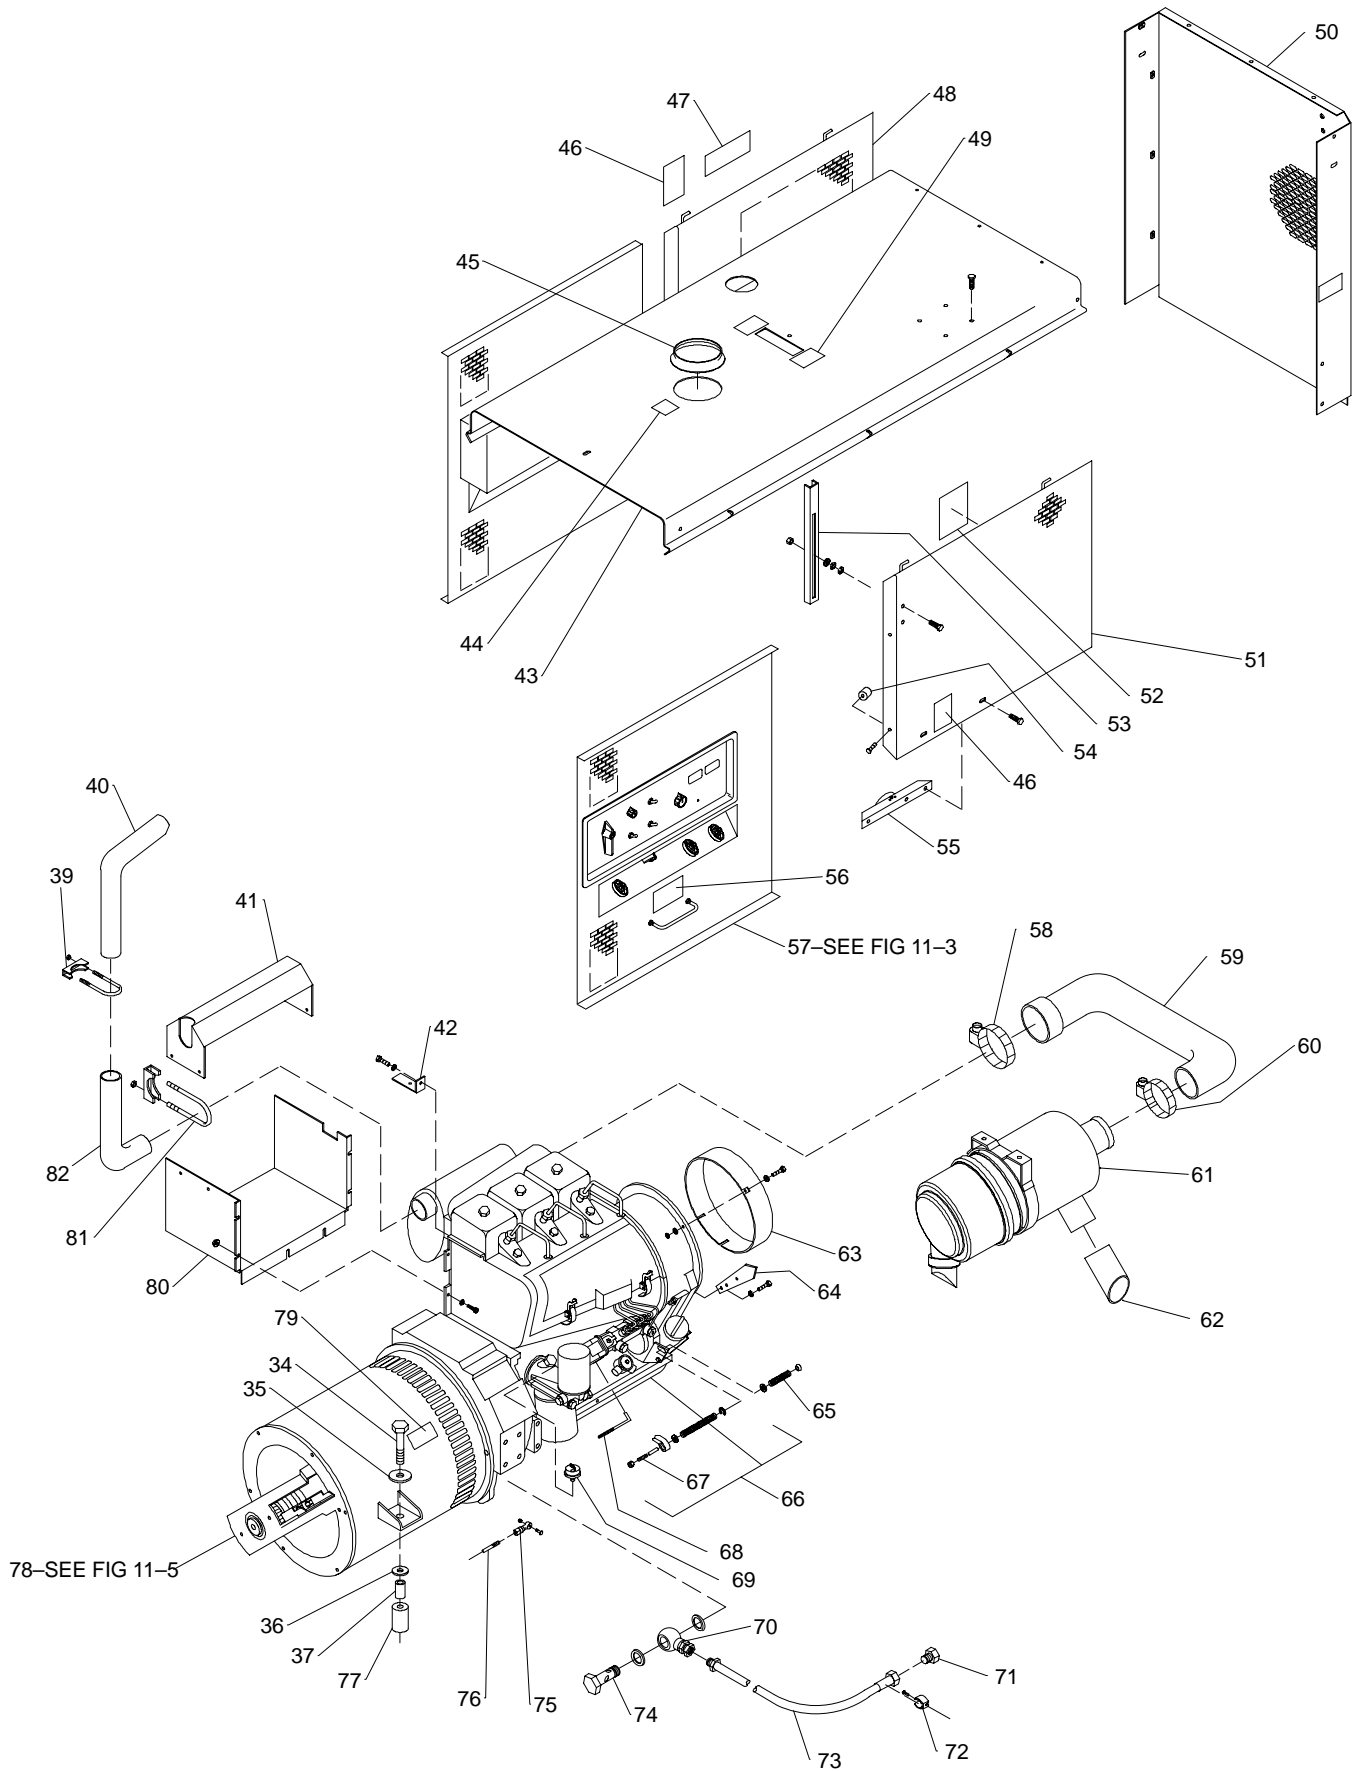

Item No.	Dia. Mkgs.	Part No.	Description	Quantity
<b>Figure 11-1. Main Assembly</b>				
1		605 288	FITTING, pipe galv plug sqhd .250NPT	1
2		070 010	BOLT, J stl .250-20 x 2.750 pld	2
3		088 696	STRAP, hold down fuel tank	2
4		134 771	PLUG, protective .640sq	2
5		184 675	TANK, fuel 22.3gal (consisting of)	1
6		182 022	CAP, fuel	1
7		020 185	FITTING, pipe brs elbow st 1/8NPT	1
8		053 525	FITTING, hose brs barbed M 5/16tbg x 1/8NPT	1
9		172 071	CLAMP, hose .520-.605clp dia slfng	6
10		134 835	HOSE, SAE .312 ID x .560 OD (order by ft)	9ft
11		097 507	STRIP, rbr adh back .125 x 1.000 x 20.500 60 duro	2
12		175 432	VALVE, shut-off fuel	1
13		039 599	FITTING, brs barbed M 5/16 tbg x 1/4 NPT	1
14		+048 227	UPRIGHT, base front	1
15		170 689	FRAME, mtg reactor and fuel tank	1
16		+170 617	UPRIGHT, base center	1
17		017 479	SEAL, weather lift eye	1
18	R3, R5	097 459	RESISTOR, WW fxd 375W 20 ohm	2
19		108 081	TERMINAL PROTECTOR, battery post mtg	2
20		182 276	CABLE, bat pos	1
21		118 644	HOLD DOWN, battery	1
22		032 453	CABLE, bat neg	1
23		012 724	BATTERY, stor 12V 750crk	1
24		010 460	STUD, stl .312-18 x 10.000	1
25	SR2, SR3	Figure 11-4	RECTIFIER ASSEMBLY	1
26		176 697	LABEL, fuel shut-off	1
27		145 282	FITTING, hose brs barbed elbow M 5/16tbg x 1/4NPT	2
28		083 859	BRACKET, mtg fuel filter	1
29		192 331	ROD, fuel shut-off	1
30		083 553	BASE, fuel filter w/adapter	1
31		062 342	SEPARATOR, fuel filter & water	1
32		135 205	NUT, 625-11 .94 hex .76H stl pld	8
33		116 707	SUPPORT, front engine	1
34		119 849	SCREW, 625-11 x 4.00 hexhd pln gr 5 pld	4
35		071 731	WASHER, flat stl .656 ID x 2.250 OD x .187thk	4
36		071 890	RETAINER, mount eng/gen	4
37		071 730	TUBING, stl .875 OD x 12ga wall x 2.500	4
38		072 848	MOUNT, eng/gen nprn .875 ID x 2.500 OD x 2.000 50 dur	2
39		010 875	CLAMP, muffler 2.000 dia	1
40		105 734	PIPE, muffler extension elbow 1.875 OD	1
41		176 232	BAFFLE, air muffler exhaust	1
42		048 216	BRACKET, mtg breather	1
43		+105 909	COVER, top	1
44		107 990	LABEL, use diesel fuel only	1
45		035 968	WASHER, flat rbr 3.625 ID x 5.875 OD x .062thk	1
46		158 610	LABEL, warning electric shock	2
47		168 385	LABEL, warning battery explosion	1
48		+192 313	DOOR, side LH	1
49		108 487	LABEL, warning falling equipment	2
50		117 257	PANEL, end engine	1
51		+192 314	DOOR, side RH	1
52		181 642	LABEL, diesel engine maintenance	1
53		004 130	BRACKET, support door	2
54		087 341	BUMPER, door 1.000 OD x .750 high	4
55		087 336	LATCH	2
56		027 434	LABEL, welder will not start by applying power to terminals	2
57		Figure 11-3	SIDE CONTROL PANELS	2
58		023 313	CLAMP, hose 3.250-3.000 clp dia slftg	1
59		201 547	HOSE, air cleaner w/spring	1
60		010 863	CLAMP, hose 2.062 - 3.000 clp slftg	1



Item No.	Dia. Mkgs.	Part No.	Description	Quantity
<b>Figure 11-1. Main Assembly (Continued)</b>				
61		189 764	AIR CLEANER, intake	1
		*192 938	FILTER, air element primary	1
		*◆192 939	FILTER, air element safety	1
		203 462	BRACKET, mtg air cleaner	1
62		165 785	HOSE, air cleaner 2.437 ID	1
63		048 213	BAFFLE, air intake	1
		194 467	WASHER, flat (for baffle) 6.25 ID x 11.50 OD x .62 T buna	1
64			LEVER, trip shutdown (included w/engine – see engine parts list)	1
65			SPRING (included w/engine – see engine parts list)	1
66		181 634	ENGINE, dsl electric (consisting of)	1
67		087 371	ROD, shutdown	1
		*064 677	FILTER, oil	1
		*062 342	FILTER, fuel primary	1
		*064 686	FILTER, fuel secondary	1
		*064 690	BELT, blower	1
68		070 661	ROD, speed control	1
69		151 969	SWITCH, pressure 4PSI N/O	1
70		◆047 361	FITTING, banjo	1
71		◆089 351	FITTING, pipe brs plug hexhd 1/2NPT	1
72		◆192 197	BRACKET, mounting	1
73		◆008 114	HOSE, oil w/fittings 17.500 lg	1
74		◆047 234	BOLT, banjo	1
		◆047 235	WASHER, oil seal copper	2
75		127 994	BALL JOINT, .250-28	1
76		162 740	STUD, stl .250-28 x 45.000	1
77		083 476	MOUNT, eng/gen nprn .875 ID x 2.500 OD x 2.000 60 dur	2
78		Figure 11-5	GENERATOR	1
79		013 367	LABEL, warning moving parts	2
80		176 236	BAFFLE, air outlet	1
81			CLAMP, muffler (included with engine)	1
82		105 733	PIPE, muffler extension elbow 1.875 OD	1
83		165 739	BASE	1
84		191 446	EXTRUSION, rubber w/adhesive 1.000 x 1.000 D (order by ft)	2.1ft
85		173 352	EXTRUSION, rubber clamp/bulb (order by ft)	2.4ft
86		192 305	TRAY, base	1
87		176 167	NUT, 250-20 acorn nylon	6
88		192 303	ANGLE, mtg stabilizer	4
89	Z1, Z2	192 296	STABILIZER	2
90		192 304	PANEL, front lower	1
91		134 792	LABEL, warning general precautionary	1
92		Figure 11-2	FRONT PANEL	1
93		194 021	CAPACITOR ASSEMBLY, (consisting of)	2
		162 817	BUS BAR, capacitor	2
	C15, C20	163 535	CAPACITOR, elctlt	6
	R4, R6	140 002	RESISTOR, WW fxd 10W	1
94		162 799	BRACKET, mtg capacitors	2
95		192 300	SHROUD, generator LH	1
96	T2, T4	192 371	TRANSFORMER, 115V pri 24VCT 8A w/leads	2
97		192 301	SHROUD, generator RH	1
98		168 829	TRANSDUCER, current 1000A module max open loop	2
99		192 299	SHROUD, generator center	1
		193 501	KIT, label (includes safety and informational labels)	1

+When ordering a component originally displaying a precautionary label, the label should also be ordered. Order label individually or as part of Label Kit 193 501

\*Recommended Spare Parts. ◆OPTIONAL

**To maintain the factory original performance of your equipment, use only Manufacturer's Suggested Replacement Parts. Model and serial number required when ordering parts from your local distributor.**

Hardware is common and not available unless listed.

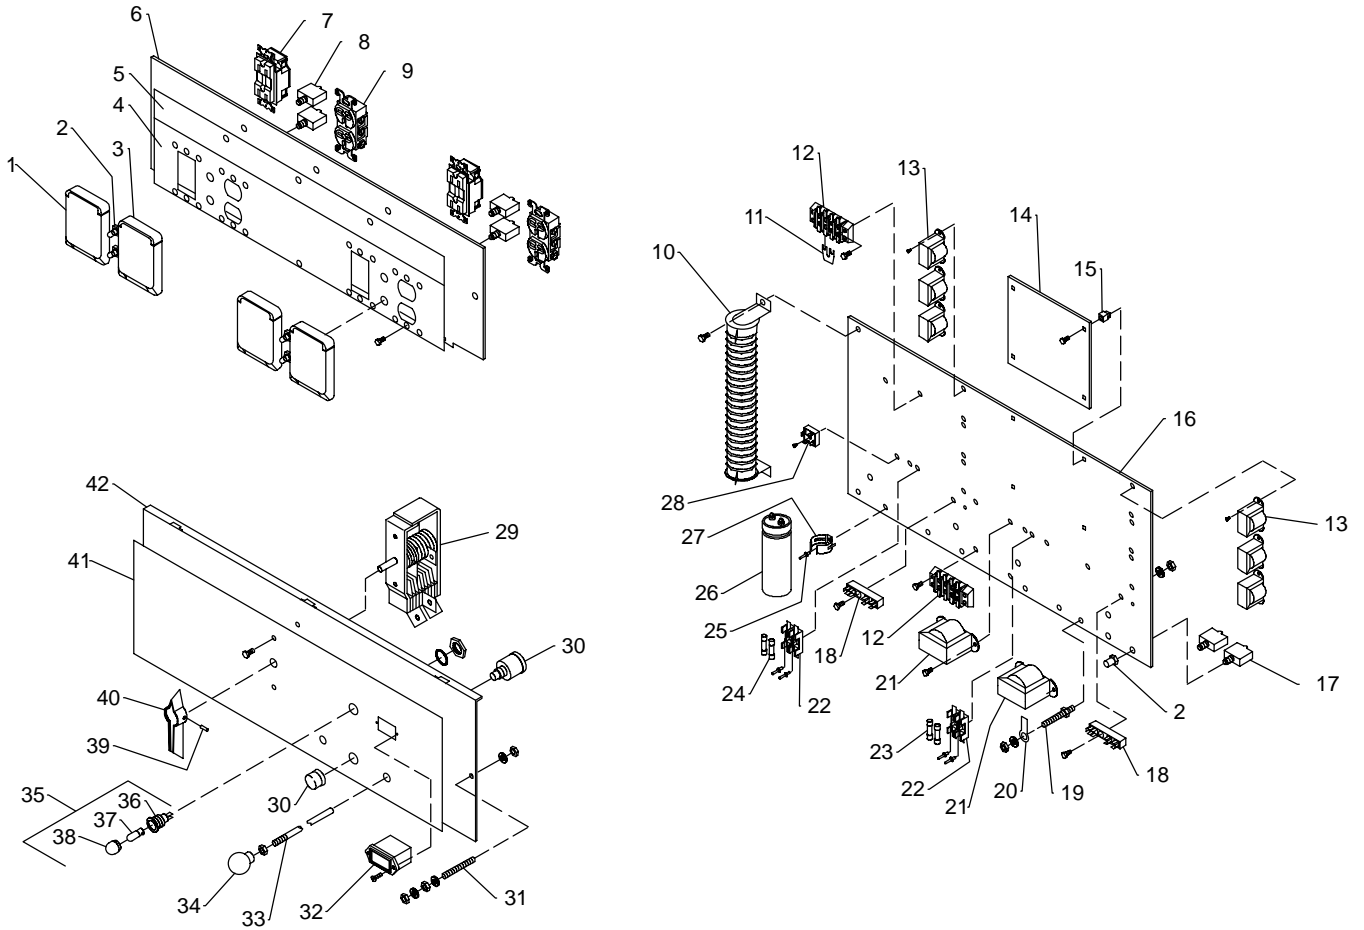



Figure 11-2. Front Panel


Item No.	Dia. Mkgs.	Part No.	Description	Quantity
<b>Figure 11-2. Front Panel (Figure 11-1 Item 92)</b>				
1		193 258	COVER, receptacle GFCI	2
2		190 323	BOOT, circuit breaker	6
3		193 259	COVER, receptacle duplex	2
4			PLATE, ident control rating (order by model and serial number)	1
5		190 375	NAMEPLATE	1
6		192 315	PANEL, aux power	1
		192 334	HARNES, wiring aux power panel (consisting of)	1
7	GFC1,2	151 981	RECEPTACLE, str dx grd 2P3W 15/20A 125V GFCI	2
8	CB1-4	093 996	CIRCUIT BREAKER, man reset 1P 20A 250VAC frict	4
9	RC1, RC2	193 257	RECEPTACLE, str dx grd 2P3W 15/20A 250V	2
10	R10	189 699	RESISTOR, WW tap 375W	1
11		038 620	LINK, jumper term blk 30A	2
12	TE1,2	038 621	BLOCK, term 30A 4 pole	2
13	T5 - 10	192 394	TRANSFORMER, control 6VA 120VCT	6
14	PC4	191 255	CIRCUIT CARD ASSEMBLY, field current regulator	1
15		083 147	GROMMET, SCR NO 8/10 panel	4
16		192 332	PANEL LAYOUT, mtg component	1
17	CB7,8	139 266	CIRCUIT BREAKER, man reset	2
18	1T,2T	190 210	BLOCK, term 5-3-3	2
19		083 030	STUD, brs .250-20 x 1	1
20		010 381	CONNECTOR, rectifier	1
21	T1, T3	192 367	TRANSFORMER, control	2
22		184 649	HOLDER, fuse mintr .250	2
23	F3,4	*012 643	FUSE, mintr gl slo-blo 1A, 250V	2
24	F1,2	*125 847	FUSE, mintr cer slo-blo 12A, 250V	2
25		182 130	RIVET, stl .125dia x .18	1
26	C1	087 110	CAPACITOR, elctlt 240	1
27		087 111	CLAMP, capacitor 1.375dia	1
28	SR1	035 704	RECTIFIER, integ bridge	1
		195 702	HARNES, wiring componet panel (consisting of)	1
		188 512	SEAL, wire univ 6P/S 3 row	3
		187 651	SEAL, wire univ 9P/S 3 row	3
	RC13,21	116 045	HOUSING, plugs and pins	2
	PLG17	135 275	HOUSING, plugs and pins	1
	RC19, PLG20	168 071	HOUSING, plugs and pins	1
29	S2	192 292	SWITCH, paralleling	1
		192 006	HARNES, engine (consisting of)	1
30	PB1	046 433	SWITCH, PB MC NO SPST 35A	1
31			STUD	1
32	HM	145 247	METER, hour 12-24VDC	1
33		162 740	STUD, stl .250-28 x 44.250	1
34		019 603	KNOB, ball	1
35	PL1	188 266	LIGHT, ind red lens 13V (consisting of)	1
36		082 788	HOLDER, light ind only	1
37		048 155	BULB, incand min	1
38		082 789	LENS, light ind red	1
39		010 647	PIN, spring CS .156 x 1.250	1
40		111 785	HANDLE, switch	1
41			PLATE, ident control rating (order by model and serial number)	1
42		192 316	PANEL, front control	1

+When ordering a component originally displaying a precautionary label, the label should also be ordered. Order label individually or as part of Label Kit 193 501

\*Recommended Spare Parts.

**To maintain the factory original performance of your equipment, use only Manufacturer's Suggested Replacement Parts. Model and serial number required when ordering parts from your local distributor.**

 Hardware is common and not available unless listed.

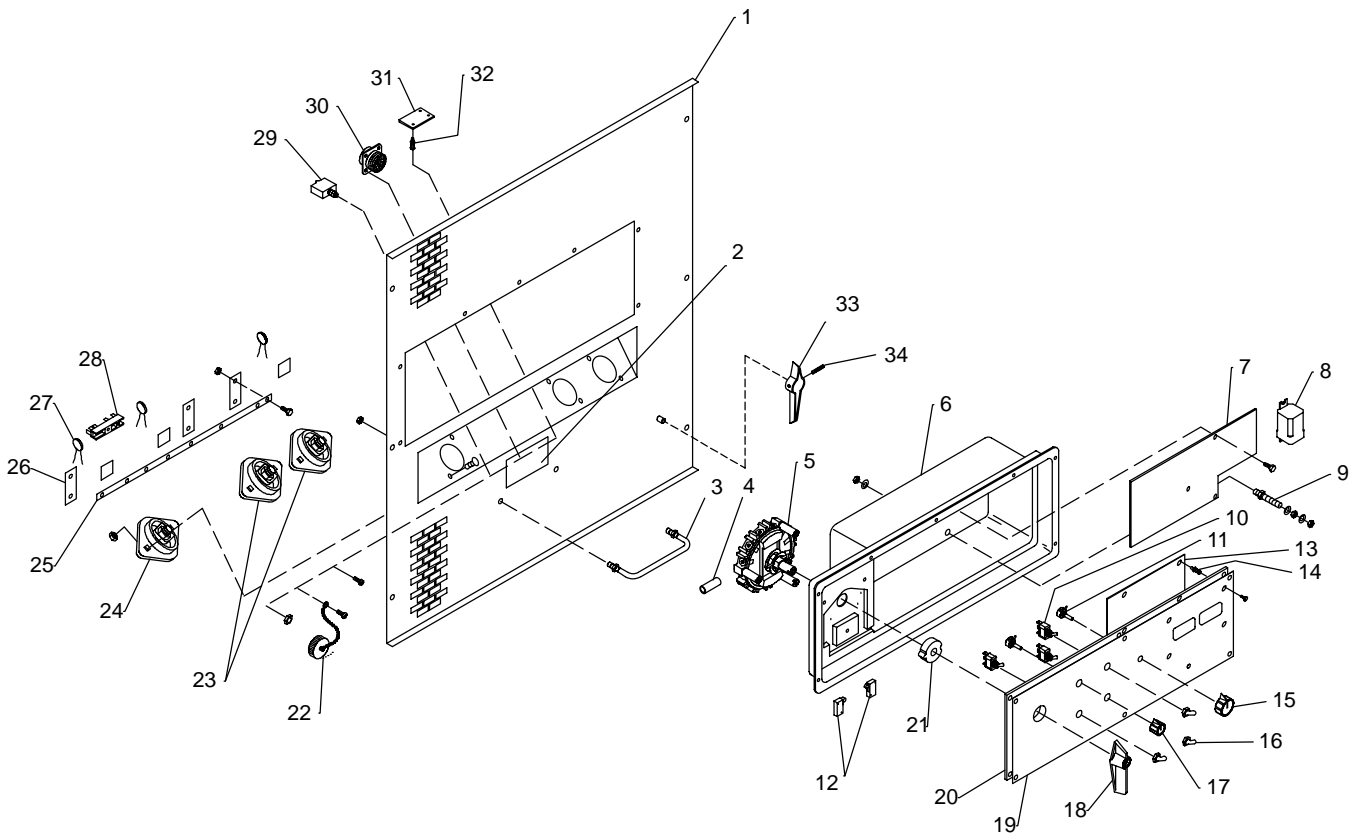

**Figure 11-3. Side Control Panels – Welder B (Right) Side Shown**

Item No.	Dia. Mkgs.	Part No.	Description	Quantity
----------	------------	----------	-------------	----------

**Figure 11-3. Side Control Panels (Figure 11-1 Item 57)**

1		+192 330	PANEL, side output RH	1
		+192 325	PANEL, side output LH	1
2		027 434	LABEL, welder will not start by applying power to terminals	2
3		010 828	HANDLE	2
4		086 074	TUBING, cop .540 ID x .123 wall x .562 – welder A (left) side only	1
5	S1, S9	163 557	SWITCH, mode	2
6		193 337	ELECTRONICS BOX	2
7	PC5	192 023	CIRCUIT CARD ASSEMBLY, welder B (right) side control	1
	PC1	192 026	CIRCUIT CARD ASSEMBLY, welder A (left) side control	1
		192 218	HARNESS, wiring control box welder B (right) (consisting of)	1
8	CR3	000 770	RELAY, encl 24VDC 3PDT 10A/120VAC 11 pin	1
9	GRD	185 011	STUD, primary board brs 10-32 x 1.592	1
10	S8,10,11	011 609	SWITCH, tgl SPDT 15A 125VAC on-none-on	3
11	R7,8	035 897	POTENTIOMETER, cp std slot 1t 2w 1k linear	2
12	LS3, 4	089 645	SWITCH, lim 11A 125V	2
	PLG27	131 056	CONNECTOR, housing plug pins and sockets	1
		187 651	SEAL, wire univ 9P/S 3 row	1
	PLG20	168 071	CONNECTOR, housing plug pins and sockets	1
	PLG9,26	148 439	CONNECTOR, housing plug pins and sockets	2
	PLG12	152 249	CONNECTOR, housing plug pins and sockets	1
	PLG10	153 501	CONNECTOR, housing plug pins and sockets	1
	RC22	168 845	CONNECTOR, housing plug pins and sockets	1
	RC23	168846	CONNECTOR, housing plug pins and sockets	1
	PLG8	169 240	CONNECTOR, housing plug pins and sockets	1
		192 208	HARNESS, wiring control box welder A (left) (consisting of)	1
	CR2	000 770	RELAY, encl 24VDC 3PDT 10A/120VAC 11 pin	1
	GRD	185 011	STUD, primary board brs 10-32 x 1.592	1
	S3,6,7	011 609	SWITCH, tgl SPDT 15A 125VAC on-none-on	3
	R1,8	035 897	POTENTIOMETER, cp std slot 1t 2w 1k linear	2
	LS1,2	089 645	SWITCH, lim 11A 125V	2
	PLG18	131 056	CONNECTOR, housing plug pins and sockets	1
		187 651	SEAL, wire univ 9P/S 3 row	1
	PLG19	168 071	CONNECTOR, housing plug pins and sockets	1
	PLG4,11	148 439	CONNECTOR, housing plug pins and sockets	2
	PLG5	152 249	CONNECTOR, housing plug pins and sockets	1
	PLG10	153 501	CONNECTOR, housing plug pins and sockets	1
	RC6	168 845	CONNECTOR, housing plug pins and sockets	1
	RC7	168846	CONNECTOR, housing plug pins and sockets	1
	PLG3	169 240	CONNECTOR, housing plug pins and sockets	1
13		178 130	CIRCUIT CARD ASSEMBLY, digital meter	2
14		165 316	STAND-OFF, No. 6-32 x .875 lg .312 hex nyl	8
		136 343	SCREW, K50 x 20 soc hd trx stl pld slftpg	8
15		097 924	KNOB, pointer 1.625dia x .250 ID	2
16		021 385	BOOT, toggle switch lever	6
17		097 922	KNOB, pointer .875dia x .250 ID	2
18		148 956	HANDLE, switch	2
19			NAMEPLATE (order by model and serial number)	2
20		162 815	PANEL, front upper	2
21		161 297	CAM, switch selector 2posn	2
22		170 391	CONNECTOR, circ protective cap	1
23		039 047	TERMINAL, pwr output red (consisting of)	4
		039 049	TERMINAL BOARD, red	1
		039 044	BUS BAR, term bd	1
		601 976	SCREW, 500-13 x 1.50 hexhd	1
		601 880	NUT, 500-13 x .75 hex .31H	1
24		039 046	TERMINAL, pwr output black (consisting of)	2
		039 045	TERMINAL BOARD, black	1
		039 044	BUS BAR, term bd	1
		601 976	SCREW, 500-13 x 1.50 hexhd	1

Item No.	Dia. Mkgs.	Part No.	Description	Quantity
<b>Figure 11-3. Side Control Panels (Continued)</b>				
.....		601 880	..... NUT, 500-13 x .75 hex .31H .....	1
.. 25		192 494	.. BUS BAR, connecting .....	2
.. 26		192 493	.. STAND-OFF, bus bar .....	6
.. 27	C2,4,5,21,22,23	136 736	.. CAPACITOR, cer disc .1uf 500VDC .....	6
.....		192 336	.. HARNESS, wiring unit welder B (right) (consisting of) .....	1
.. 28	4T	190 210	..... BLOCK, term 5-3-3 .....	1
.. 29	CB6	139 266	..... CIRCUIT BREAKER, man reset .....	1
.. 30	RC9	134 735	..... CONNECTOR, circ MS/CPC 14skt .....	1
.. 31	PC7	181 261	..... CIRCUIT CARD ASSEMBLY, filter .....	1
.....	PLG24	115 094	..... HOUSING, plug and sockets .....	1
.....	PLG22	168 847	..... HOUSING, plug pins and sockets .....	1
.....	PLG23	152 249	..... HOUSING, plug pins and sockets .....	1
.....	PLG21	135 556	..... HOUSING, plug pins and sockets .....	1
.....		188 512	..... SEAL, wire univ 6P/S 3 row .....	1
.....		192 337	.. HARNESS, wiring unit welder A (left) (consisting of) .....	1
.....	3T	190 210	..... BLOCK, term 5-3-3 .....	1
.....	CB5	139 266	..... CIRCUIT BREAKER, man reset .....	1
.....	RC8	134 735	..... CONNECTOR, circ MS/CPC 14skt .....	1
.....	PC3	181 261	..... CIRCUIT CARD ASSEMBLY, filter .....	1
.....	PLG14	115 094	..... HOUSING, plug and sockets .....	1
.....	PLG6	168 847	..... HOUSING, plug pins and sockets .....	1
.....	PLG3	152 249	..... HOUSING, plug pins and sockets .....	1
.....	PLG13	135 556	..... HOUSING, plug pins and sockets .....	1
.....		188 512	..... SEAL, wire univ 6P/S 3 row .....	1
.. 32		165 316	.. STAND-OFF, No. 6-32 x .875 lg .312 hex nyl .....	6
.....		145 217	.. SCREW, K40 x 12 pan hd phl stl pld slftpg .....	6
.. 33		◆059 773	.. HANDLE, switch .....	2
.. 34		◆010 647	.. PIN, spring .....	2
.....		◆091 067	.. SWITCH, polarity .....	2
.....		◆168 077	.. CONNECTOR, tw lk insul fem (Dinse-type) to output stud .....	6
.....		◆199 123	.. LABEL, component identification master polarity .....	1
.....		◆199 124	.. LABEL, component identification slave polarity .....	1

+When ordering a component originally displaying a precautionary label, the label should also be ordered. Order label individually or as part of Label Kit 193 501

\*Recommended Spare Parts.

◆OPTIONAL

**To maintain the factory original performance of your equipment, use only Manufacturer's Suggested Replacement Parts. Model and serial number required when ordering parts from your local distributor.**

Hardware is common and not available unless listed.

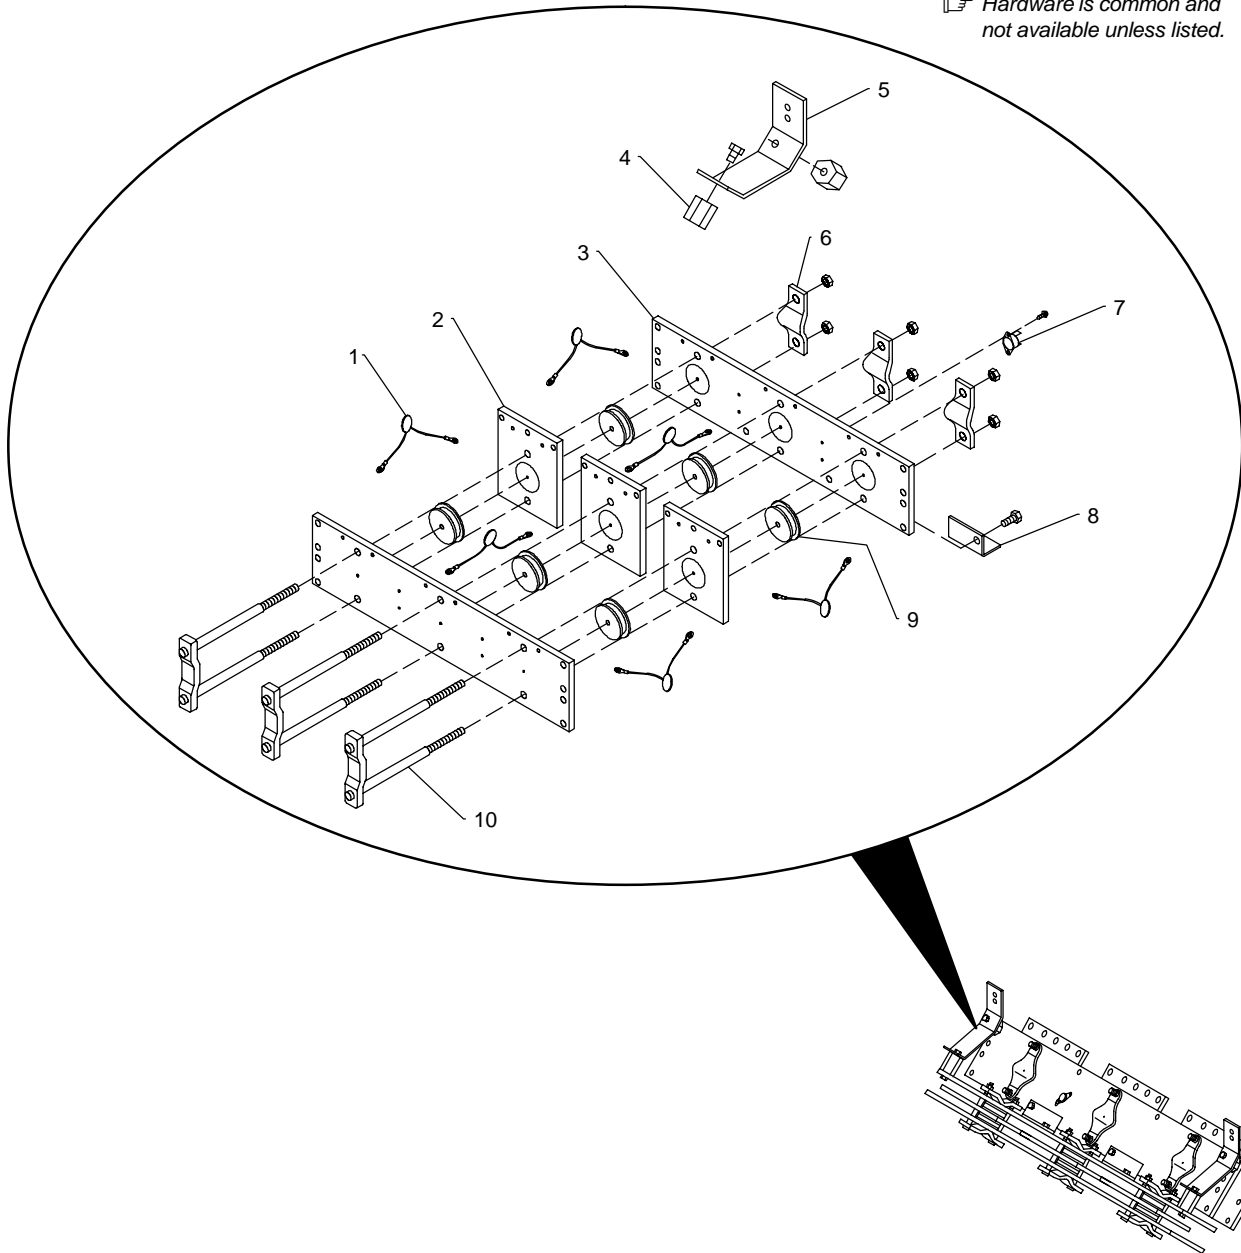


Figure 11-4. Rectifier Assembly

802 319


Item No.	Dia. Mkgs.	Part No.	Description	Quantity
----------	------------	----------	-------------	----------

**Figure 11-4. Rectifier (Figure 11-1 Item 25)**

.....		192 310	.. RECTIFIER ASSEMBLY (consisting of) .....	1
.. 1 ..	C7 - 12	048 420	.... CAPACITOR, cer disc .....	12
.. 2 .....		177 316	.... HEAT SINK, rect .....	6
.. 3 .....		177 317	.... HEAT SINK, rect .....	4
.. 4 .....		025 248	.... STAND-OFF, insul .250-20 .....	4
.. 5 .....		192 302	.... BRACKET, mtg rectifier .....	2
.. 6 .....		166 667	.... CLAMP, spring thyristor .....	6
.. 7 .	TP3, TP4	185 679	.... THERMOSTAT, NC open 211F C .....	2
.. 8 .....		192 308	.... ANGLE, support rectifier .....	2
.. 9 .	SCR1 - 6	148 091	.... THYRISTOR, SCR 865 .....	12
.. 10 .....		188 692	.... CLAMP, thyristor rectifier .....	6
.....	PLG1, PLG2	158 720	.... CONNECTOR & SOCKETS .....	1

**To maintain the factory original performance of your equipment, use only Manufacturer's Suggested Replacement Parts. Model and serial number required when ordering parts from your local distributor.**

☞ Hardware is common and not available unless listed.

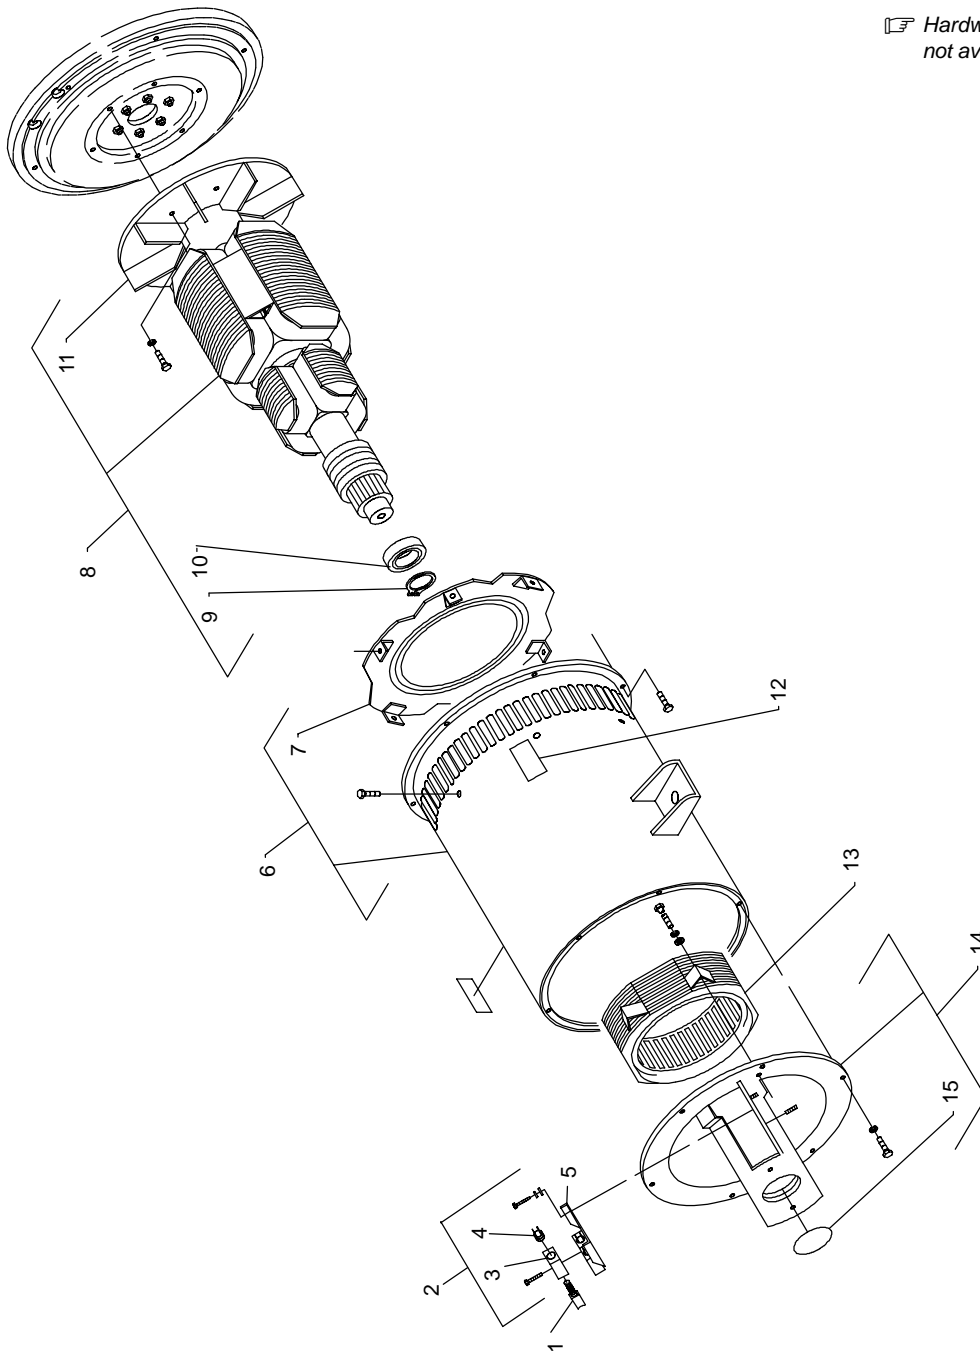

**Figure 11-5. Generator**

Ref. 048 456-E



Item No.	Dia. Mkgs.	Part No.	Description	Quantity
----------	------------	----------	-------------	----------

**Figure 11-5. Generator (Figure 11-1 Item 78)**

.. 1	..	*151 299	.. BRUSH, contact elect clrg .375 x .750	3
.. 2	..	188 387	.. BRUSHHOLDER/BRACKET ASSEMBLY, (consisting of)	1
.. 3	..	600 270	.. HOLDER, brush	3
.. 4	..	152 044	.. CAP, holder brush	3
.. 5	..	173 066	.. BRACKET, mtg brushholder	1
.. 6	..	+192 285	.. STATOR, generator (consisting of)	1
.. 7	..	039 207	.. BAFFLE, air generator	1
.. 8	..	192 286	.. ROTOR, generator (consisting of)	1
.. 9	..	024 617	.. RING, retaining external	1
.. 10	..	053 390	.. BEARING, ball	1
.. 11	..	083 748	.. FAN, rotor	1
.. 12	..	013 367	.. LABEL, warning moving parts	2
.. 13	..	195 704	.. STATOR, exciter aux pwr 120/240	1
.. 14	..	173 068	.. ENDBELL, generator (consisting of)	1
.. 15	..	143 220	.. O-RING 2.859ID x .139CS	1

+When ordering a component originally displaying a precautionary label, the label should also be ordered. Order label individually or as part of Label Kit 193 501

\*Recommended Spare Parts.

**To maintain the factory original performance of your equipment, use only Manufacturer's Suggested Replacement Parts. Model and serial number required when ordering parts from your local distributor.**



# HOBART 5/3/1 WARRANTY

Effective October 1, 1999

## Warranty Questions?

Call  
1-877-HOBART1  
for your local  
Hobart distributor.

## Service

You always get the fast, reliable response you need. Most replacement parts can be in your hands in 24 hours.

## Support

Need fast answers to the tough welding questions? Contact your distributor or call 1-800-332-3281. The expertise of the distributor and Hobart is there to help you, every step of the way.

5/3/1 WARRANTY applies to all Handler 135 and 175 models, Airforce 250, 250A, and 375 models, and Champion 10,000 models. This warranty also applies to the Beta-Mig 1800, Champ 1435, 2060, 8500 models, Ironman 250, Stickmate models, Tigmate models, and HSW-15 and HSW-25 spot welder models effective with Serial No. KK200262 and newer.

This limited warranty supersedes all previous Hobart warranties and is exclusive with no other guarantees or warranties expressed or implied.

Hobart products are serviced by Hobart or Miller Authorized Service Agencies.

LIMITED WARRANTY – Subject to the terms and conditions below, Hobart/Miller Electric Mfg. Co., Appleton, Wisconsin, warrants to its original retail purchaser that new Hobart equipment sold after the effective date of this limited warranty is free of defects in material and workmanship at the time it is shipped by Hobart. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.

Within the warranty periods listed below, Hobart/Miller will repair or replace any warranted parts or components that fail due to such defects in material or workmanship. Hobart/Miller must be notified in writing within thirty (30) days of such defect or failure, at which time Hobart/Miller will provide instructions on the warranty claim procedures to be followed.

Hobart/Miller shall honor warranty claims on warranted equipment listed below in the event of such a failure within the warranty time periods. All warranty time periods start on the date that the equipment was delivered to the original retail purchaser, or one year after the equipment is sent to a North American distributor or eighteen months after the equipment is sent to an International distributor.

1. 5 Years — Parts and Labor
  - \* Original Main Power Rectifiers
  - \* Transformers
  - \* Stabilizers
  - \* Reactors
  - \* Rotors, Stators and Brushes
2. 3 Years — Parts and Labor
  - \* Drive Systems
  - \* PC Boards
  - \* Idle Module
  - \* Solenoid Valves
  - \* Switches and Controls
  - \* Spot Welder Transformer
3. 1 Year — Parts and Labor (90 days for industrial use)
  - \* Motor-Driven Guns
  - \* MIG Guns/TIG Torches
  - \* Relays
  - \* Contactors
  - \* Regulators
  - \* Water Coolant Systems
  - \* HF Units
  - \* Running Gear/Trailers
  - \* Plasma Cutting Torches
  - \* Remote Controls
  - \* Replacement Parts (No labor)
  - \* Accessories
  - \* Field Options

(NOTE: Field options are covered for the remaining warranty period of the product they are installed in, or for a minimum of one year — whichever is greater.)

4. Engines, batteries and tires are warranted separately by the manufacturer.

Hobart's 5/3/1 Limited Warranty shall not apply to:

1. Consumable components such as contact tips, cutting nozzles, slip rings, drive rolls, gas diffusers, plasma torch tips and electrodes, weld cables, and tongs and tips, or parts that fail due to normal wear.
2. Items furnished by Hobart/Miller, but manufactured by others, such as engines or trade accessories. These items are covered by the manufacturer's warranty, if any.
3. Equipment that has been modified by any party other than Hobart/Miller, or equipment that has been improperly installed, improperly operated or misused based upon industry standards, or equipment which has not had reasonable and necessary maintenance, or equipment which has been used for operation outside of the specifications for the equipment.

HOBART PRODUCTS ARE INTENDED FOR PURCHASE AND USE BY COMMERCIAL/INDUSTRIAL USERS AND PERSONS TRAINED AND EXPERIENCED IN THE USE AND MAINTENANCE OF WELDING EQUIPMENT.

In the event of a warranty claim covered by this warranty, the exclusive remedies shall be, at Hobart's/Miller's option: (1) repair; or (2) replacement; or, where authorized in writing by Hobart/Miller in appropriate cases, (3) the reasonable cost of repair or replacement at an authorized Hobart/Miller service station; or (4) payment of or credit for the purchase price (less reasonable depreciation based upon actual use) upon return of the goods at customer's risk and expense. Hobart's/Miller's option of repair or replacement will be F.O.B., Factory at Appleton, Wisconsin, or F.O.B. at a Hobart/Miller authorized service facility as determined by Hobart/Miller. Therefore no compensation or reimbursement for transportation costs of any kind will be allowed.

TO THE EXTENT PERMITTED BY LAW, THE REMEDIES PROVIDED HEREIN ARE THE SOLE AND EXCLUSIVE REMEDIES. IN NO EVENT SHALL HOBART/MILLER BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING LOSS OF PROFIT), WHETHER BASED ON CONTRACT, TORT OR ANY OTHER LEGAL THEORY.

ANY EXPRESS WARRANTY NOT PROVIDED HEREIN AND ANY IMPLIED WARRANTY, GUARANTY OR REPRESENTATION AS TO PERFORMANCE, AND ANY REMEDY FOR BREACH OF CONTRACT TORT OR ANY OTHER LEGAL THEORY WHICH, BUT FOR THIS PROVISION, MIGHT ARISE BY IMPLICATION, OPERATION OF LAW, CUSTOM OF TRADE OR COURSE OF DEALING, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE, WITH RESPECT TO ANY AND ALL EQUIPMENT FURNISHED BY HOBART/MILLER IS EXCLUDED AND DISCLAIMED BY Hobart/Miller.

Some states in the U.S.A. do not allow limitations of how long an implied warranty lasts, or the exclusion of incidental, indirect, special or consequential damages, so the above limitation or exclusion may not apply to you. This warranty provides specific legal rights, and other rights may be available, but may vary from state to state.

In Canada, legislation in some provinces provides for certain additional warranties or remedies other than as stated herein, and to the extent that they may not be waived, the limitations and exclusions set out above may not apply. This Limited Warranty provides specific legal rights, and other rights may be available, but may vary from province to province.





# Owner's Record

Please complete and retain with your personal records.

Model Name

Serial/Style Number

Purchase Date

(Date which equipment was delivered to original customer.)

Distributor

Address

City

State

Zip



# Resources Available

Always provide Model Name and Serial/Style Number.

## To locate a Distributor, retail or service location:

Call 1-877-Hobart1 or visit our website at [www.HobartWelders.com](http://www.HobartWelders.com)

## For technical assistance:

Call 1-800-332-3281

## Contact your Distributor for:

Welding Supplies and Consumables

Options and Accessories

Personal Safety Equipment

Service and Repair

Replacement Parts

Training (Schools, Videos, Books)

Technical Manuals (Servicing Information and Parts)

Circuit Diagrams

Welding Process Handbooks

## Contact the Delivering Carrier for:

For assistance in filing or settling claims, contact your distributor and/or equipment manufacturer's Transportation Department.

File a claim for loss or damage during shipment.

## Hobart Welding Products

An Illinois Tool Works Company  
600 West Main Street  
Troy, OH 45373 USA

### For Technical Assistance:

Call 1-800-332-3281  
For Literature Or Nearest Dealer:  
Call 1-877-Hobart1